


INSTALLATION INSTRUCTIONS

SHOWER BASE WITH SEAT

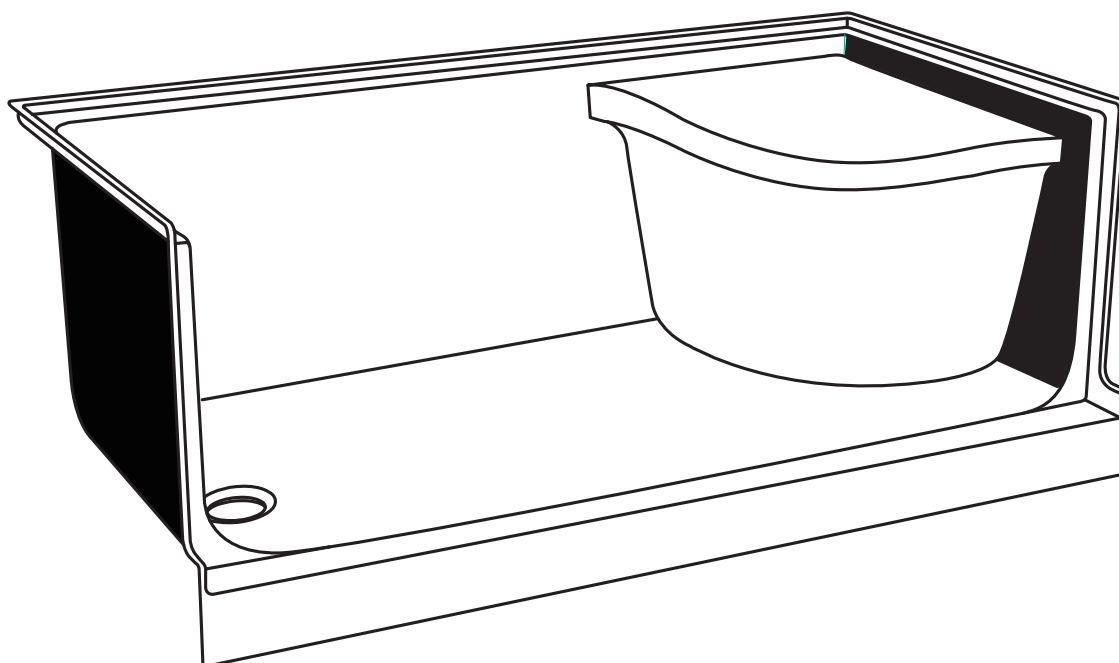

MODEL # SBS



READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT

INSTRUCTIONS THAT, IF IGNORED, COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

CAUTION!



TWO PERSON LIFT REQUIRED

TWO (2) PEOPLE ARE REQUIRED TO LIFT DURING ENTIRE INSTALLATION PROCESS OF THIS PRODUCT.



INSTALLATION OF THIS PRODUCT BY AN INEXPERIENCED INSTALLER MAY RESULT IN PERSONAL INJURY OR DEATH!



We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!
It is your responsibility to visit the website to download or contact customer service for the most updated version of the installation instructions.


We shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

- Limited warranty is void on any commercial installation.
- We are not responsible for local code compliance for this product.
- Building and plumbing codes may vary from state-to-state in accordance to your location.
- We are not responsible for providing any compliance certifications.
- We are not responsible to provide any type of certifications for this product.
- Under no circumstances we shall not be liable for any and all incidental damages sustained in connection with this product Neither manufacture, nor distributor, nor retailer is responsible for water damage or flood caused due to use of this product.
- Under no circumstances We shall not be liable for any and all fees, cost of installation/reinstallation/removal, subsequent damage or transportation in case of the product defect.

TOOLS REQUIRED




Safety glasses

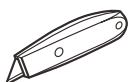


Utility knife



Pencil

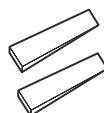


Shims

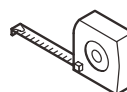


Tape measure




Drop cloth

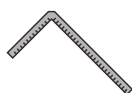


Square

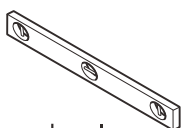


Level

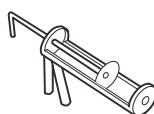

Caulk gun

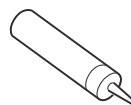

Adhesive

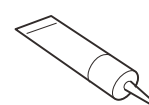

Sealant



Ø5 Drill bit



Drill




30mm screws



Extension bit



Phillips bit

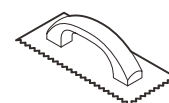

1/4" trowel

🌀 Lumber for additional wall studs if installing wall set; refer to wall set installation instructions

TIP: You may want to install insulation

REQUIREMENTS FOR A SUCCESSFUL INSTALLATION





DO NOT: Use drywall screws to secure flanges to wall studs.
Product damage will occur and will void the warranty.
Entire bottom must be in contact with a flat, level surface.

1. Read complete instructions before beginning installation.
2. Confirm that your model will fit in intended location and plumbing fixtures are located where required before beginning installation.
3. Walls and sub-floor must be solid, plumb, and square.
4. If installation surface is not level, use leveling compound or mortar bed for proper installation.
5. Use drop cloth to protect bathtub from damage during installation.
6. Two people recommended to install this product.

ROUGHING-IN


- * Rough plumbing must be installed before bathtub installation.

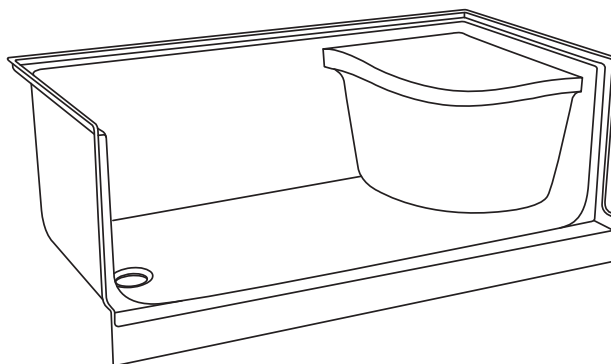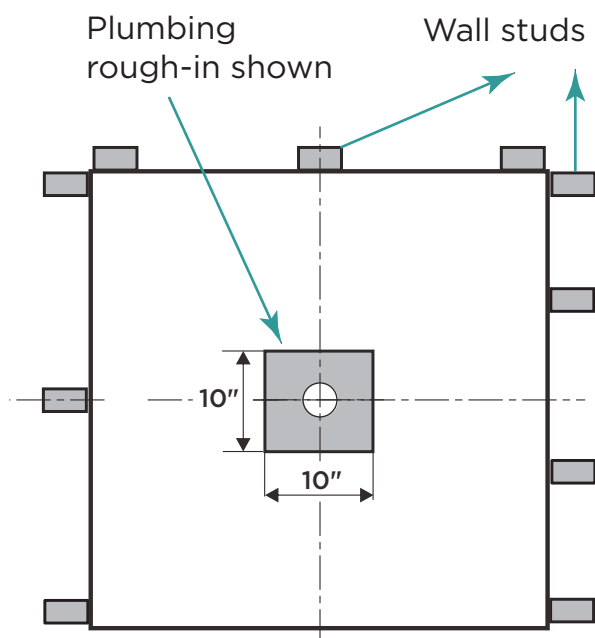


STEP 1

Framing

- Locate studs as required.
- Ensure rough-in dimensions are accurate.
- Mark the position of the underside of the deck by tracing a line onto the studs at the height indicated with a level.
- With the top of the stringer touching the traced line, attach it to the studs.
- Install drain components to the shower base following the instructions.

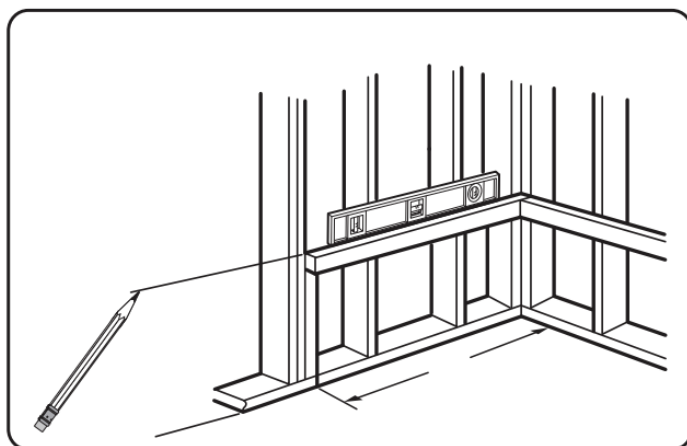

Studs must be level, plumb and square

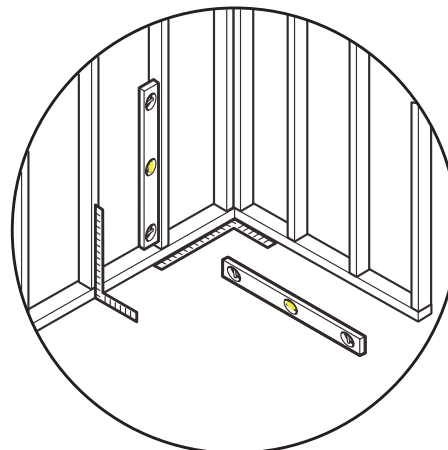


STEP 2

Drain Placement

- Put the water pipe of the shower tray into the drain outlet

Shower tray

Concrete Layer

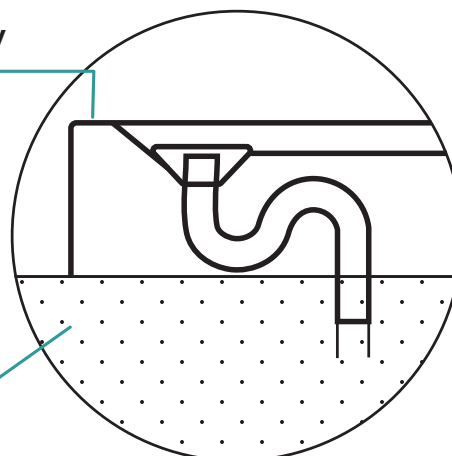


STEP 3

Support

- Mortar is recommended as bedding to support the bottom of the shower.
- Position the shower base within the recess until the rim is leveled against leveling stringers.
- Check level on all sides, shim as necessary.
- To secure the shower base to wood studs, use screws with flat washers or roofing nails above the flange of the shower base.
- To secure the shower base to steel studs, use 4" drywall screws and washers.
- Finish material such as tile or wallboard must be self-supporting if it touches the deck of the shower base.
- Flooring will be butted against the bottom of the shower base apron, also holding the shower base in place.
- The rim of the shower base MUST NOT support weight.
- Allow the bedding material to completely harden before applying weight to the rim or bottom of the shower base.

STANDARD RECESS INSTALLATION

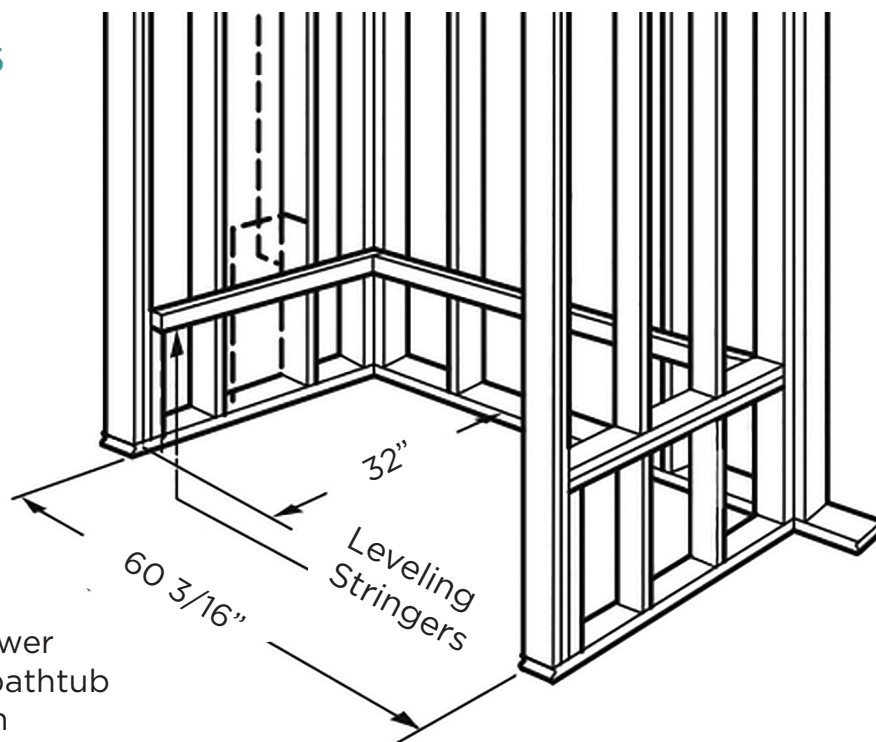


TIP:

Place drop cloth in Shower Base and stand inside bathtub to press it to floor when securing to wall studs.

STEP 4


Securing the Base

Wood Studs

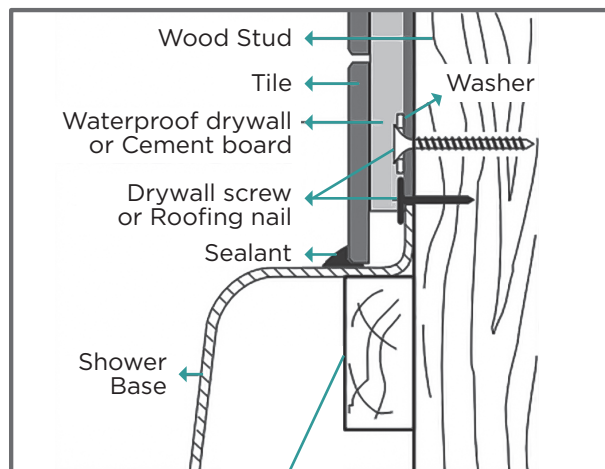

1" x 3" Wood Stringer (full length)

Metal Studs

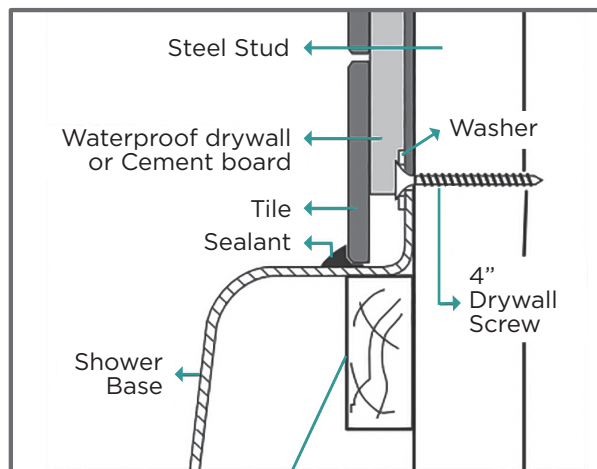

1" x 3" Wood Stringer (full length)

STEP 5

Connect Drain

- Using recommended drain opening, connect shower base drain to waste line.
- Tighten all drain joints securely.



Plumber's putty will degrade Base material.
Do not use plumber's putty to seal between drain and base.
Use latex/acrylic sealant or a gasket.

RETAIN THIS INSTALLATION MANUAL
FOR FUTURE REFERENCE.

Thank you for choosing FINE FIXTURES.