



Vanity Top Installation

Tools Required

- Level
- Caulking gun
- Color matching caulk
- Shims

Installation

- Check cabinet for level.
- If cabinet is out of level, and adjustment is possible, level cabinet. Once cabinet is level apply a small amount of caulk on each corner of cabinet.
- Place vanity top on cabinet and adjust spacing around overhang of the vanity top.
- Place level on the vanity top to check for level. Shim as necessary. Apply a bead of caulking anywhere the vanity top comes in contact with walls or cabinet.
- Remove excess caulking.
- If a ramp sink is used, attach supplied drain tube to the threaded insert under the vanity top.(As shown in Fig. 2)
- Install faucets and drain as per the manufacturers instructions.

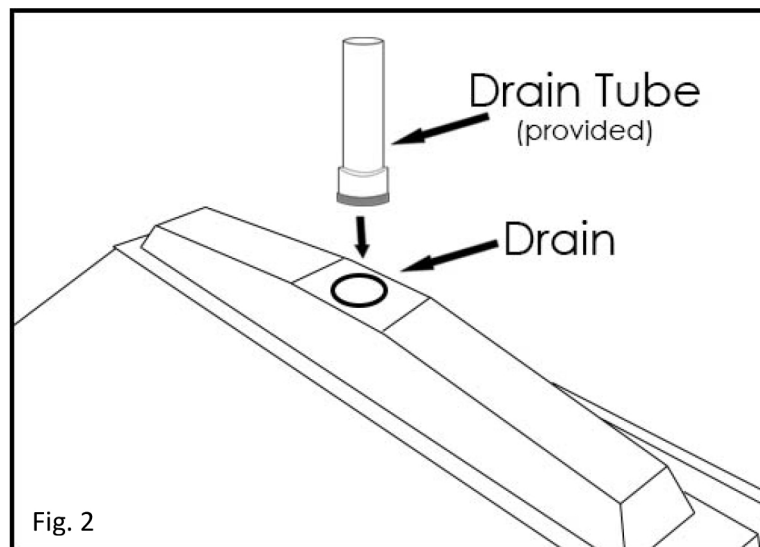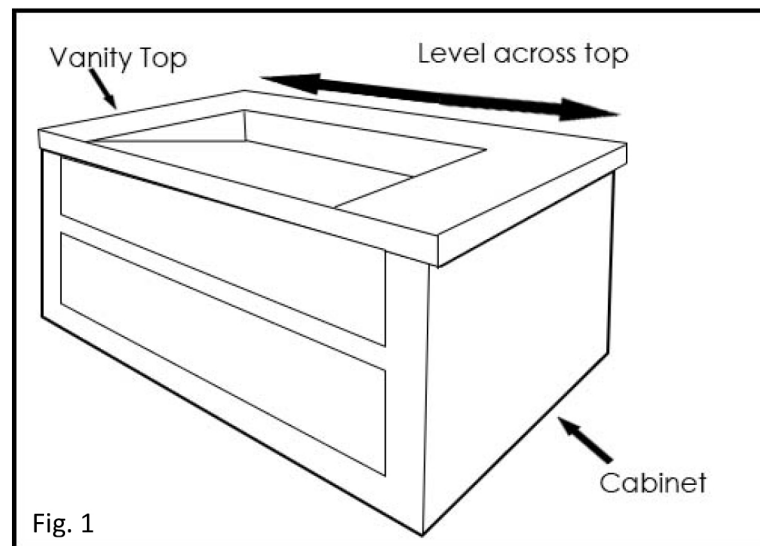

MARBLE-LITE

9920 NW 79th AVE

Hialeah Gardens, FL 33016

305-557-8766

www.marblelite.com