


Assembly Instruction

INSTRUCTION DE MONTAGE MONTAGEANLEITUNG SAMLEVEJLEDNING

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING

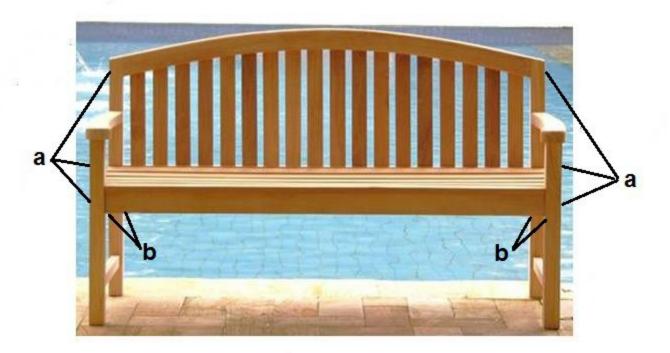

Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly Code

SST39

HARDWARE

a. 🗀

F-Screw (6 Pcs)

b. @______

Screw (4 Pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section