

# SIGNATURE SERIES

by RONBOW

## INSTALLATION AND CARE GUIDE

WATERSPACE VANITY AND LEG BASE

E083610

E083620

E083630 | E088130

Model : E083610  
E083620  
E083630 | E088130

Designed By: **JOAN LAO** | SPAIN

## PRE-INSTALLATION

### Tools Required



### Materials Included

E083610 | E083620 | E083630

- 4 anchors
- 4 long screws
- 1 pair of wall cleats
- 4 leg levelers

E088130

- 1 metal base
- 4 metal legs
- 4 leg levelers
- 8 short screws

### Materials Required

- 1 2x6 beam cut to size

Model : E083610  
E083620  
E083630 | E088130

Designed By: JOAN LAO | SPAIN

## INSTALLATION - Wall Hung

**Step 1:** Determine the ideal location of your new vanity.

Check if the location has at least two studs. Front notch the studs and install a 2x6 beam for stability of the vanity.

**See Figure 1.**

**Step 2:** Place the wall brackets on the drywall and mark the location for the long screws.

Drill pilot holes in the dry wall and secure the vanity brackets.

**See Figure 2.**

**Step 3:** Place the screw caps over the long screws.

Verify the brackets are level.


**Step 4:** Slide the vanity over the brackets.

Verify the vanity is level.


Secure the bracket to the vanity using the small screws.

**See Figure 3.**


**Figure 1.**

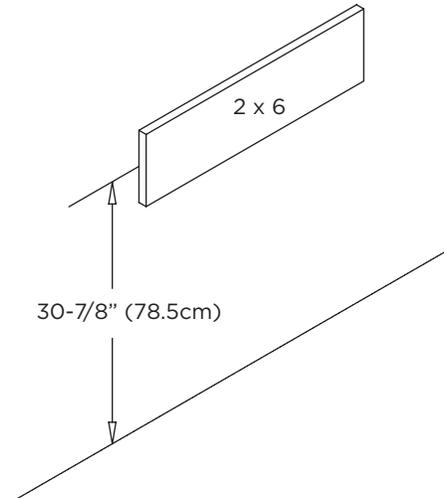

**Figure 2.**

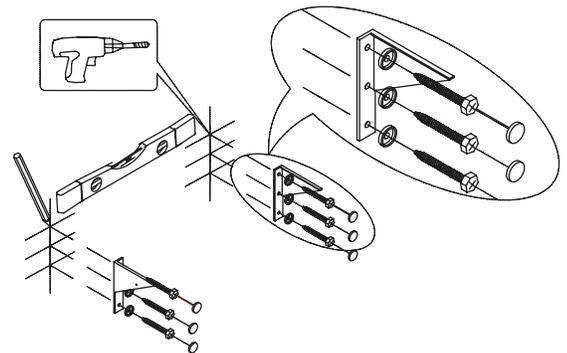

**Figure 3.**

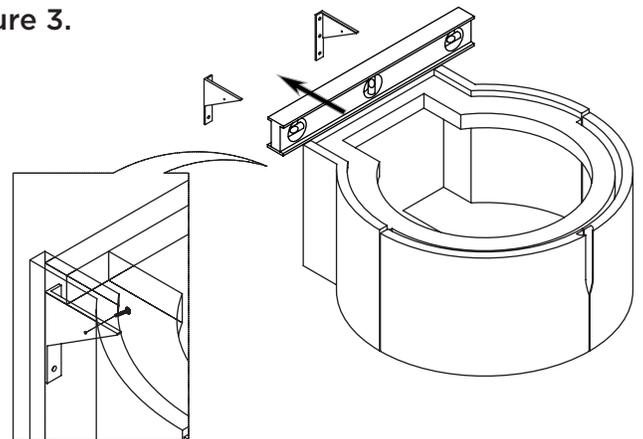

Model : E083610  
E083620  
E083630 | E088130

Designed By: JOAN LAO | SPAIN

## INSTALLATION - FLOOR STANDING


**NOTE:** If you have purchased the optional metal legs to match E083630, then follow the instructions below to install the legs.

**Step 1:** Attach the metal legs to the metal base.

Attach the metal leg levelers to each leg.

**See Figure 4.**

**Figure 4.**

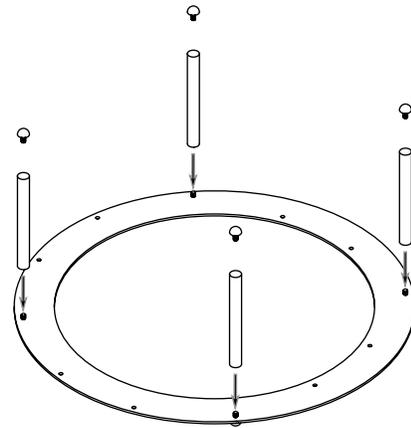


**Step 2:** Carefully lay the vanity on its back and install the metal base.

Adjust leg levelers if needed.

**See Figure 5.**

**Figure 5.**

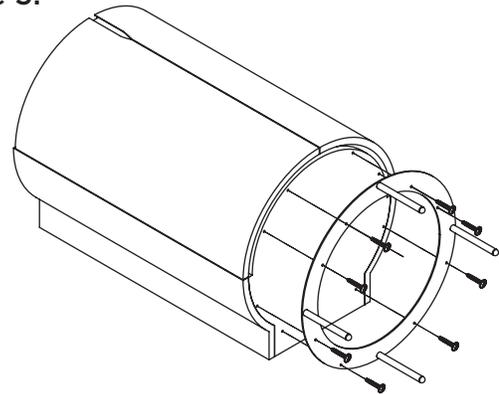

Model : E083610  
E083620  
E083630 | E088130

Designed By: JOAN LAO | SPAIN

## INSTALLING THE SINKTOP

**Step 1:** Clean the top surface of the vanity with a clean damp cloth.

Apply a thin bead of silicone around the top surface.

**See Figure 6.**


**Step 2:** Place the sinktop on the vanity.

Clean any excess silicone immediately.

Follow the directions on the silicone to allow for ample drying time.

**Step 3:** Install the faucet and drain per manufacturers instructions.

**Figure 6.**

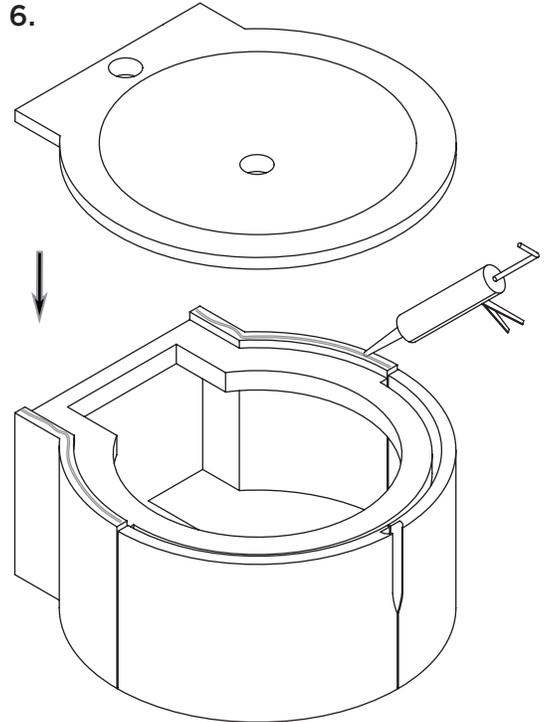

Model : E083610  
E083620  
E083630 | E088130

Designed By: JOAN LAO | SPAIN


## ADJUST DOOR HINGE

### Side to Side

Locate the screw nearest the hinge cup and rotate clockwise or counter-clockwise to move the door from side to side.

See Figure 7.

Figure 7.

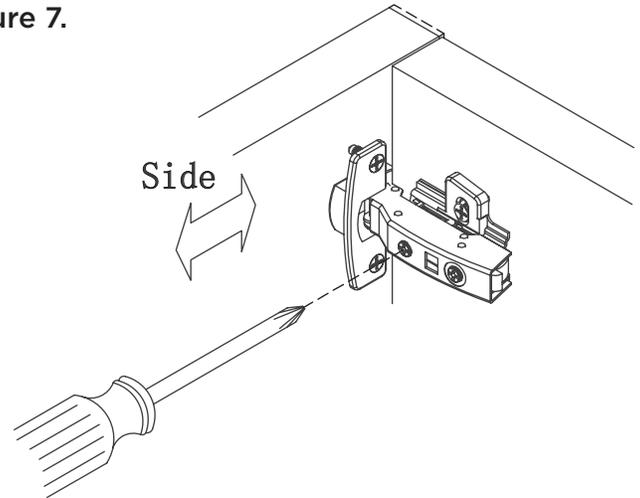


### Front to Back

Locate the screw furthest away from the hinge cup and turn the screw clockwise or counter-clockwise to move the door from front to back.

See Figure 8.

Figure 8.

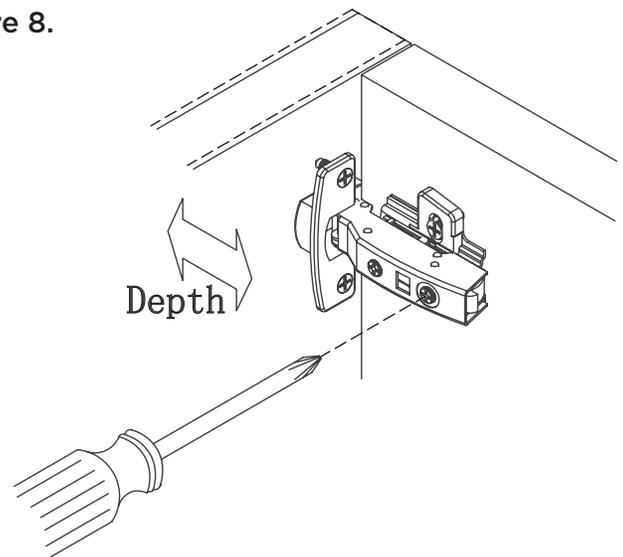


### Top to Bottom

Locate the screw pictured in Figure 6. Turn the screw clockwise or counter-clockwise to move the door from top to bottom.

See Figure 9.

Figure 9.

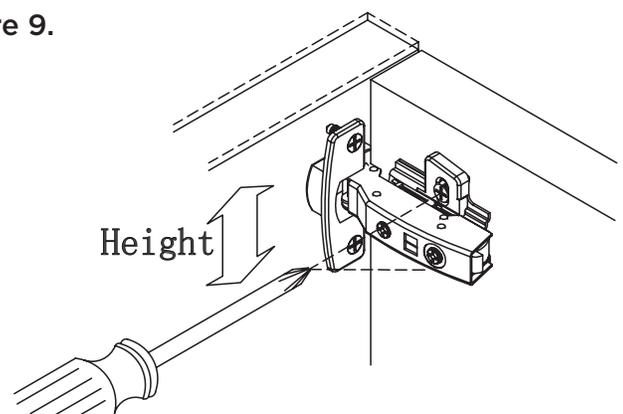

**NOTE:** When adjusting the door hinges keep in mind to adjust the other hinges.

**Model :** E083610  
E083620  
E083630 | E088130

Designed By: **JOAN LAO** | SPAIN

## PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

### General Care Tips

- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at [www.ronbow.com](http://www.ronbow.com) or contact the Customer Service Department at (510) 713-1188.

### Wood Surfaces

- If a spill occurs, clean and dry the surface immediately as liquid can soak through the surface and cause greater damage.
- Do not place in direct sunlight. Exposure to sunlight may affect the appearance of your vanity, and the finish will eventually crack.
- Keep away from direct sources of extreme temperatures as heat, cold or moisture from humidity. Color changes, or blemishes in the wood can occur if recommended care of is not met. Try to avoid these extremes.
- Most wood surfaces can be cleaned, or dusted, with any commercial wood cleaning product. For general cleaning, use a non-abrasive, or lint-free cloth while dusting along the wood grain to preserve the wood's characteristics.

### Recommended Products

- Pledge Orange Oil, or similar
- Orange-Glo Wood Cleaner

**DISCLAIMERS:** Wood naturally ages, darkens and changes color over time due to several environmental conditions that may cause materials to vary from their original color and/or to warp, split or crack. These variations are considered to be the nature of the material in relation to their environmental exposure and may be significant over a long period of time. The effectiveness of cleaning Ronbow product is dependant on various factors that include sunlight, smoke, moisture, household cleaners and/or amount of cleaning product used over time. Ronbow cannot guarantee that the above Product Care & Maintenance methods will effectively clean your product.

# RONBOW

40650 Encyclopedia Circle  
Fremont, CA 94538

T 510.713.1188  
F 510.657.9388

[ronbow.eu](http://ronbow.eu) | [ronbow.com](http://ronbow.com)