



# TRIPLE CUBE PLUS




## Included




24 Pins




6 Vertical zBoards  
adhesive strips on 2 edges



3 Backer Boards  
thin and has no adhesive



2 Horizontal zBoards  
with groove on 1 side




2 Middle zBoards  
with grooves on 2 sides



**WARNING: CHOKING HAZARD**  
Small parts NOT for children under 3 years

## Important

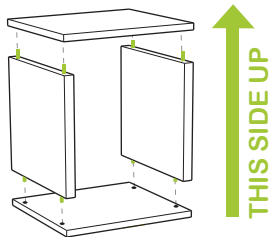

**Tip** Start assembly from bottom to top.


**DO NOT** place unit on its side or back as it will compromise its structural integrity.




- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only

- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry

**1** Fit backboard into horizontal zBoard groove.

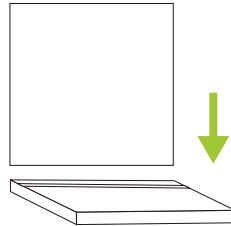


**2** Carefully remove the 3M protective layer from adhesive.




**3** Place alignment pins in vertical zBoards.




**4** Arrange vertical zBoard with grooves facing backboard as shown.

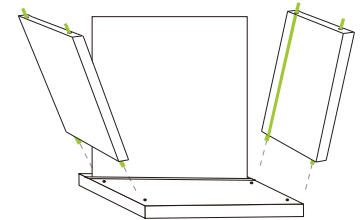


**5** Align vertical zBoard to backboard.

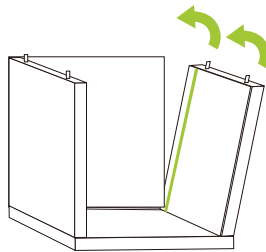


**6** Align middle zBoard (groove on 2 sides).

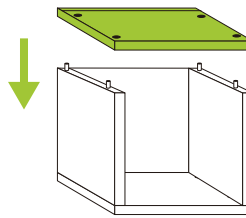

**7** Repeat steps 1 - 6 for next tier.

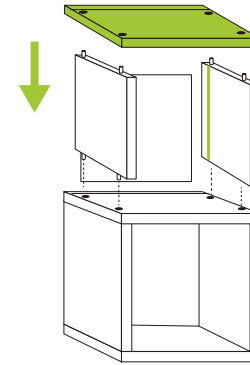

**8** Finish last tier then align horizontal zBoard and press firmly to secure unit together. Visit links below for more details.

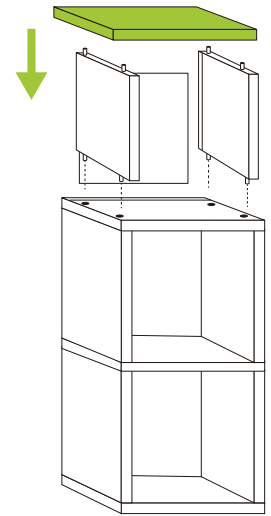

Enjoy building possibilities!



**Watch and Assemble** [www.waybasics.com/help-triple-cube-plus](http://www.waybasics.com/help-triple-cube-plus)



**Help and Comments** [www.waybasics.com/contact](http://www.waybasics.com/contact)



**Share and Win** [www.waybasics.com/share](http://www.waybasics.com/share)