






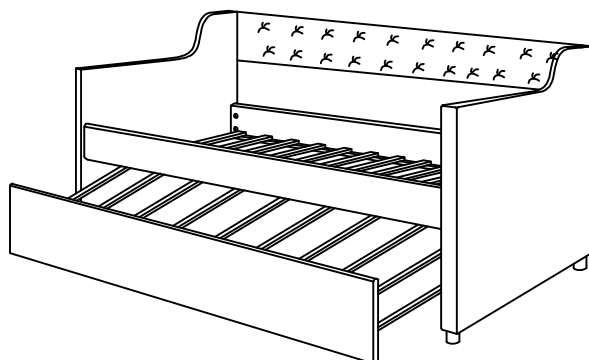






# ASSEMBLY INSTRUCTION

## FULL BED
















### Part list


W876P170769/W876P170771			
No.	Parts	Description	QTY
A		Headboard	1
B		Footboard	1
J		Foot	4
K		Wood block support of center rail	2


W876P170770/W876P170774			
C		Bed Rail	2
D		Backboard	1
F		Front panel of under bed	1
G		Back panel of under bed	1
E		Bed Slats	1
H		Slats of under Bed with wood block	1
I		Support rail	1

### Hardware

W876P170769/W876P170771			
No.	Parts	Description	QTY
1		Bolt 5/16"*25mm	16
2		Flat Washer 5/16"	20
3		Spring washer 5/16"	20
4		Bolt 5/16"*45mm	4
5		L metal connector	6
6		Wheel	4
7		Wood Screw #8*30mm	40
8		Large L metal connector	4
9		Wood Screw #8*15mm	40
10		Allen Wrench	1
11		Bolt 1/4"*64mm	2
12		Flat Washer 1/4"	2
13		Spring washer 1/4"	2


ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)






PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!


Detail View

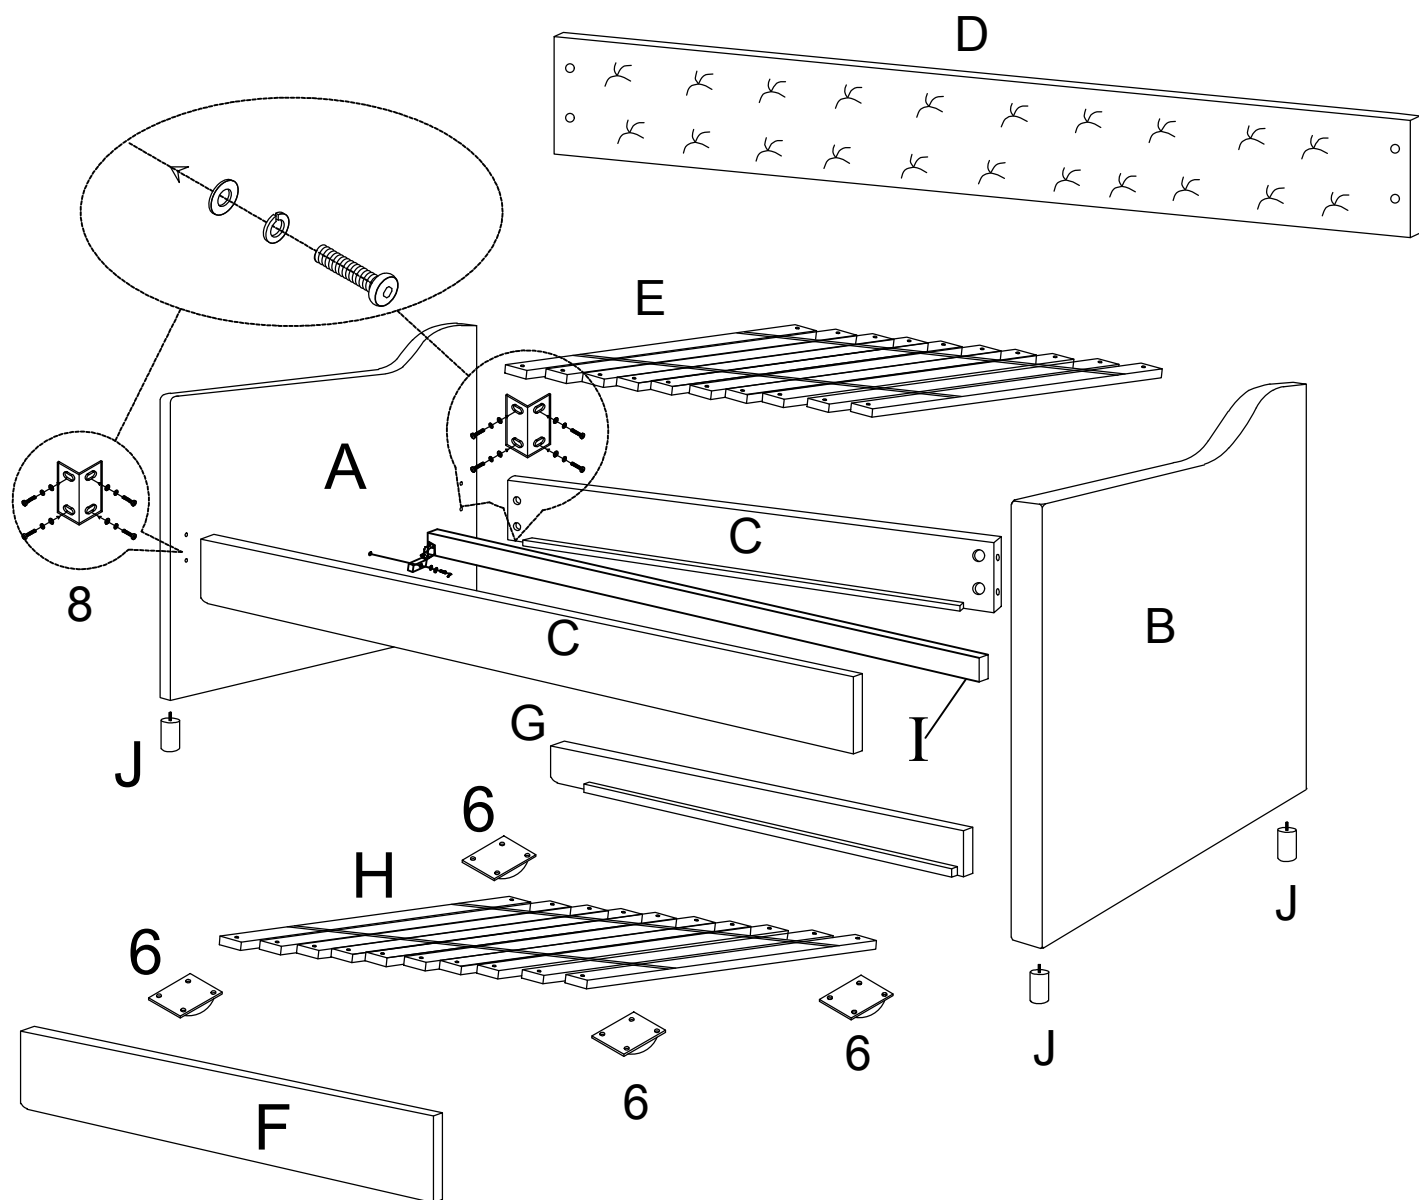

- STEP 1:**
1. Screw four feet into the bottom of Headboard (A) and Footboard (B), as shown in Figure 1.
  2. Screw Hang Bolts (1) into Headboard (A) and Bed Rail (C) through L Metal Connector (8) as shown in Figure 2.
  3. Repeat the steps 2 for Footboard (B).
  4. Attached the wood block (J) to headboard (A) and Footboard (B) by by using Bolts (11) Flat washer (12 )and lock washer (13) as Figure 3.
  5. Attached L metal connector (5) to support rail (I) using screw (9) as Figure 3.
  6. Attached the suppoort rail of the slats on the wood block (K) using Screw (9), as Figure 3.

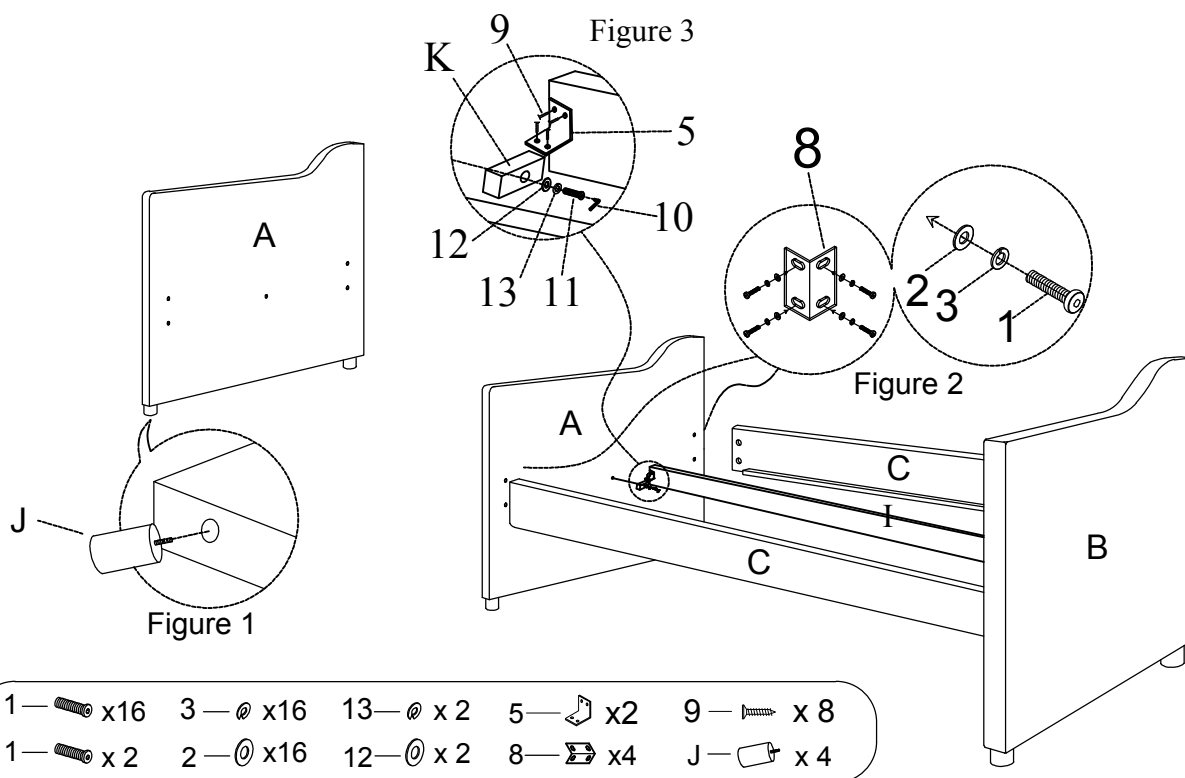


**STEP 2:**

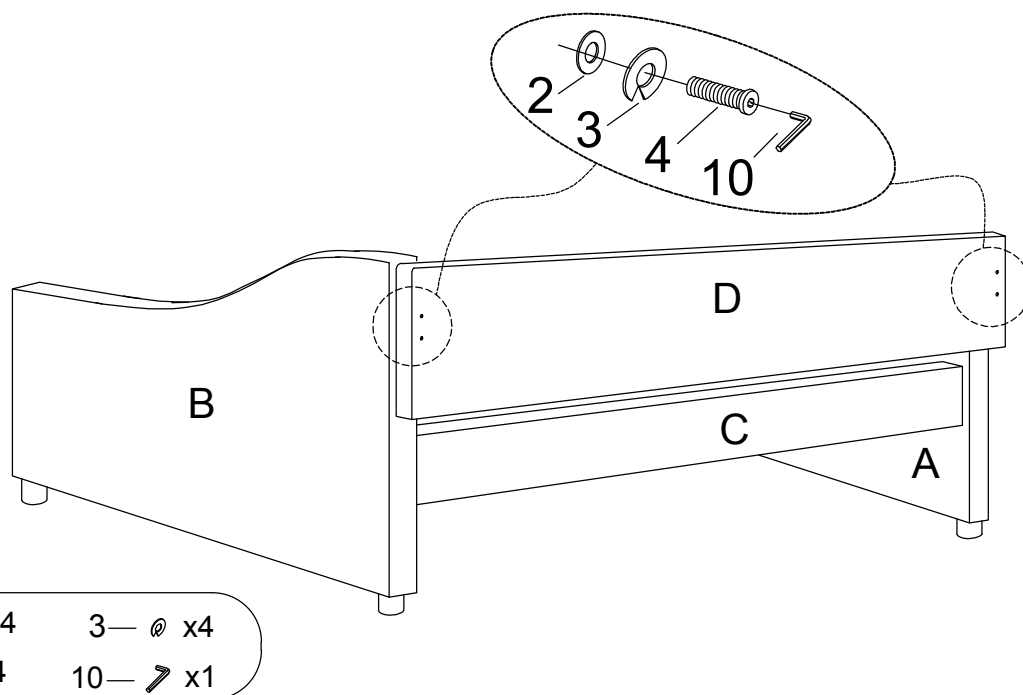

1. Attach Backboard (D) to Headboard (A) and Footboard (B) by using 4 pieces of Bolts (4), 4 pieces of Flat washer (2), and 4 pieces of Spring Washers (3) as shown in the picture.
2. Use Allen Wrench (10) to tighten all Bolts (4) clockwise as shown.

- STEP 3: 1. Put 10 pieces of Bed Slats (E) on the Bed Rails (C).
2. Tighten 20 Pieces of Wood Screws (7) clockwise as shown.

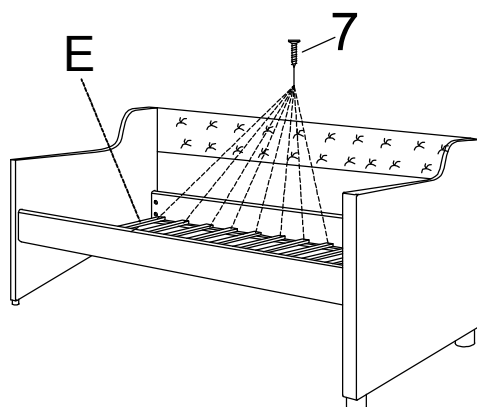

7 —  x20


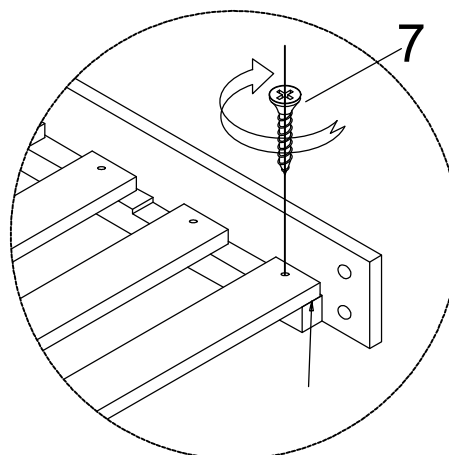



Figure 1  
Flush /Affleurer

- 
- STEP 4: 1. Attach 4 pieces of Wheels (6) to the Slats under bed (H) with 16 pieces of Wood Screws (9) as shown in the picture.
2. Tighten Wood Screws (9) clockwise as shown in the picture.

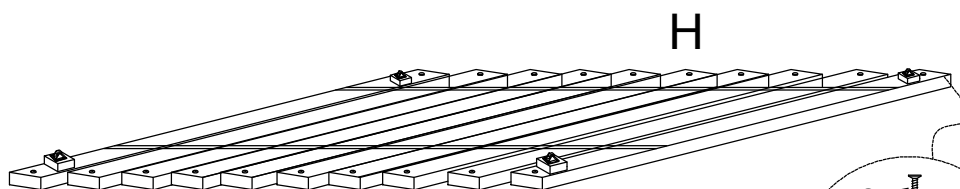


9 —  x16


6 —  x4

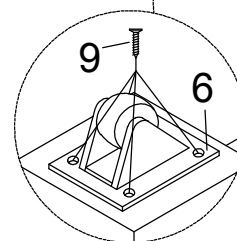


- STEP 5:**
1. Tighten 4 pieces of Wood Screws (7) to slats of under bed (H) as Figure 1.
  2. Attach both outside 2 pieces Slats of under bed (H) to Front panel of under bed (F) and Back panel of under bed (G) by 4 pieces of L metal connector (5), as Figure 2
  3. Tighten 16 pieces of Wood Screws (9), as shown.

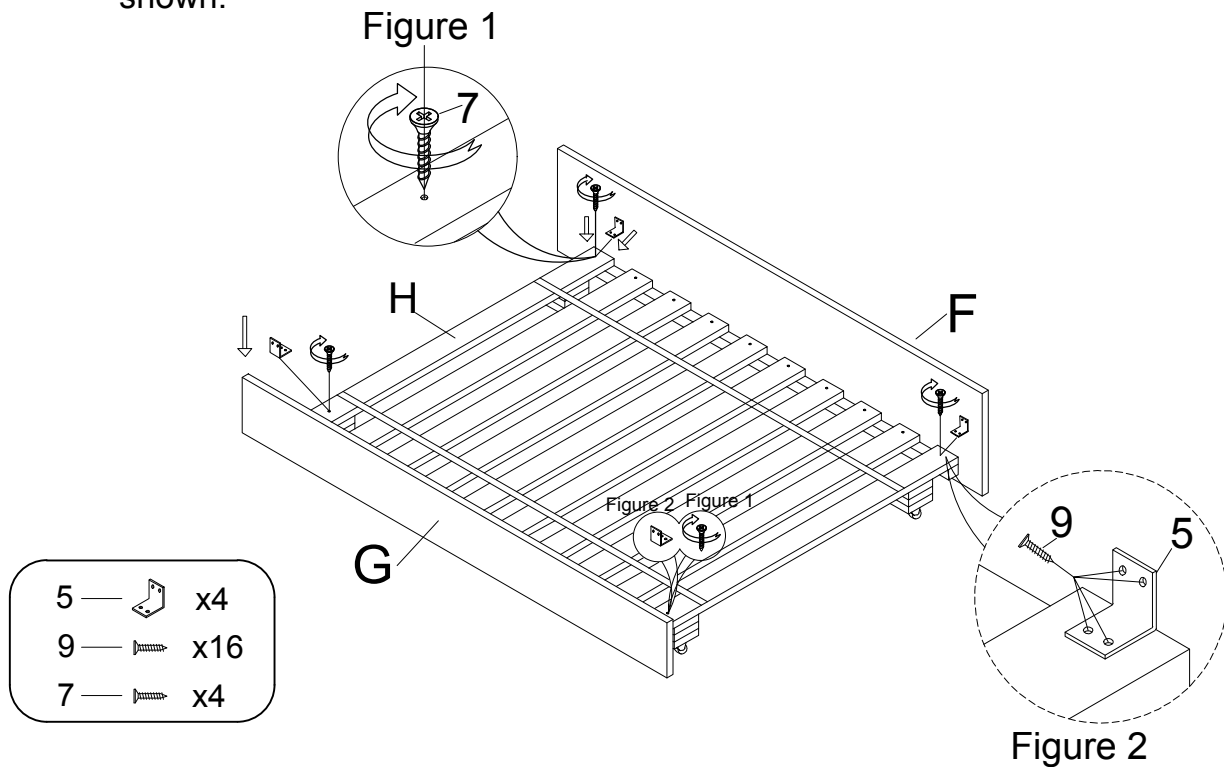

- STEP 6:**
1. Put Slats of under bed (H) between front panel of under bed (F) and Back panel of under bed (G) as shown.
  2. Tighten 16 Pieces of Wood Screws (7) clockwise as shown.

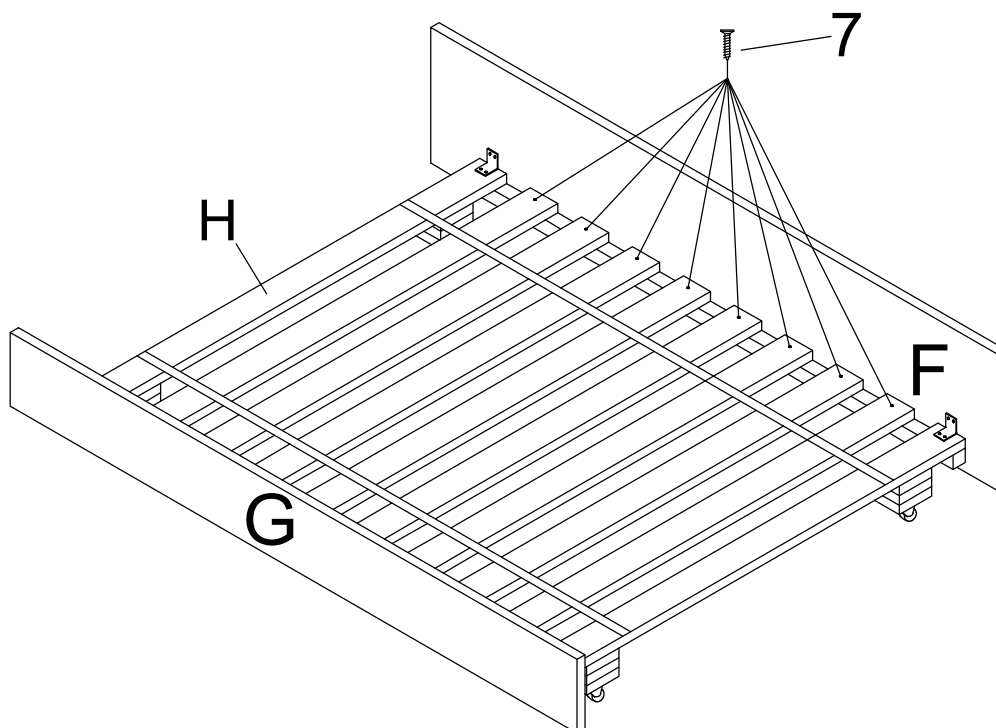

7 —  x16

STEP 7: Push the trundle into the Daybed.

