

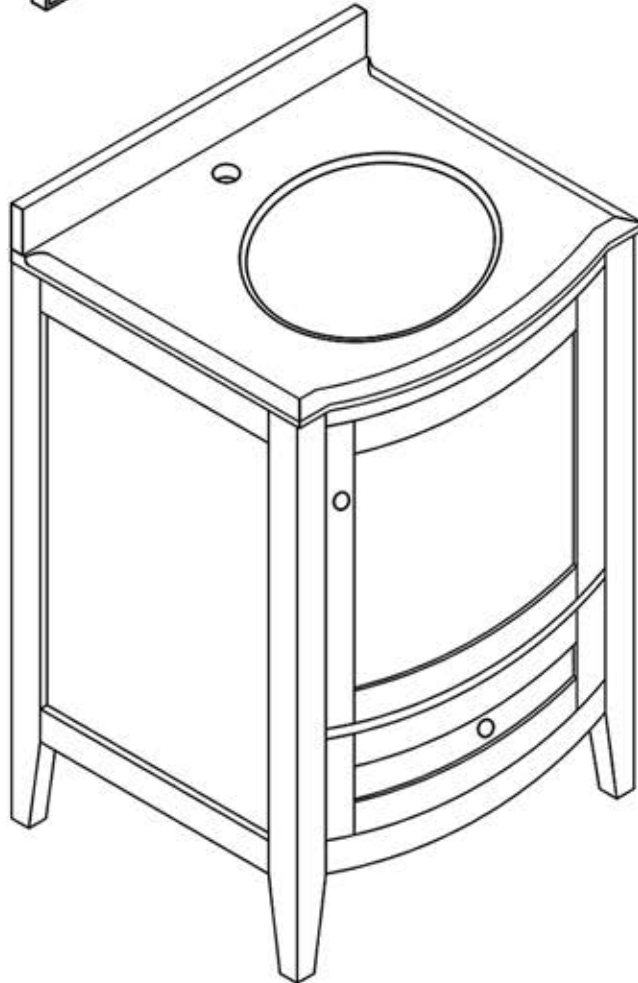


INSTALLATION MANUAL


Dimensions are $\pm 1/8"$

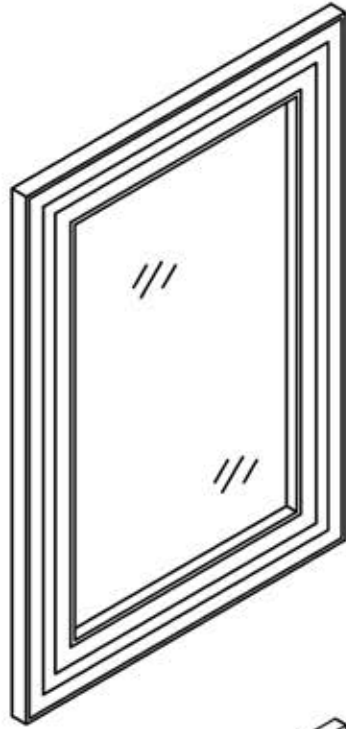


24" VANITY

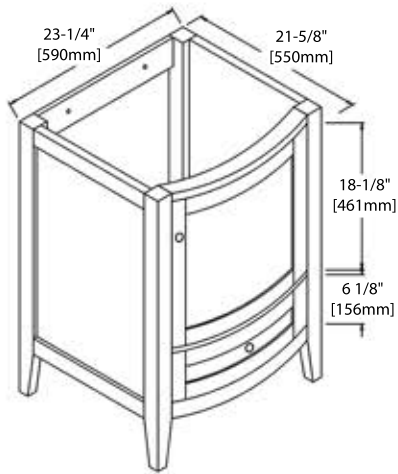

V8002 24

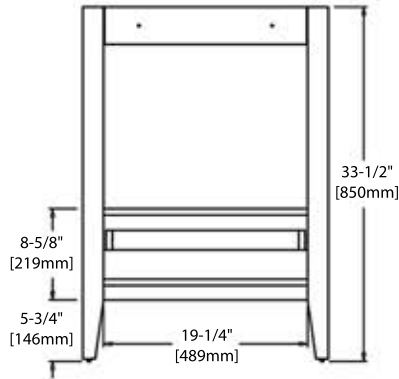


BACK VIEW

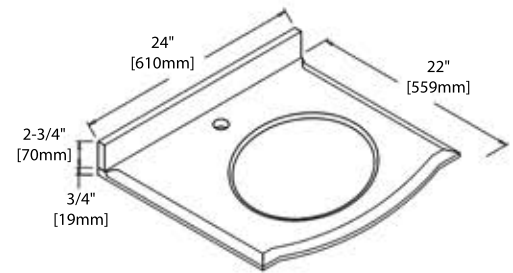


CT5002 2422 03


30" VANITY

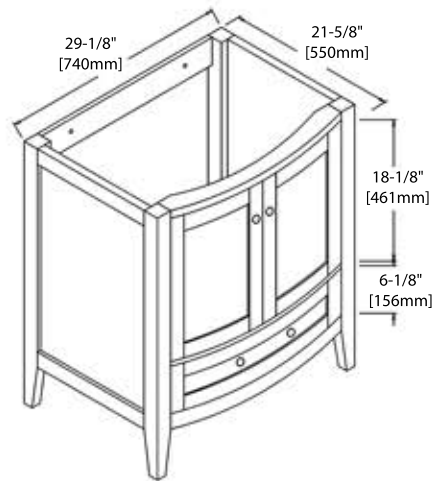

V8002 30

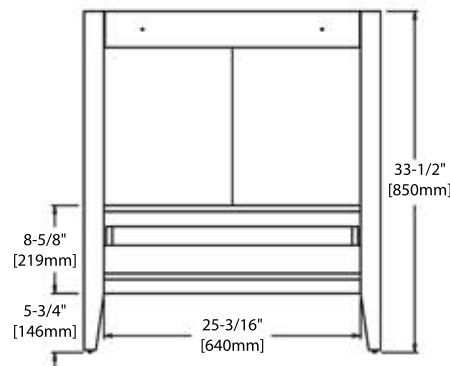


BACK VIEW

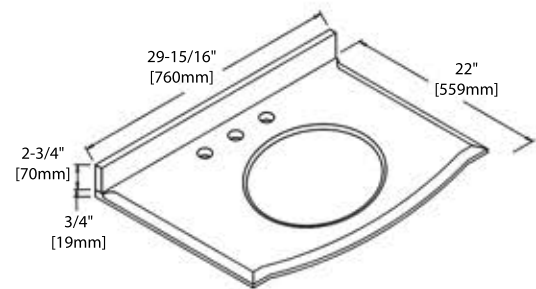


CT5002 3022 03


36" VANITY

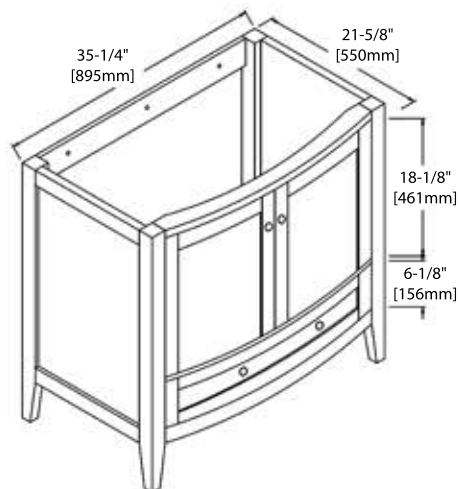

V8002 36

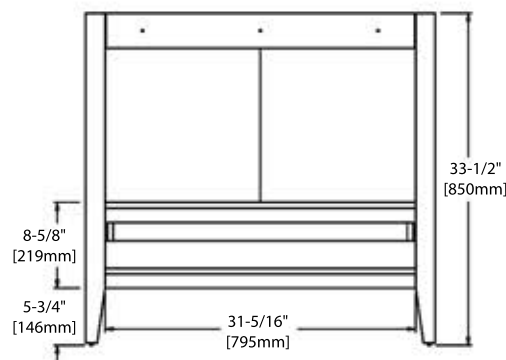


BACK VIEW

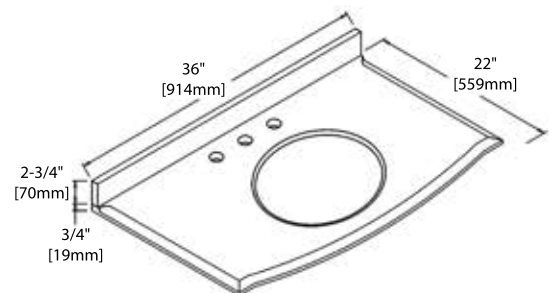

CT5002 3622 03

48" VANITY

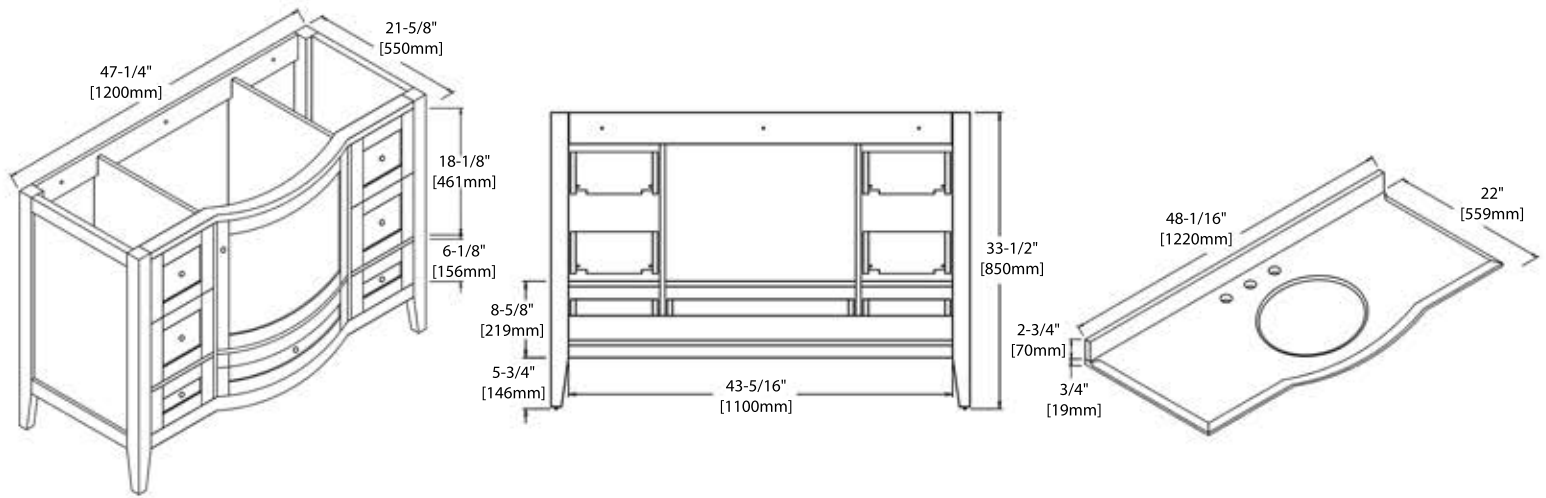


V8002 48

BACK VIEW

CT5002 4822 03

60" VANITY

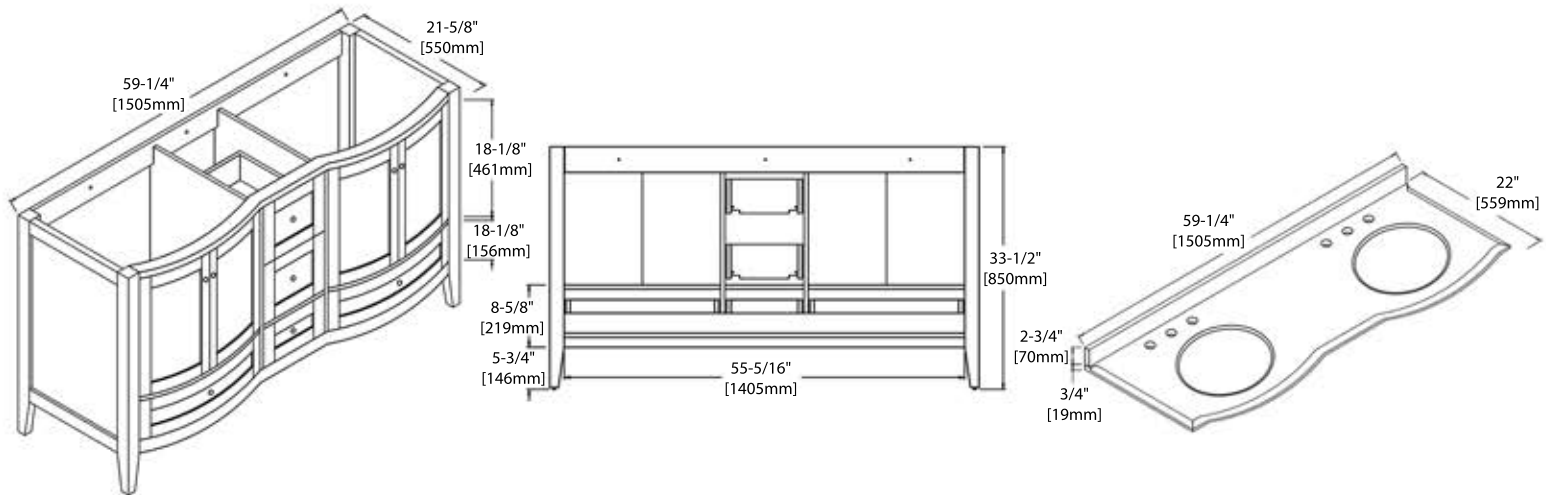


V8002 60

BACK VIEW

CT5002 6022 03


UNDERMOUNT BASIN - C09 1916

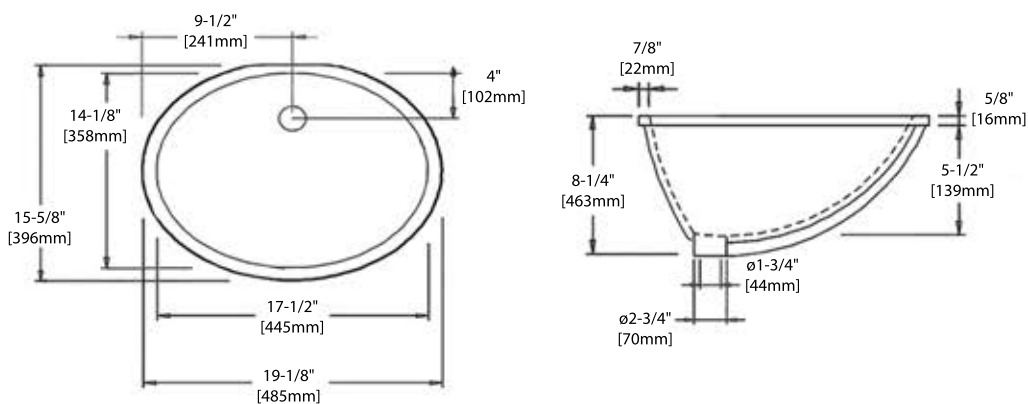


TOP VIEW

SIDE VIEW


INSTALLATION MANUAL

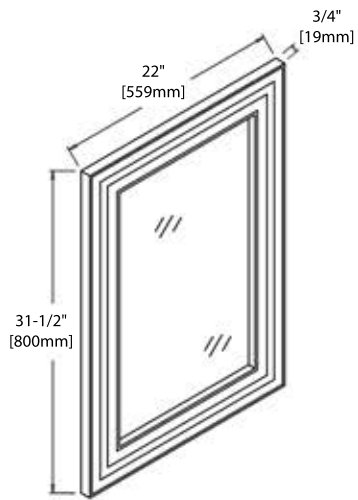


24" - M6002 24

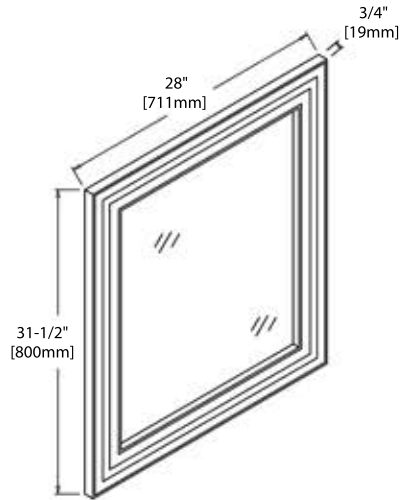


30" - M6002 30

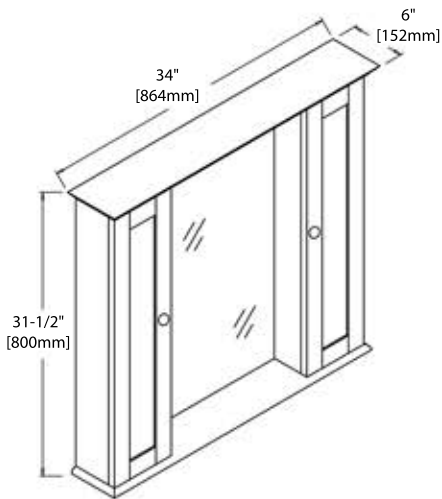

36" - M6002 36

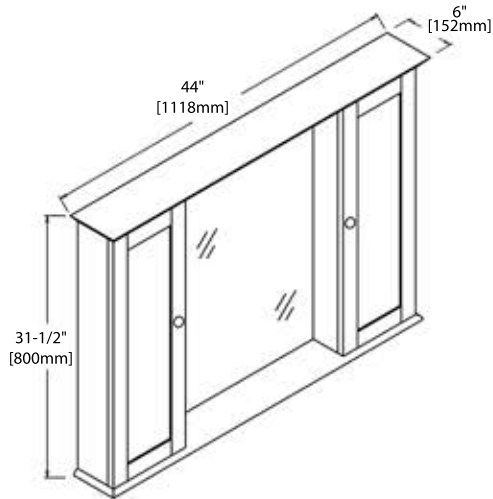

48" - M6002 48

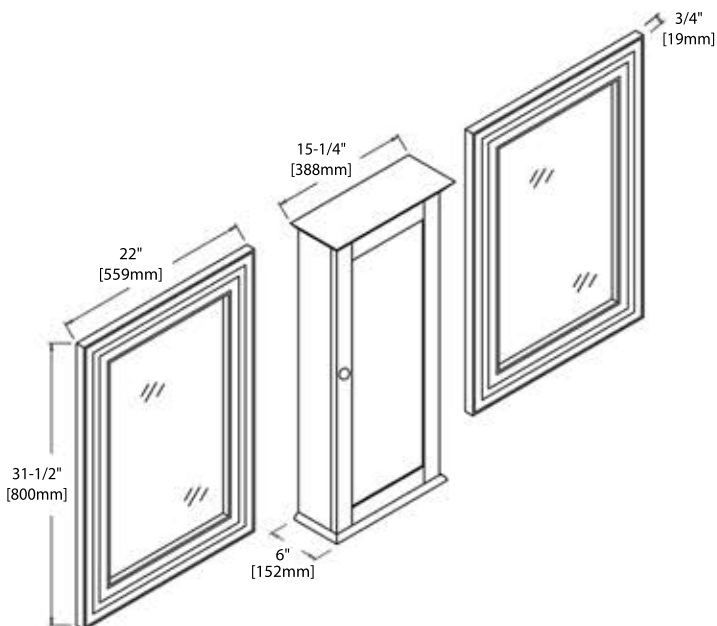

60" - M6002 60

REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver

PARTS INCLUDED



4 pcs




4 pcs




4 pcs



4 pcs

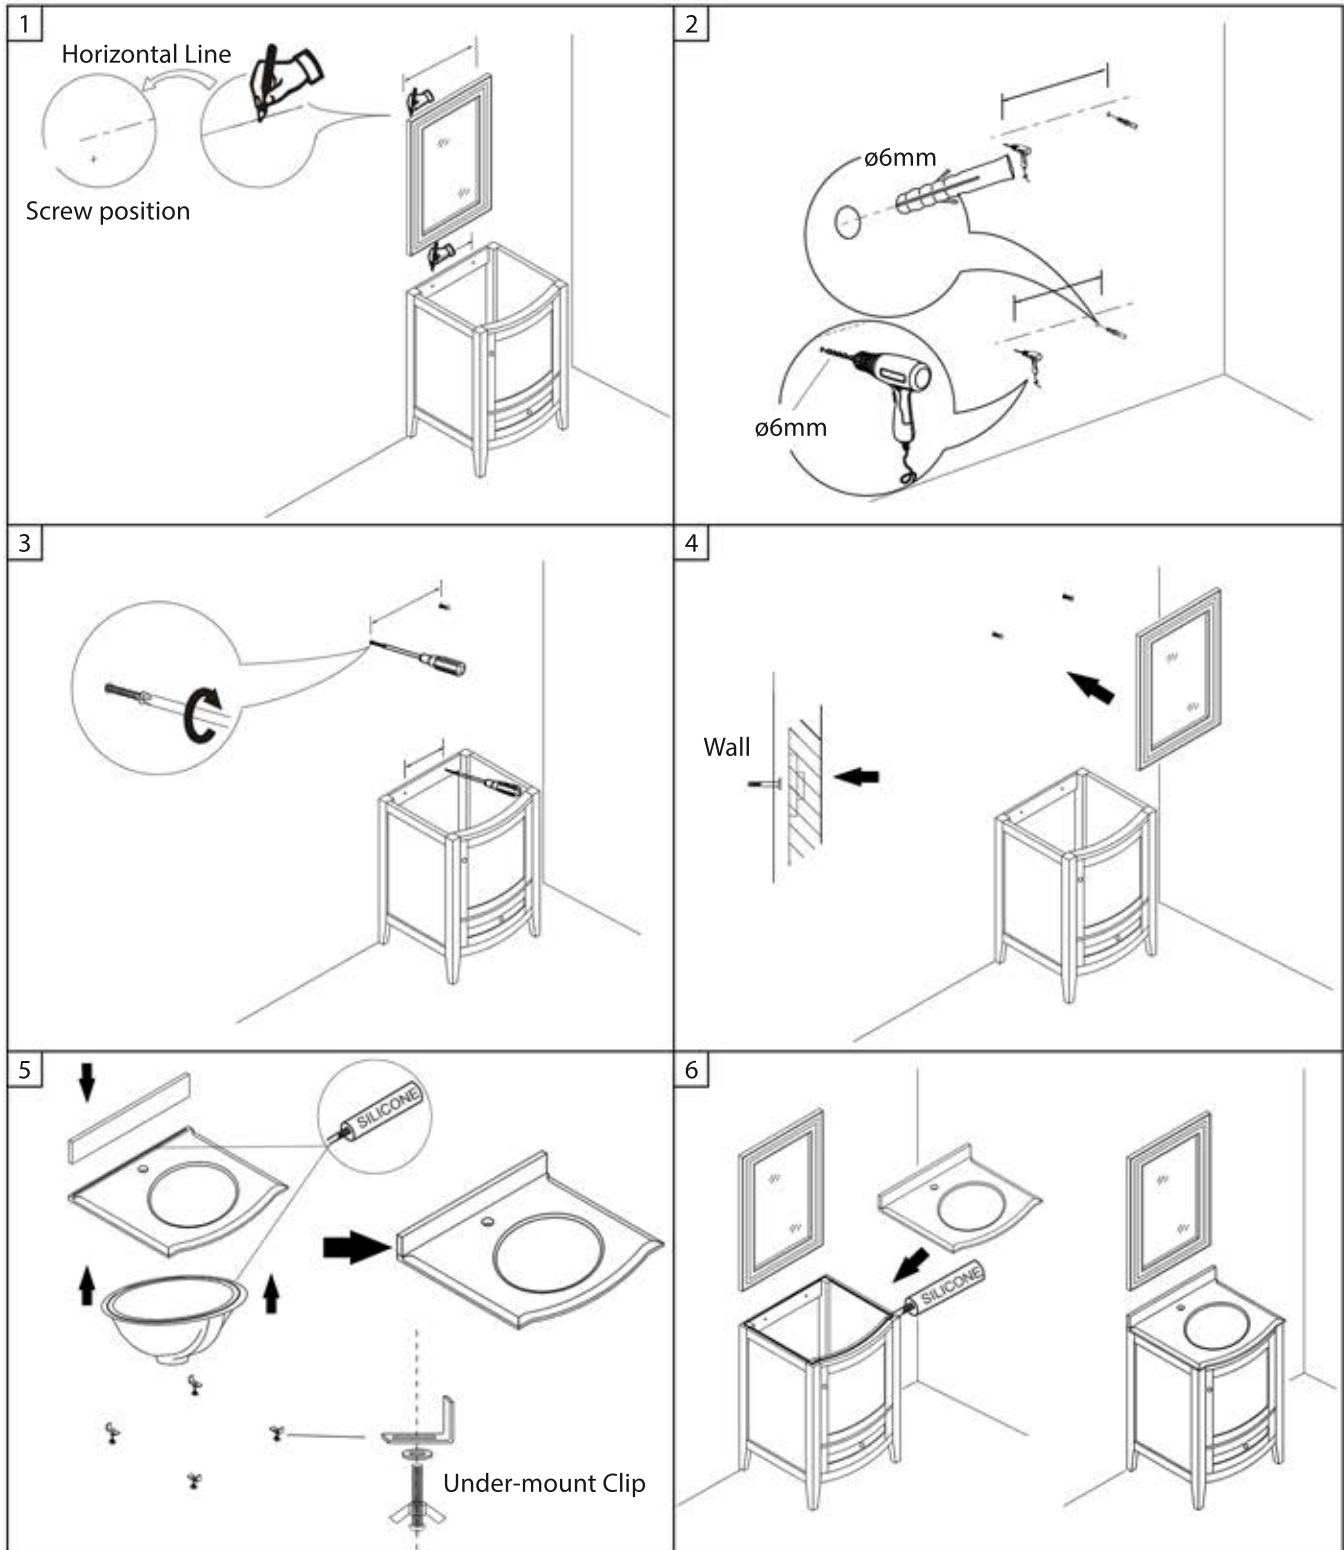

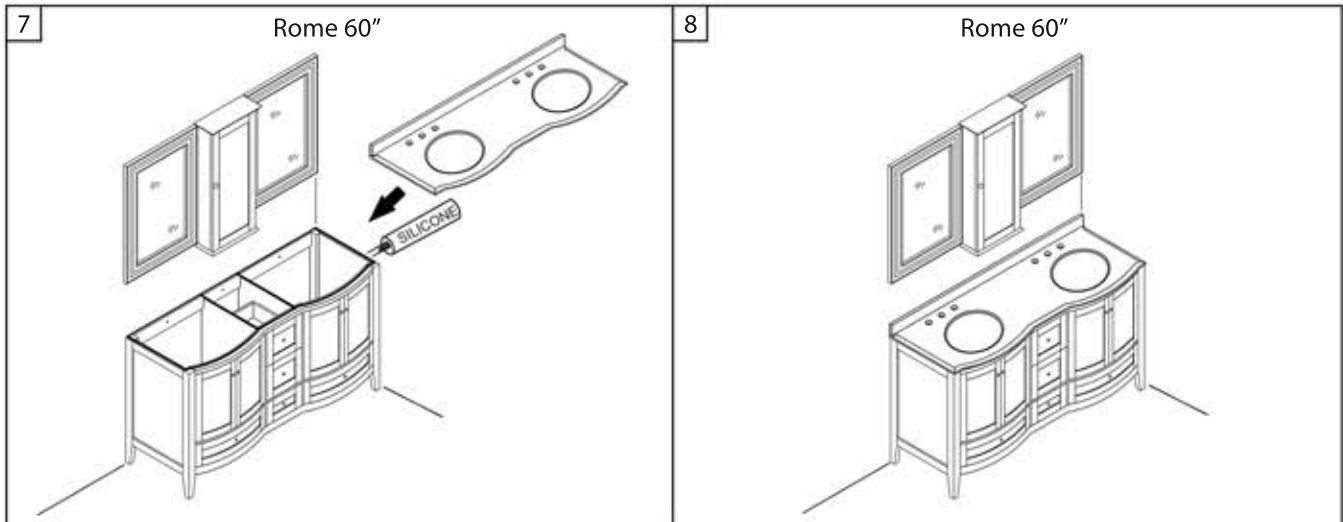

DRAWER REMOVAL & INSTALLATION

