

# ALISON 48"


## BATHROOM VANITY SET

SKU: ALISON48QZ-WT

ALISON48QZ-LB

Colors/Finishes: White, Light Blue

Nominal Dimension:48W\*22D\*35H inches

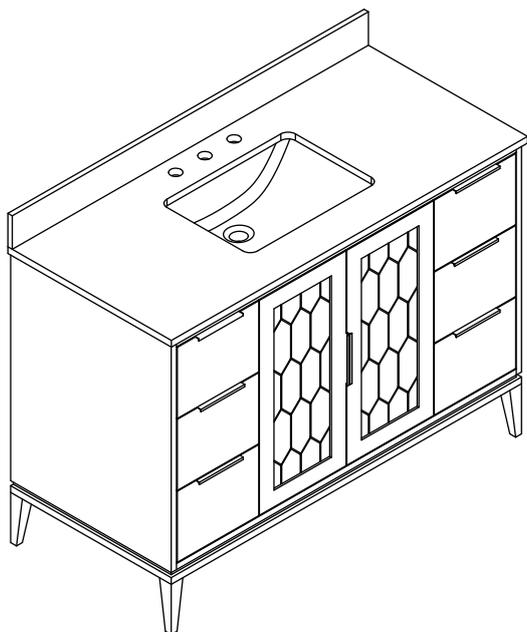


### Contents

48"Vanity.....PAGE2

48"Vanity Top.....PAGE3

Vanity Installation.....PAGE4

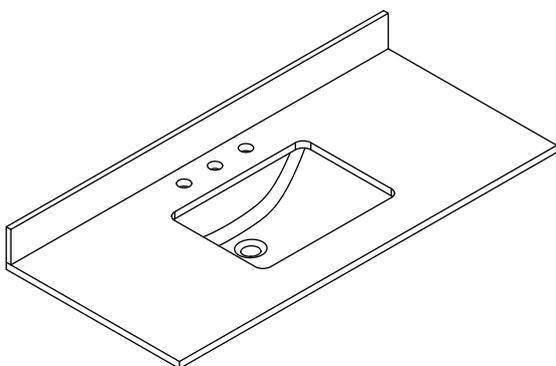

### VANITY FEATURES:

- 1.Material: Solid poplar wood frame, high-quality veneer plywood.
- 2.Doors: 2 soft-close doors, Austria BLUM Soft-close hinges system.
- 3.Drawers: 6 soft-close drawers, DTC concealed soft-close sliders.
- 4.Hardware: Metal alloy
- 5.Installation Type: Freestanding
- 6.Built-in Adjusters: Adjustable height levelers
- 7.Vanity Top: High-quality quartz/marble with single undermount sink
- 8.Assemble required: No
- 9.Vanity top Included: Yes
- 10.Mirror Included: Optional
- 11.Medicine Cabinet Included: Optional

### VANITY TOP FEATURES:

- 1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz,or natural Italian Carrera white marble.
- 2.Top Color: Carrera white
- 3.Sink: 1\*20"undermount rectangle sink
- 4.Faucet Hole s: Top pre-drilled for 8"widespread faucet holes
- 5.Sink Certified: CUPC certified
- 6.Backsplash: 4"backsplash included
- 7.Faucet Included: No
- 8.Nominal Dimension(W\*D\*H): 48W\*22D\*0.79H inches

# ALISON 48"

## BATHROOM VANITY SET


SKU: ALISON48QZ-WT

ALISON48QZ-LB

### COMPONENTS:

Vanity	ALISON48QZ-WT	ALISON48QZ-LB
Vanity Top	QZ48CW20HD	QZ48CW20HD
Wall Mirror	W9MRL4836WT	W9MRL4836MB
Medicine Cabinet	W3MCL3630	W3MCL3630


### PRODUCT DIAGRAMS:

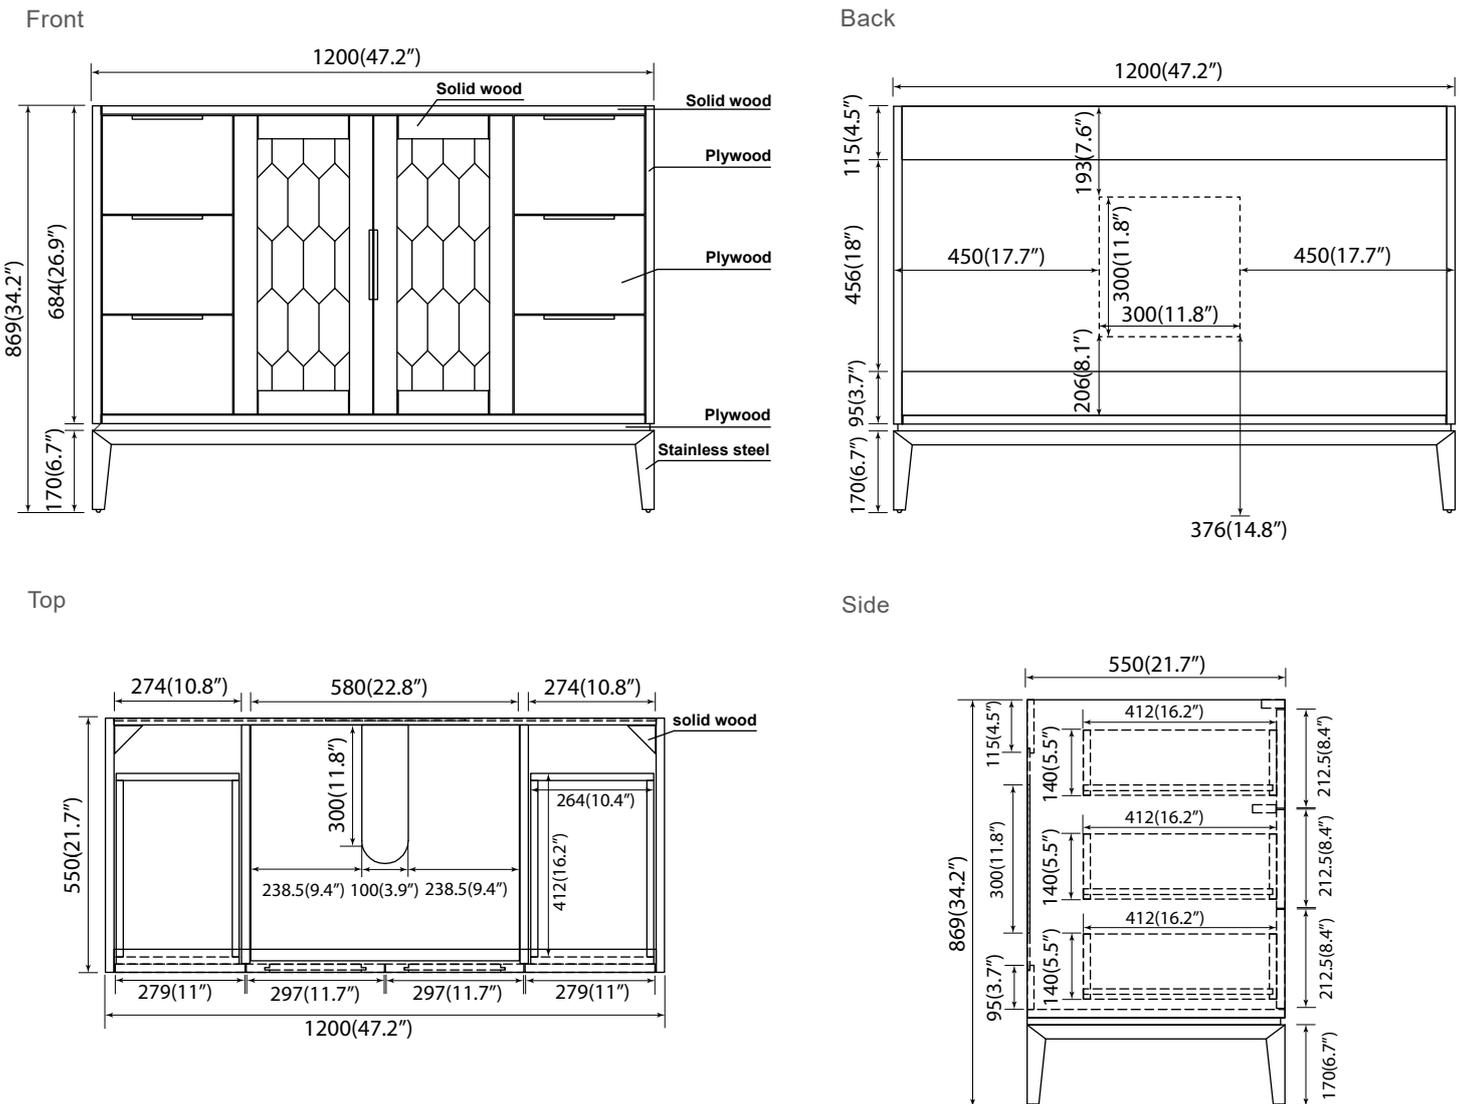


# ALISON 48"

## VANITY TOP

With rectangular undermount sink

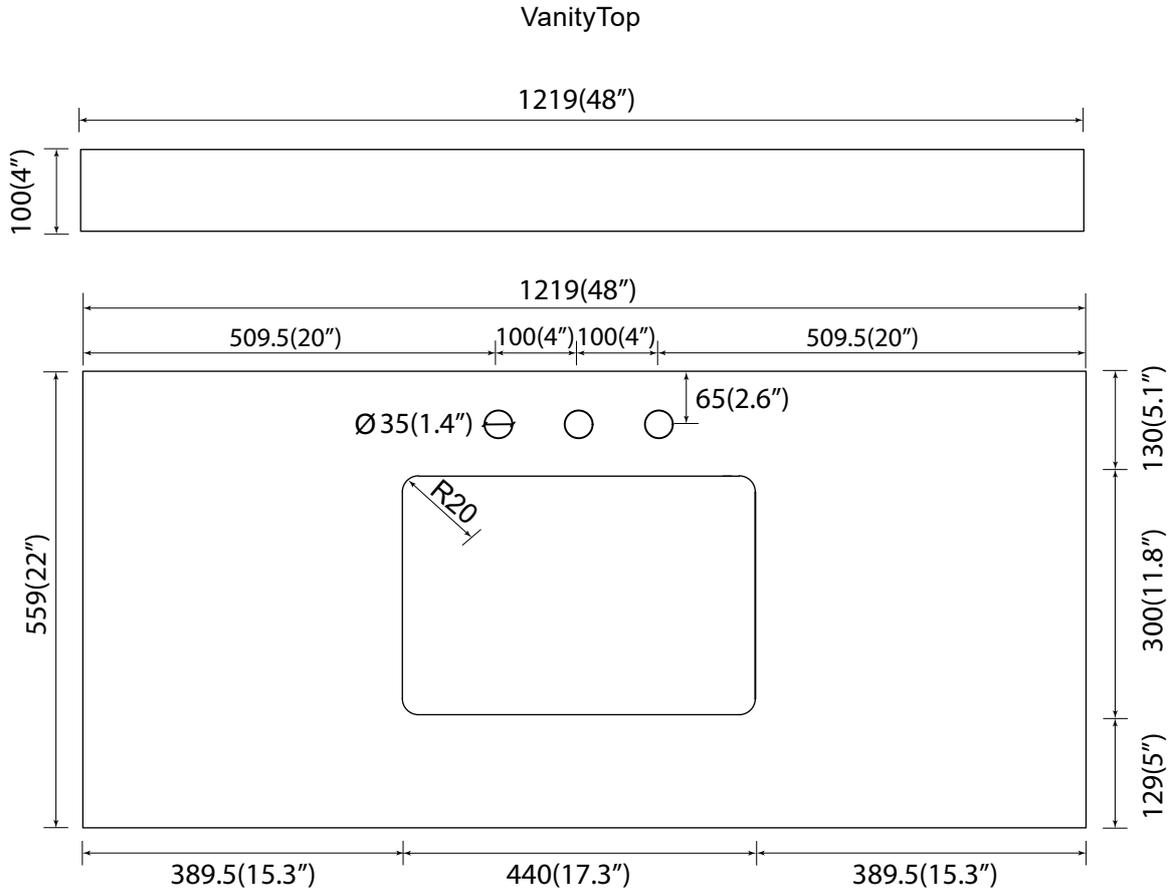


## Undermount Sink

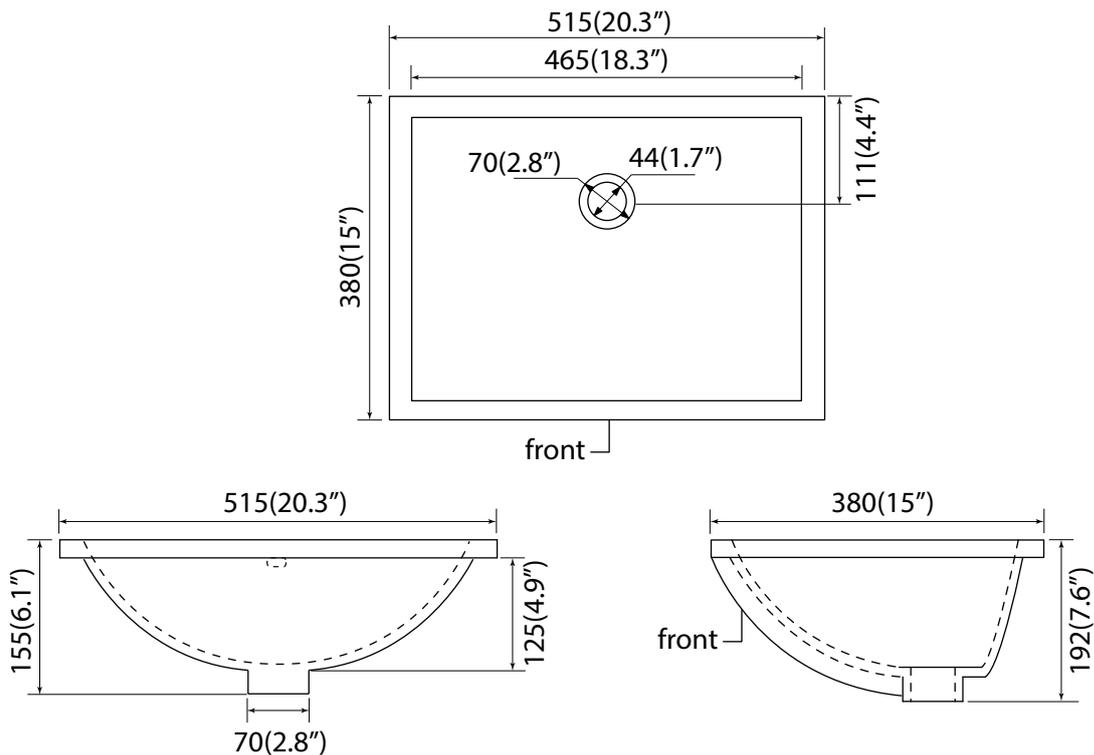

# Vanity Installation

## SUGGESTED TOOLS AND MATERIALS:



Sealant



Measuring tape



Safety glasses



Rag




Level

## INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .We accept no liability for any damage to the floor,plumbing, vanity cabinet,sink,counter top,or personal injury during installation.

**1**

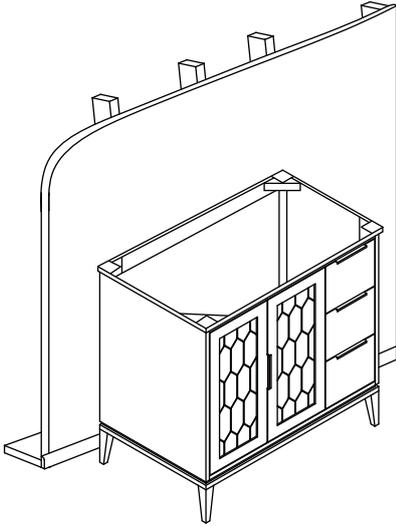


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

**2**

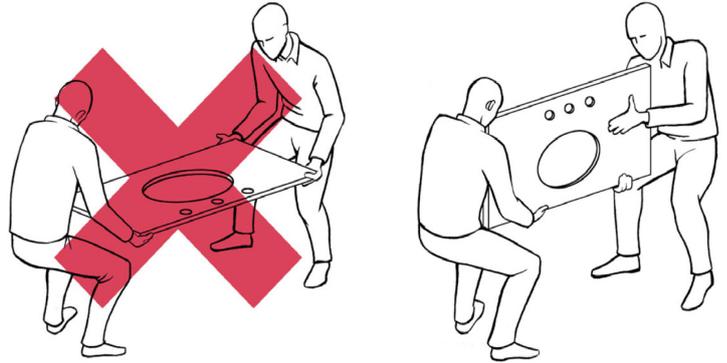


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

**3**

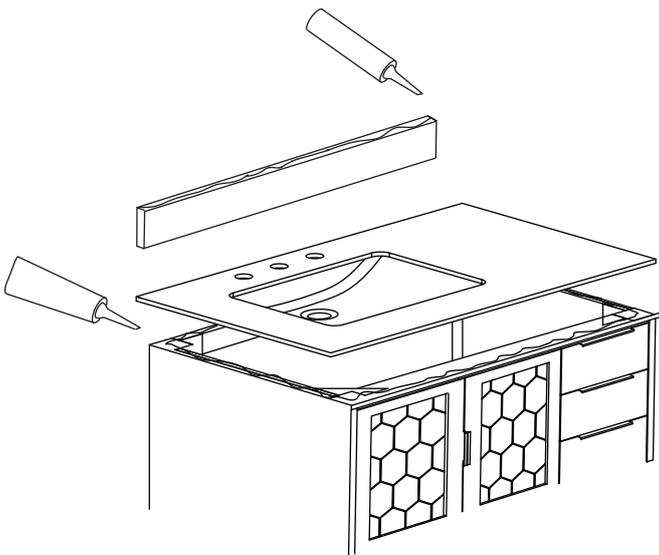

Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

**4**

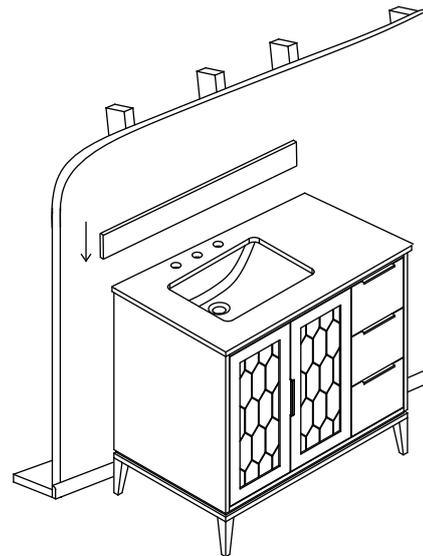

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.