
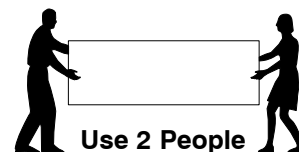


Daybed

Assembly Instructions


WIL-1118

1 Assembled View

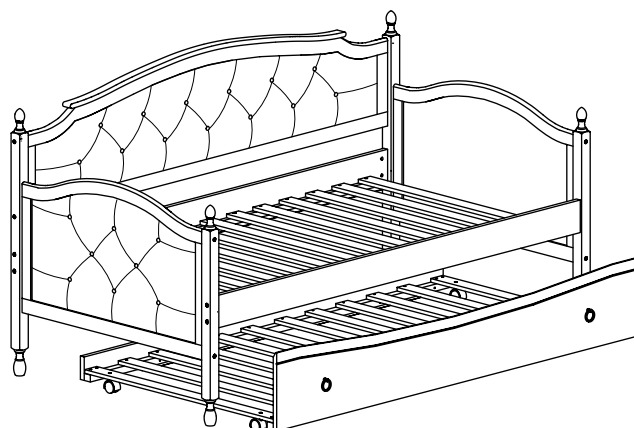


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


2 Parts in this Box

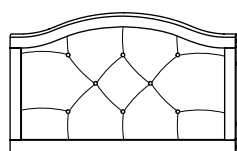


A Side Panel x 2

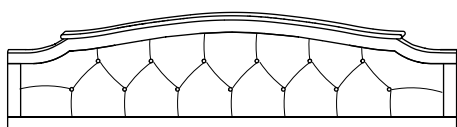


B Back Panel x 1



C Side Rail x 2

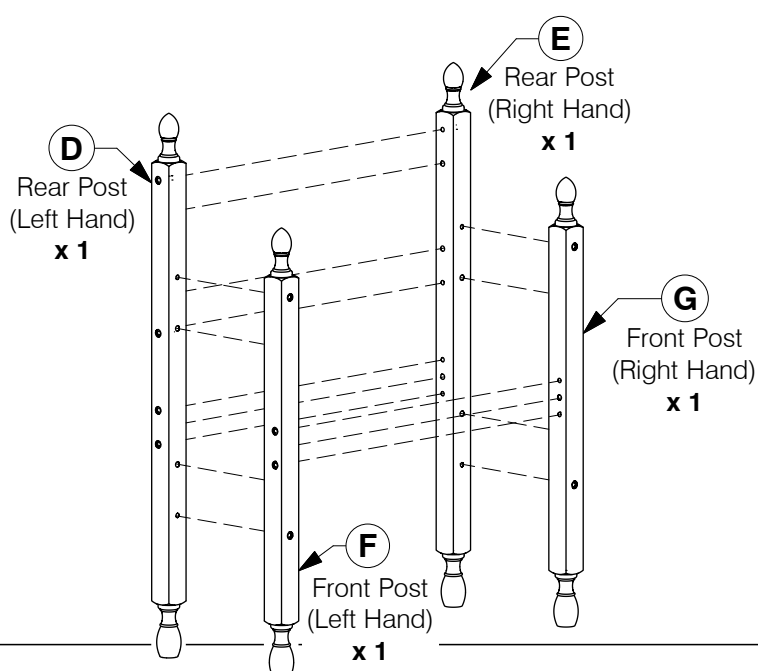

Slats are packed in separately in Box B

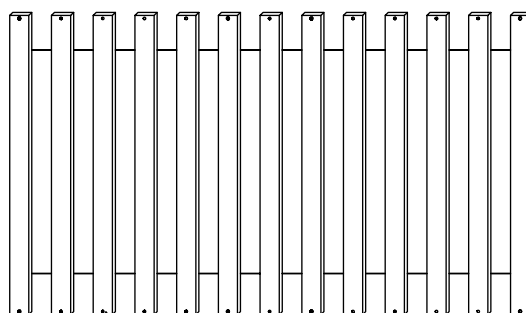

H Set of Slats x 1


3 Hardware in this Box




1 M6 x 90mm JCB x 20




4 Barrel Nut x 20




2 M6 x 40mm JCB x 8



5 Wood Dowel (10 x 40mm) x 16



3 Wood Screw (M4 x 32mm) x 18




6 Allen Key x 1

Daybed


Assembly Instructions

WIL-1118

- 4** Assemble the Rear Post (D/E) to the Side Panel (A).

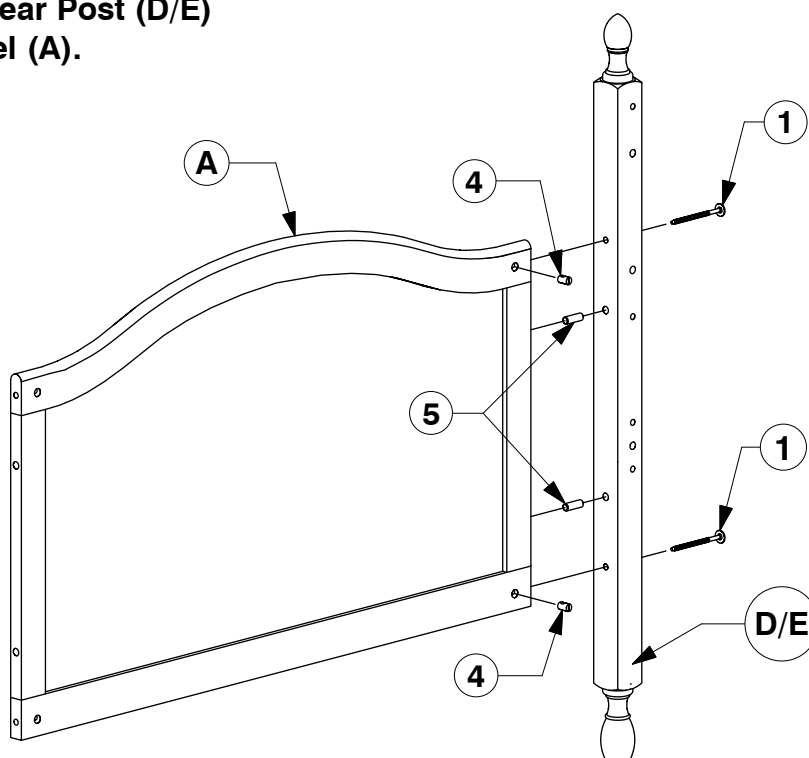

- 5** Assemble the Front Post (F/G) to the Side Panel (A).

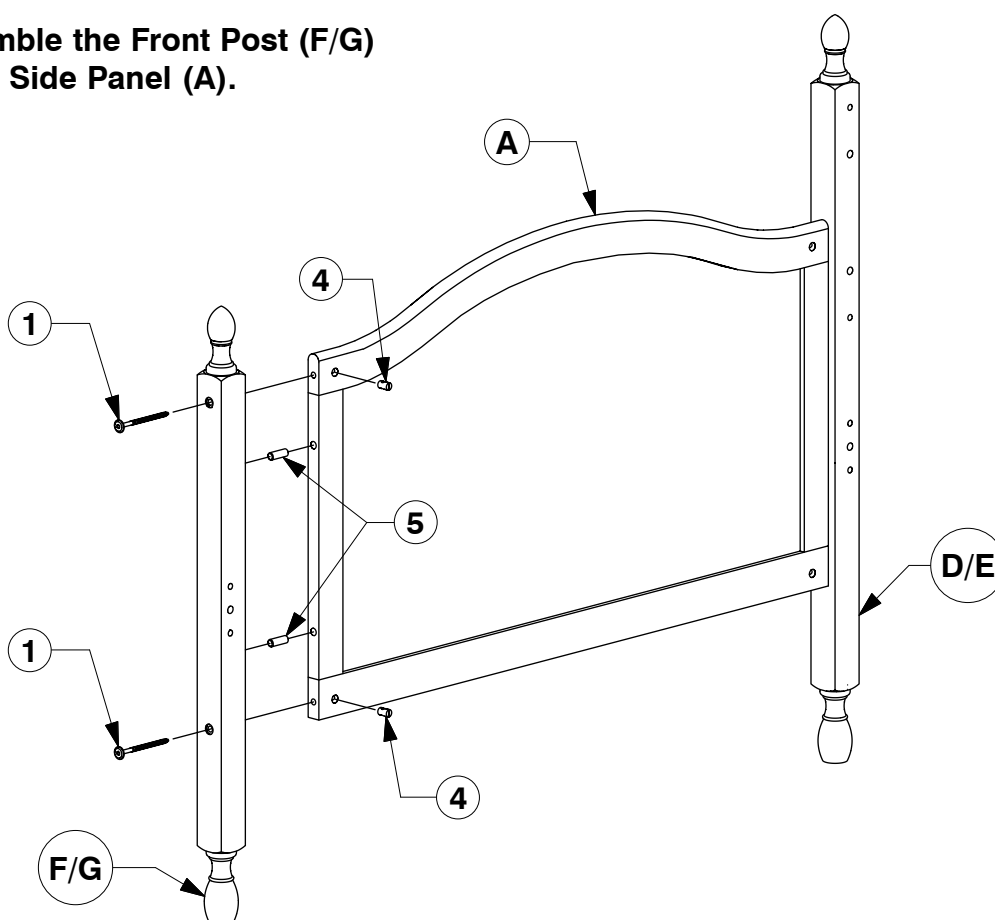


Daybed



Assembly Instructions

WIL-1118

- 6 Assemble the Side Panel (A) to the Back Panel (B) & Side Rail (C).**

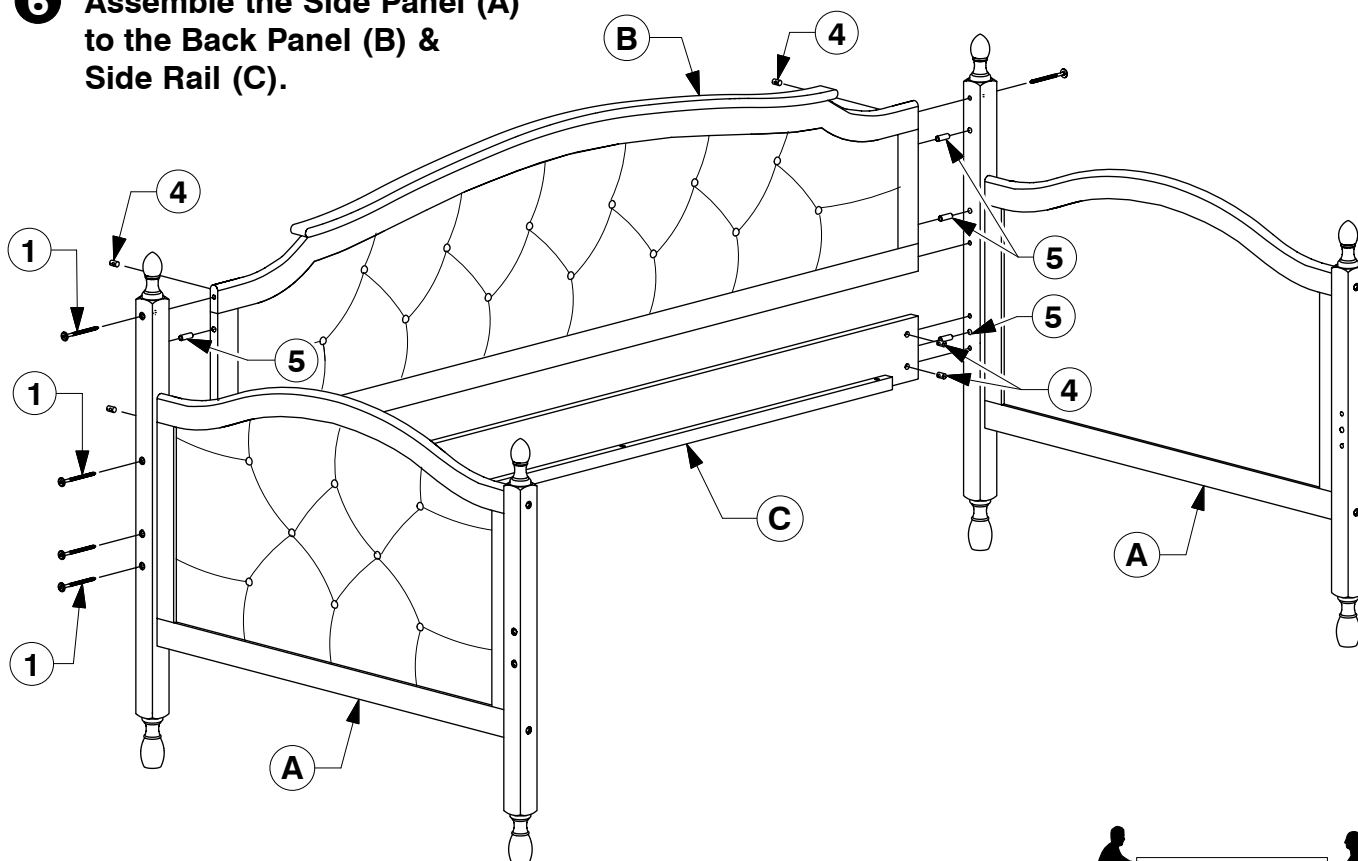

- 7 Assemble the Side Rail (C) to the Front Post (F/G).**

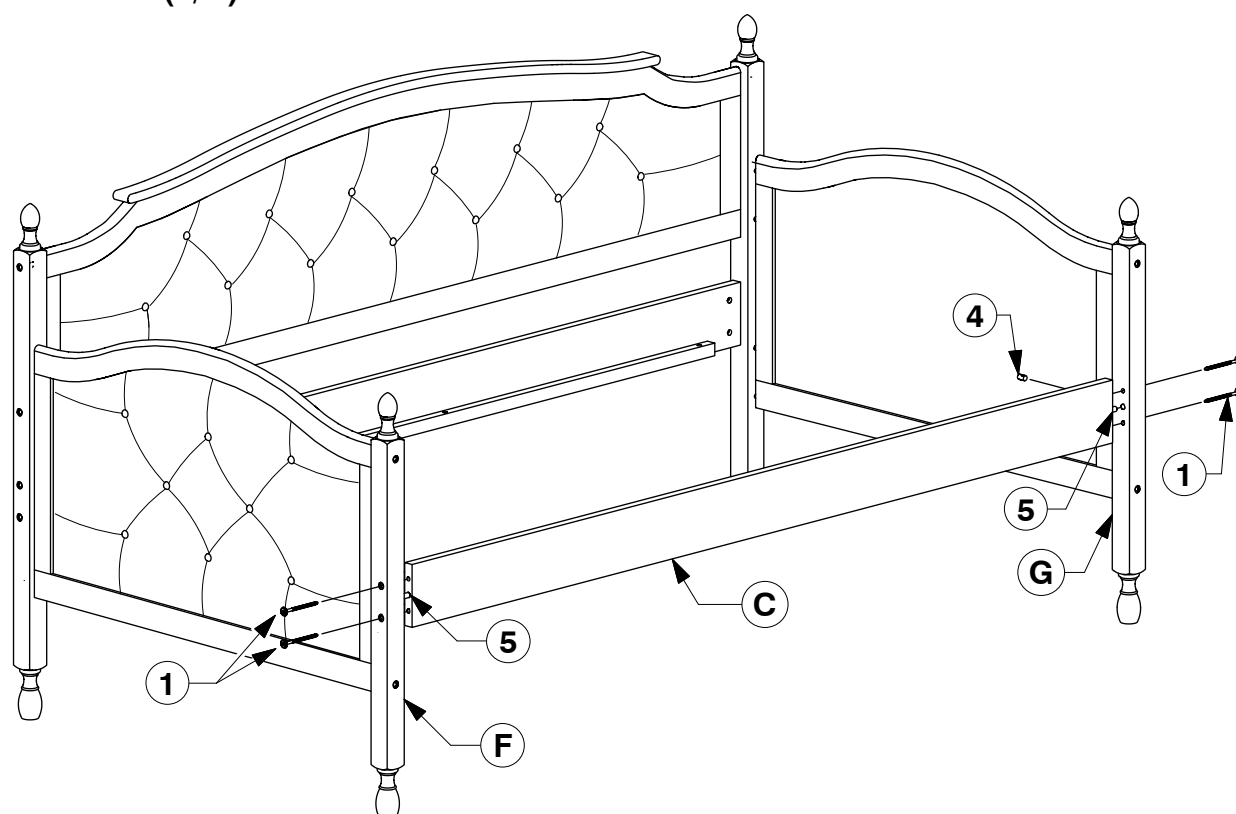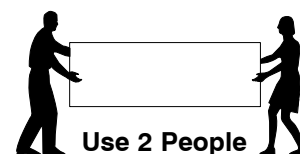


Daybed

Assembly Instructions

WIL-1118

- 8 Bolt the Set of Slats (H) between the Side Rail (C).**

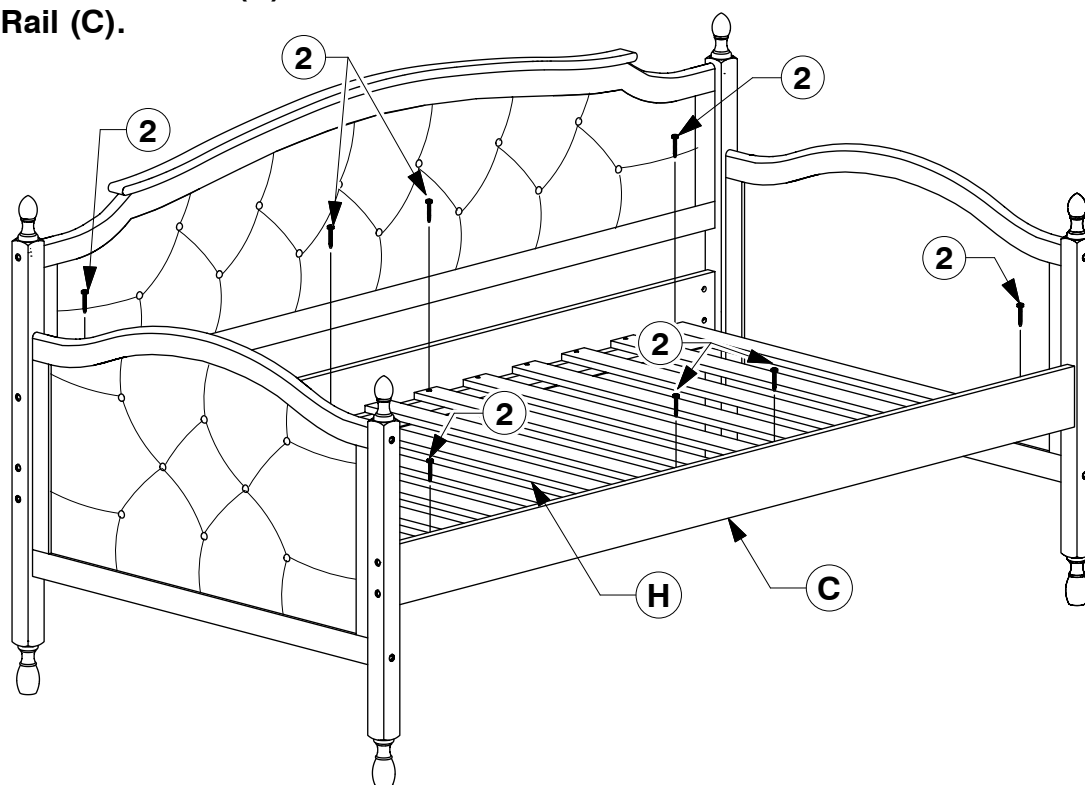

- 9 Screw the Set of Slats (H) between the Side Rail (C). Finally, fit the assembled Trundle.**

