



Liberty Furniture
INDUSTRIES, INC

LIBERTY FURNITURE

ASSEMBLY INSTRUCTION

ITEM # 607-BR13/BR14FS/BR90RSP
607-BR15/BR16FS/BR90RSP — DESCRIPTION Panel Bed —

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below.

Assembly steps:

Step 1. Assemble the Cross bar (G) to the Posts (L/R) (B) using Bolt (e), spring washer (g), flat washer (h) and allen key (i).

Step 2. Assemble the Posts (B) to the Headboard (A) using Bolt (f), spring washer (g), flat washer (h) and allen key (i).

Step 3. Assemble the Side rails (D) to the Posts (B) and Footboard (C) using set-screw (a), washer (b), nut (c) and wrench (d).

Step 4. Attach the Slat support (F) to the Slat roll (E)




Step 5. Screw slat roll (E) in place using screws (k).

PARTS LIST

NO.	SKETCH	DESCRIPTION	Q'TY
A		Headboard	1pc
B		Post (L/R)	2pcs
C		Storage Footboard	1pc
D		Side Rails	2pcs
E		Slat roll (18pcs)	Queen 1set
			King
F		Slat support	Queen 3pcs
			King 6pcs
G		Cross bar	1pc

HARDWARE LIST

NO.	SKETCH	HARDWARE	Q'TY
a		5/16"x18x2-3/4"	8pcs
b			8pcs
c		5/16"	8pcs
d		12 mm	1pc
e		5/16"x18x1-3/4	2pcs
f		5/16"x18x1-1/2	6pcs
g		5/16"x12 mm	8pcs
h		5/16"x19 mm	8pcs
i		4 mm	1pc
j		Ø8x30 mm	4pcs
k		#8x1"	36pcs

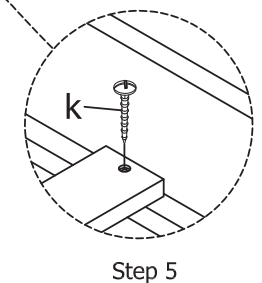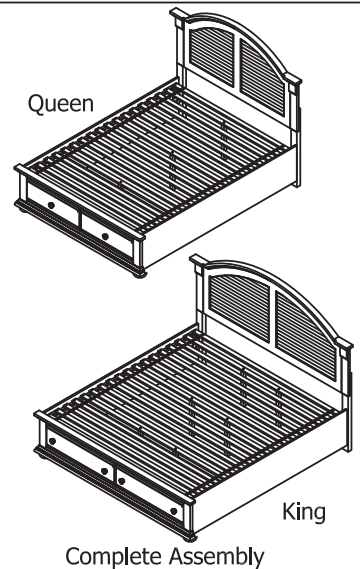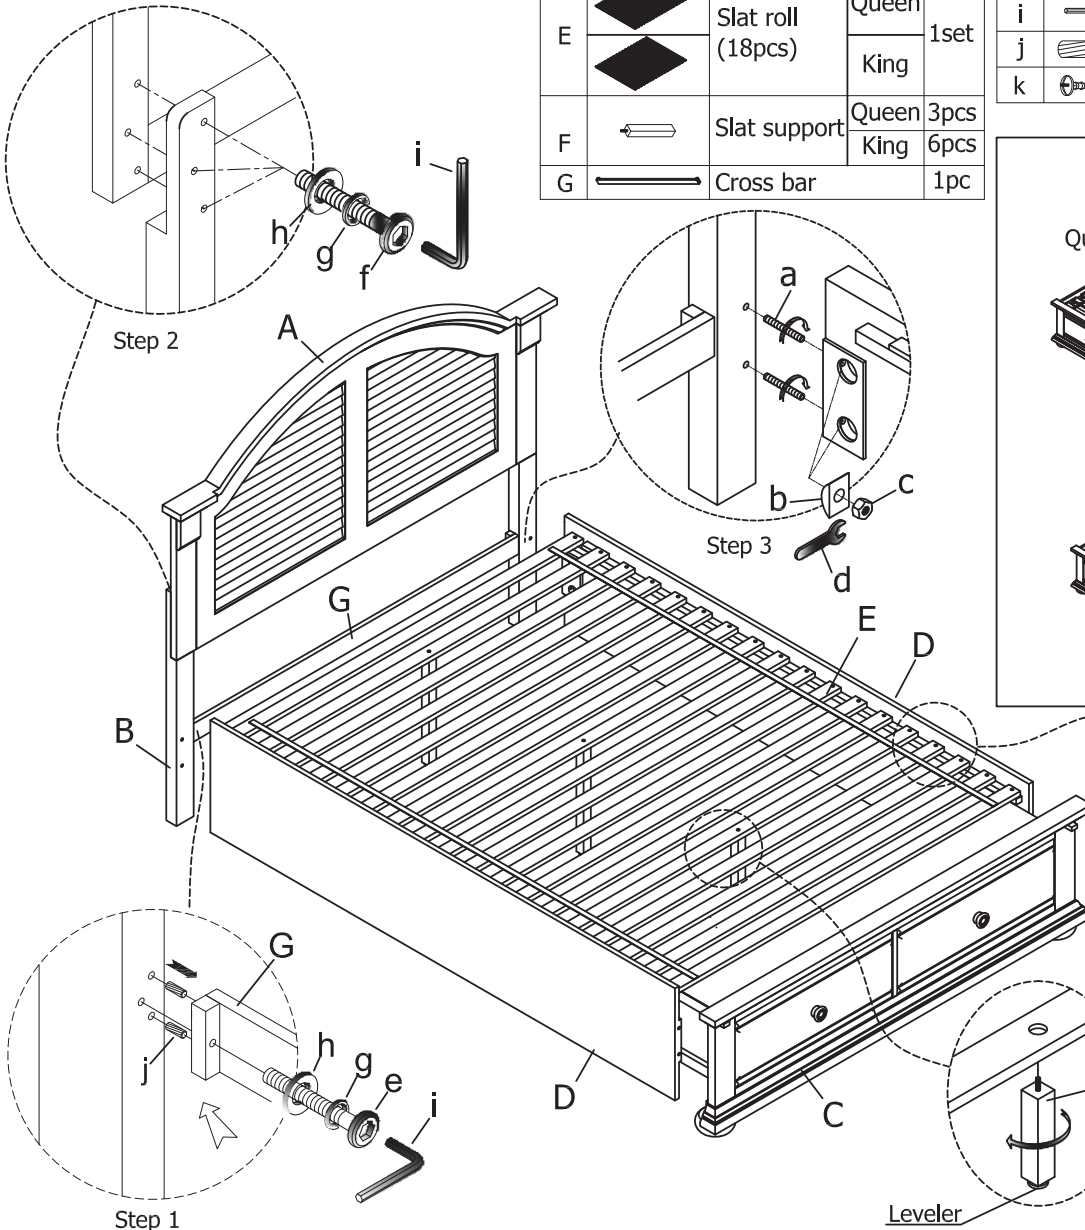

Step 4

Leveler

MADE IN VIETNAM