


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0570

**WARNING: Turn off the main power at circuit breaker before installing fixture.**  
**AVERTISSEMENT: Coupez la source d'alimentation principale au panneau central de disjoncteurs avant d'installer le luminaire.**

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.**  
**2. READ AND SAVE THESE INSTRUCTIONS.**

## Hardware Package (included):

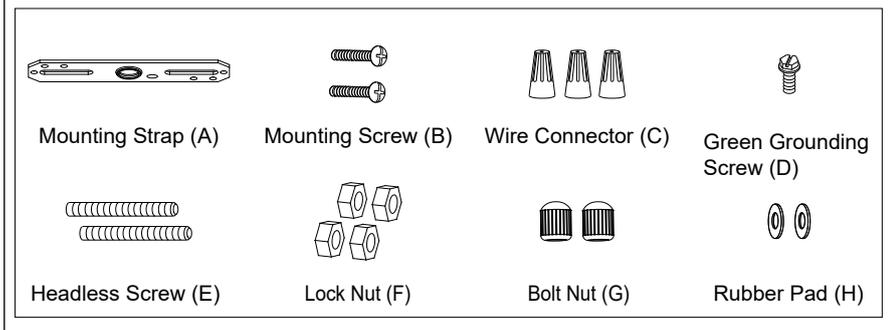

## Installation Steps


Turn off the power at fuse or circuit box

1. Thread two headless screws (E) through the mounting strap (A), then secure them with four lock nuts (F) (two on each side of the mounting strap (A).) Adjust the length of the headless screws (E) if necessary.

**Note: Make sure the headless screws are lined up horizontally to make the fixture level.**

2. Attach the mounting strap (A) to the outlet box using two mounting screws (B).
3. Pull out the source wires from the outlet box.  
Make wire connections using wire connectors (C) as follows:
  - Connect the hot wire (usually black insulation) from the fixture to the black wire from the power source.
  - Connect the neutral wire (usually white insulation) from the fixture to the white wire from the power source.
  - Attach the fixture grounding wire (usually green insulation or bare wire) to the mounting strap (A) with the green grounding screw (D).  
Then, depending on local code connect it to the house grounding wire with the wire connector (C).  
Carefully put all of the wires back into the outlet box.
4. Attach the canopy to the mounting strap (A) by inserting the headless screw (E), then secure it with two rubber pads (H) and the two bolt nuts (G).
5. Attach shade to fixture, then secure it with socket ring.
6. Install the bulbs (not included). Check relamping label at socket area or packaging for maximum wattage allowed .


Turn on the power at fuse or circuit box

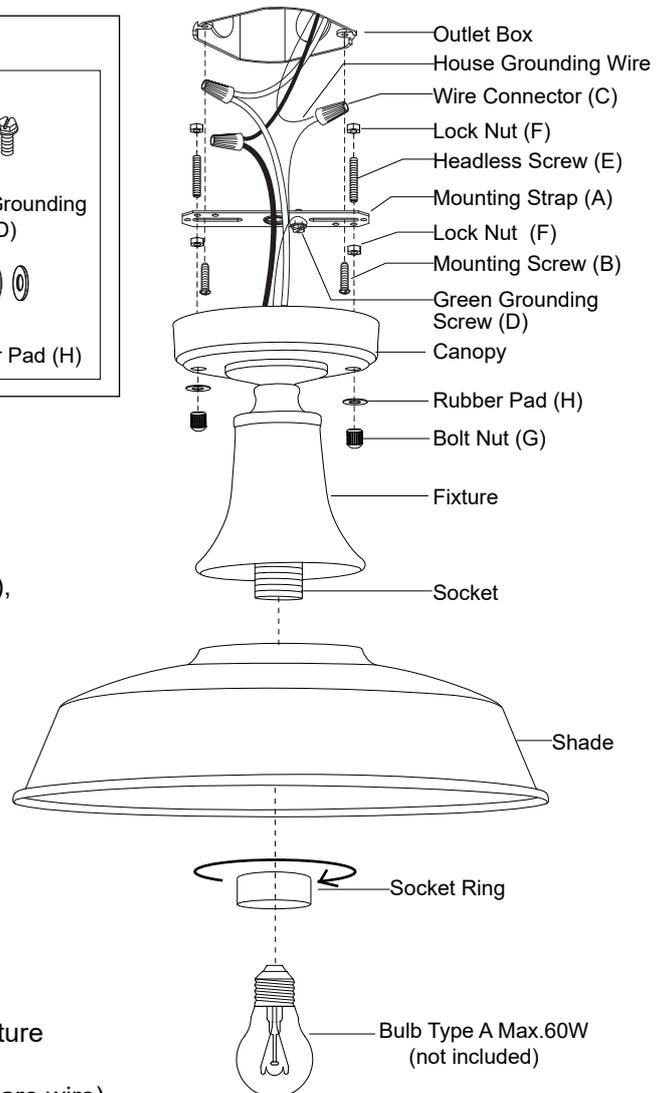

The following parts are available for re-order if damaged or missing.

**Spare Parts List:**

				→ Mounting Hardware 6199MM (1SET)
Mounting Strap (A)	Mounting Screw (B)	Wire Connector (C)	Green Grounding Screw (D)	
				
Headless Screw (E)	Lock Nut (F)	Bolt Nut (G)	Rubber Pad (H)	

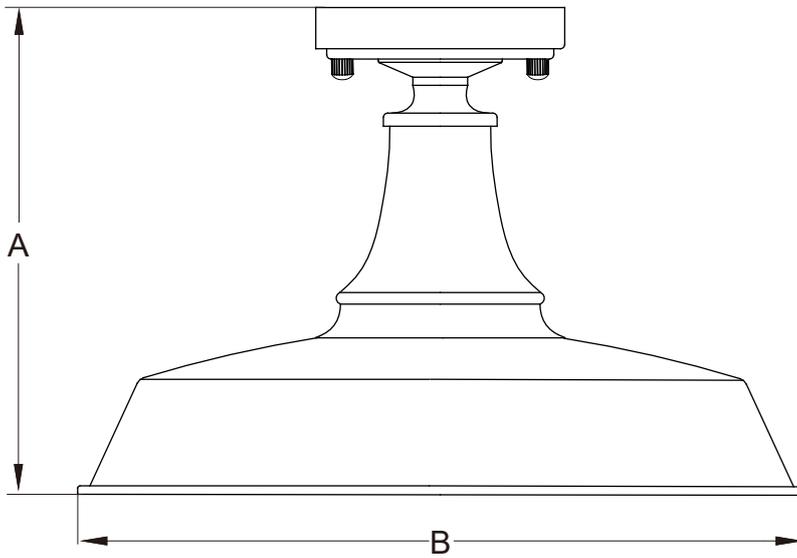

**A: 9-1/4"**

**B: 12"**