


## Installation manual for wall mount faucet ready vanity cabinet (US Utility Patented)

**Step 1:** Align the back splash module to the back top of the vanity and screw in the machine screw with allen wrench provided as shown.



**Step 2:** Spacer blocks are preinstalled. Kohler valve (Model K-410-K-NA) is required for retrofit installation. Screw in the wood screw as shown through the back of mounting plate of the valve as shown. Connect with flex pipe as shown from the Kohler valve to the rough in valve. Your valve installation is now complete!!

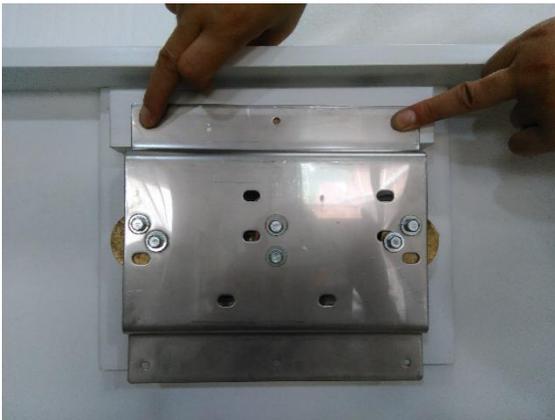

### **Step 3:**

Follow the instruction for the faucet trim to finish the installation of the faucet. Please note you can only use the faucet trims that works with Kohler valve (Model K-410-K-NA).