




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

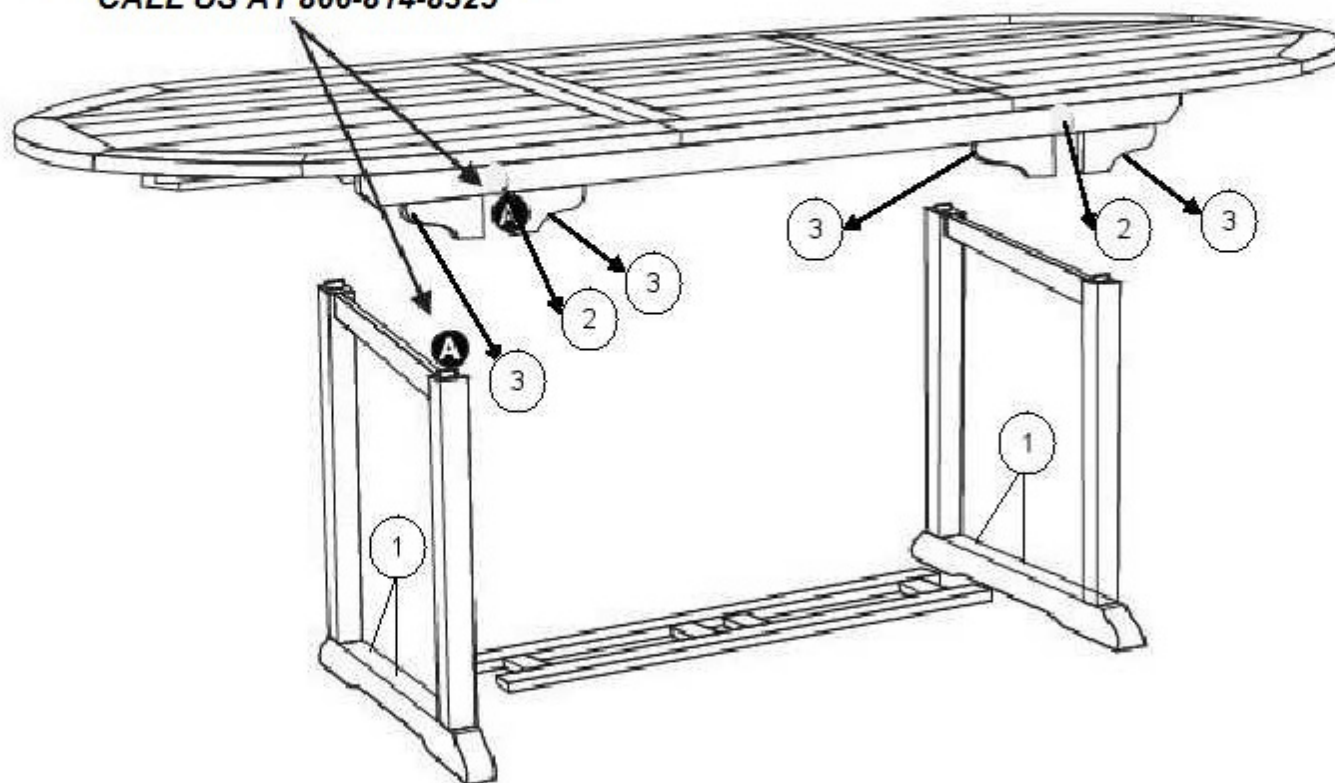


*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

AT18OVAL

Hardware

-  1. Custom Bolt 50 mm (4 Pcs)
-  2. Custom Bolt 25 mm (4 Pcs)
-  3. Screw 40 mm (8 Pcs)

Tool



Socket Wrench 4m/n Ht

Total Section

4 Section