
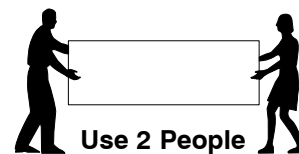


6001-1S 4D Full Bed

Assembly Instructions

WII-0919


1 Assembled View

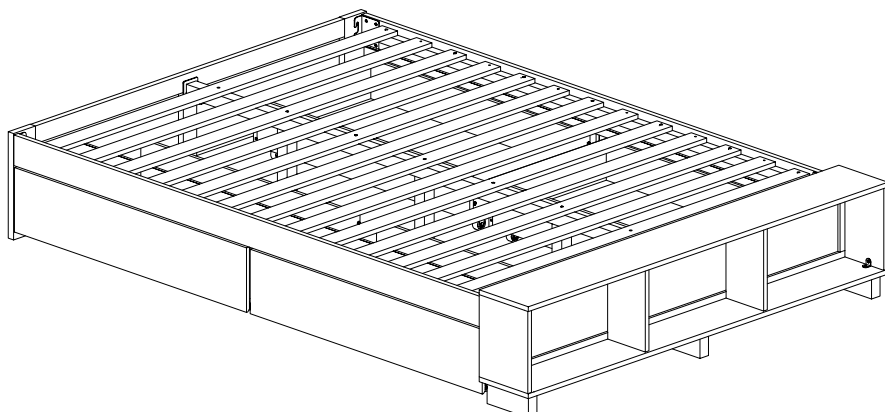


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

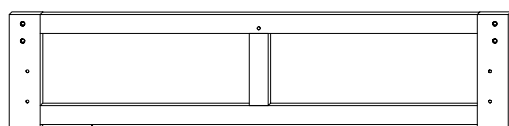


A Headboard Panel x 1



C Footboard Frame x 1



B Footboard Top Panel x 1



D Footboard Bottom Panel x 1



E Footboard Side Panel x 2



F Footboard Divider x 2




G Footboard Foot x 3




H Support Leg x 3



J Side Rail x 2



K Long Support x 1

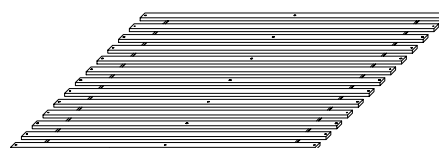

L Set of Bed Slats x 1


6001-1S 4D Full Bed

Assembly Instructions


W11-0919

2 Parts List

Parts in Box B:



M Drawer Face **x 4**




N Drawer Bottom **x 4**



O Drawer Back **x 4**



P Drawer Side **x 8**

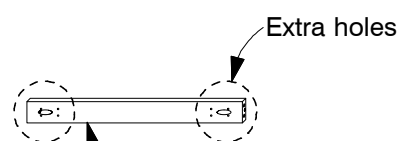


Q Drawer Rail **x 12**

3 Hardware List



1 M4 Allen Key **x 1**



2 Center Rail Bracket **x 2**



3 'L' Bracket **x 4**



4 Adjustable Foot **x 3**



5 Barrel Nut **x 3**




6 Wheel **x 16**



7 Wood Dowel (M8 x 30mm) **x 56**



8 Wood Screw (M4 x 16mm) **x 64**



9 Wood Screw (M4 x 32mm) **x 80**



10 Spring Washer **x 12**




11 Flat Washer **x 12**



12 M6 x 15mm JCB **x 12**



13 M6 x 20mm JCB **x 8**



14 M6 x 30mm JCB **x 2**



15 M6 x 40mm JCB **x 22**



16 M6 x 60mm JCB **x 6**



17 M6 x 100mm JCB **x 3**


6001-1S 4D Full Bed

Assembly Instructions


W11-0919

- 4 Assemble the Drawer Side (P) and Drawer Rail (Q) to the Drawer Back (O).**

x4

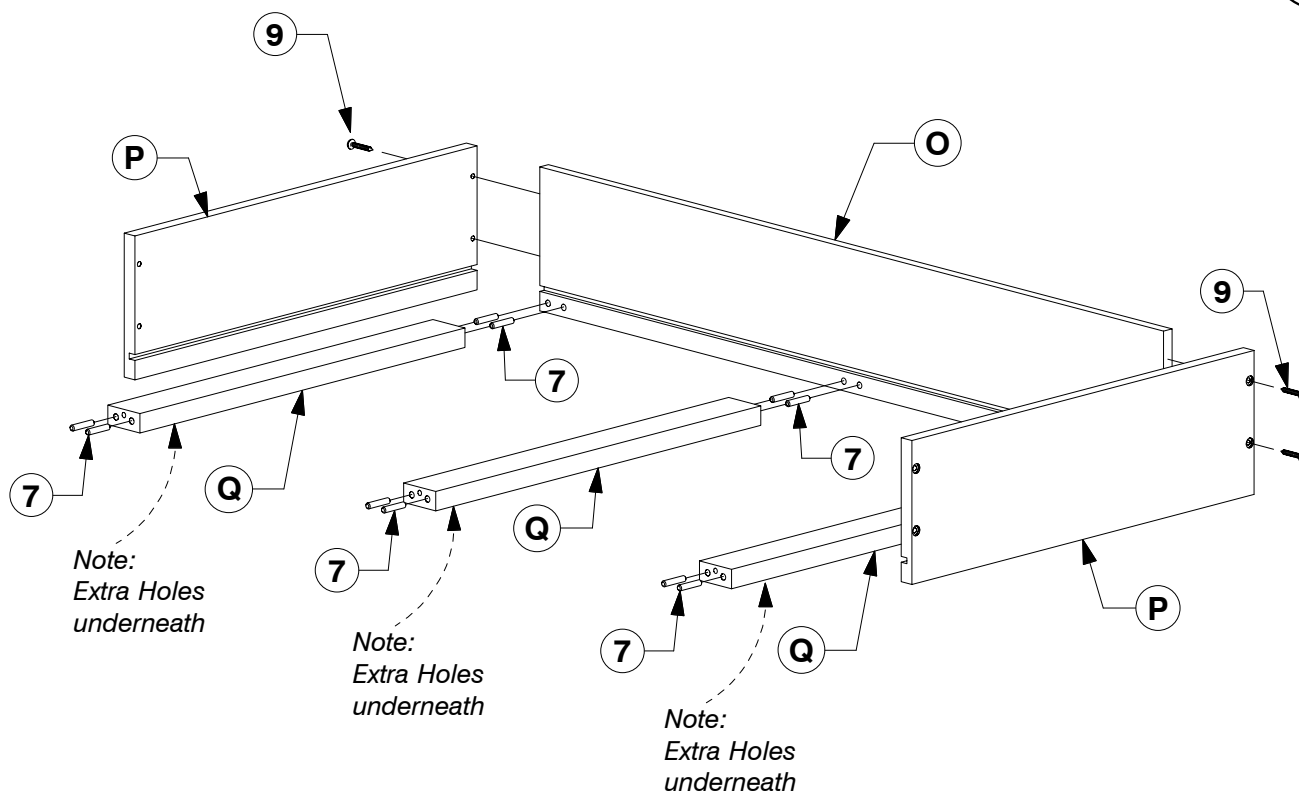

- 5 Slide the Drawer Bottom (N) into the groove on the Drawer Sides (P).**

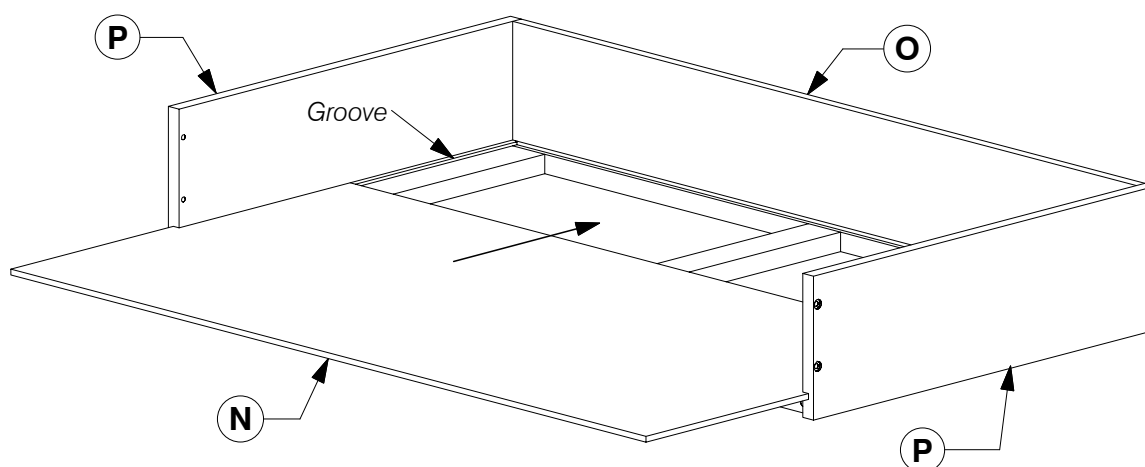


6001-1S 4D Full Bed


Assembly Instructions

W11-0919


- 6 Assemble the Drawer Face (M) to the Drawer Sides (P).**

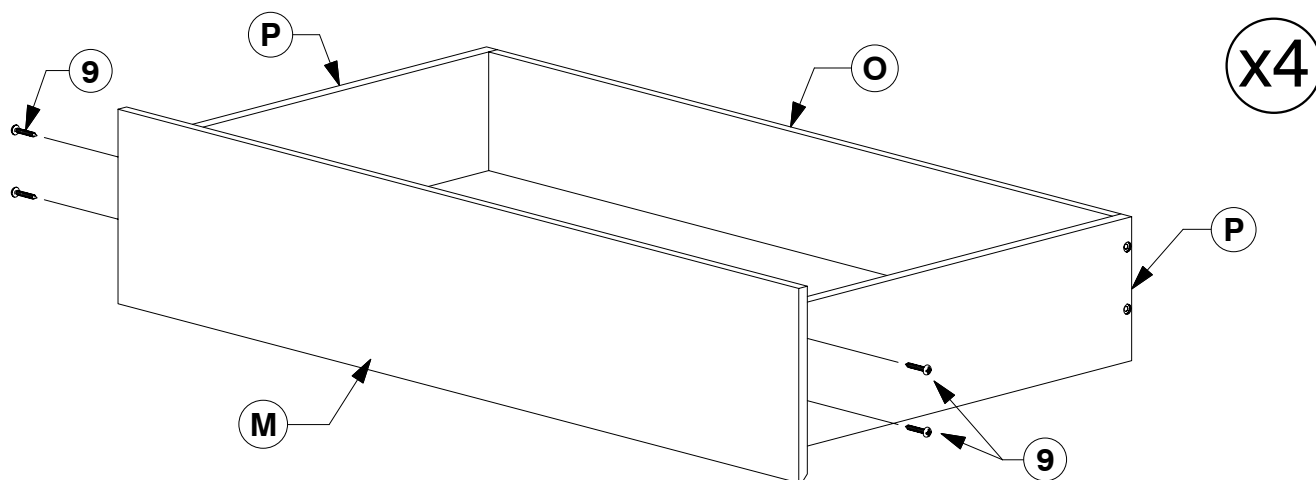

- 7 Turn the Drawer over to fit angled 32mm Wood Screws (9) to the Drawer Rails (Q).**

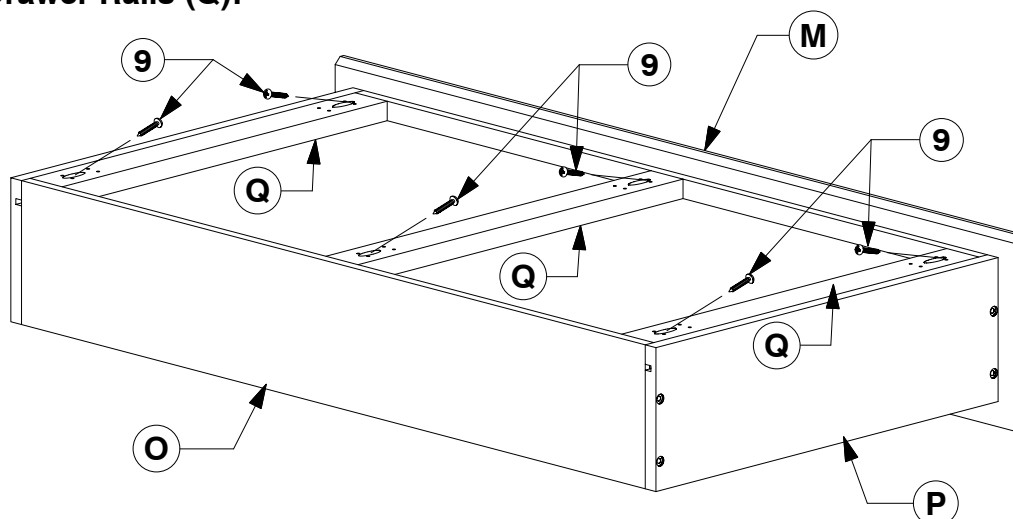

- 8 Fit the Wheels (6) to the Drawer Side Rail (Q).**

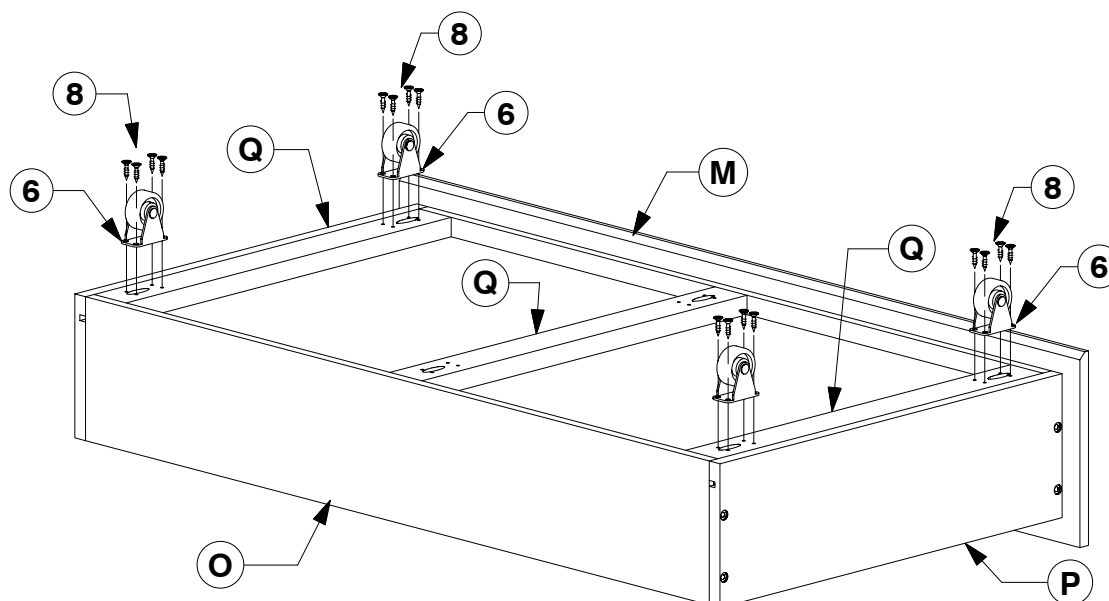


6001-1S 4D Full Bed


Assembly Instructions

W11-0919


- 9** Fix the Adjustable foot to the bottom of the Support Leg (H).

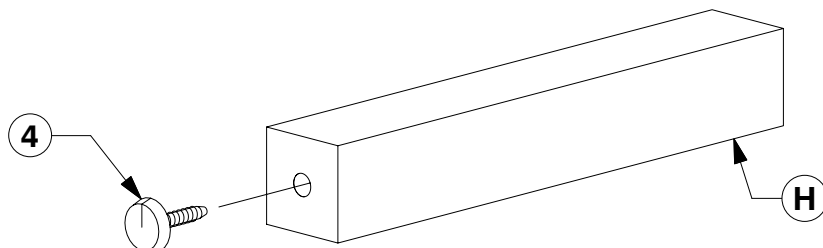

- 10** Fit the Center Rail Bracket to the Headboard Panel (A).

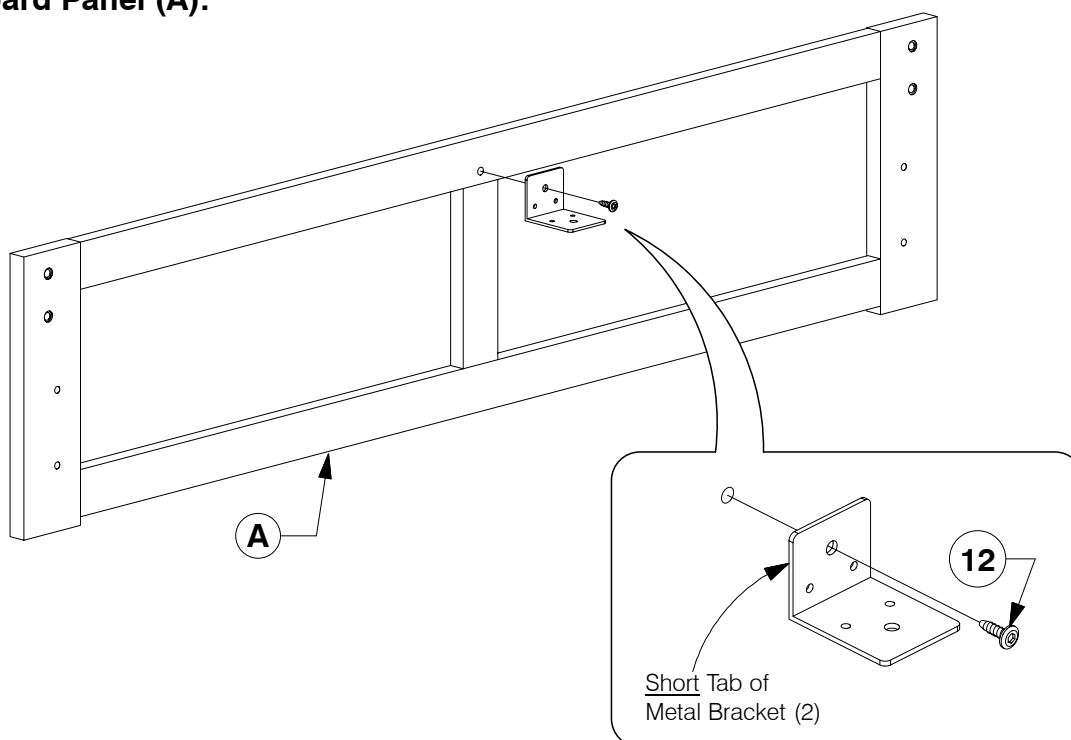

- 11** Fit the Center Rail Bracket to the Footboard Frame (C).

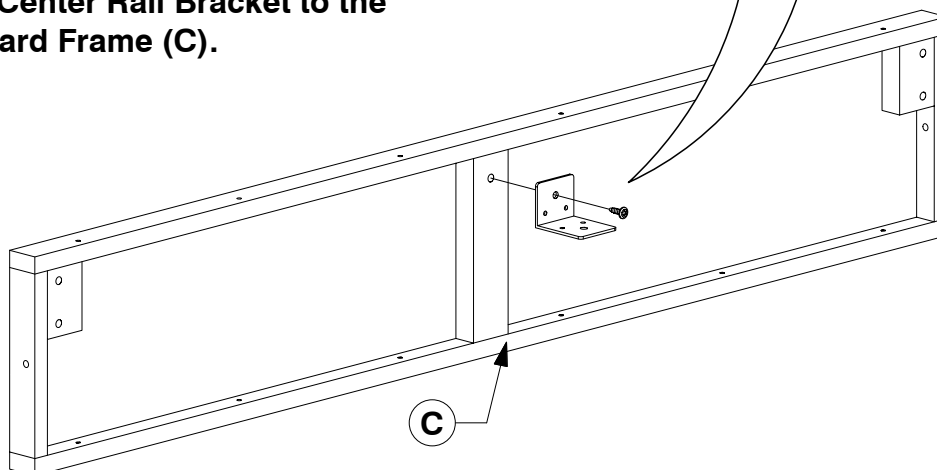


6001-1S 4D Full Bed


Assembly Instructions

WII-0919

- 12** Fit 'L' Bracket to the Footboard Side Panel (E).
Assemble the Footboard Side Panel (E) to the
Footboard Frame (C).

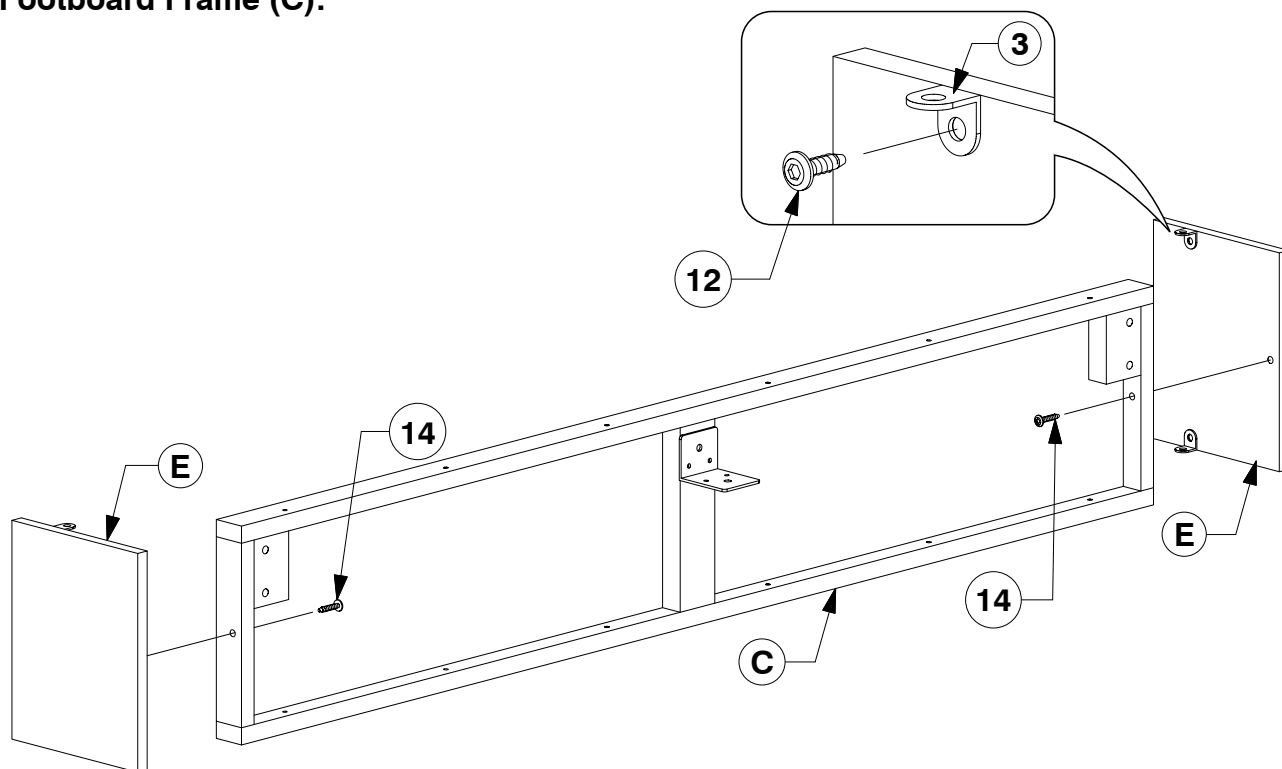

- 13** Fit the Footboard Foot (G) to the Footboard Bottom Panel (D).

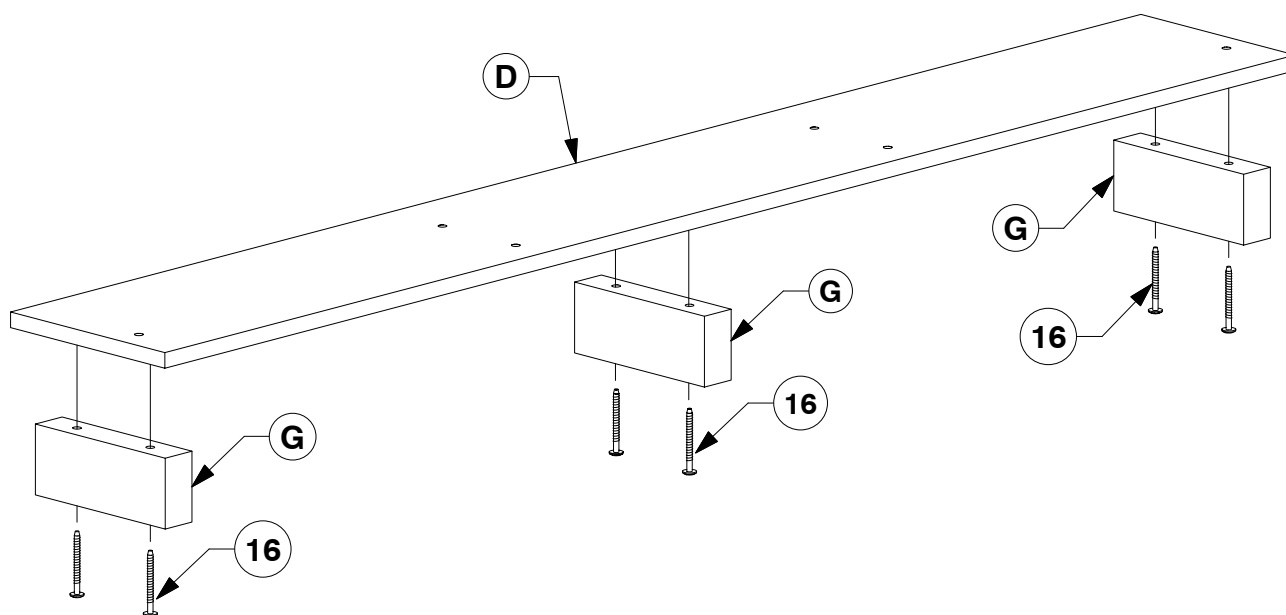


6001-1S 4D Full Bed


Assembly Instructions

WII-0919

- 14** Fit the Footboard Divider (F) to the Footboard Top & Bottom Panel (B & D) and tighten the 'L' Bracket with M6 x 15mm JCB.

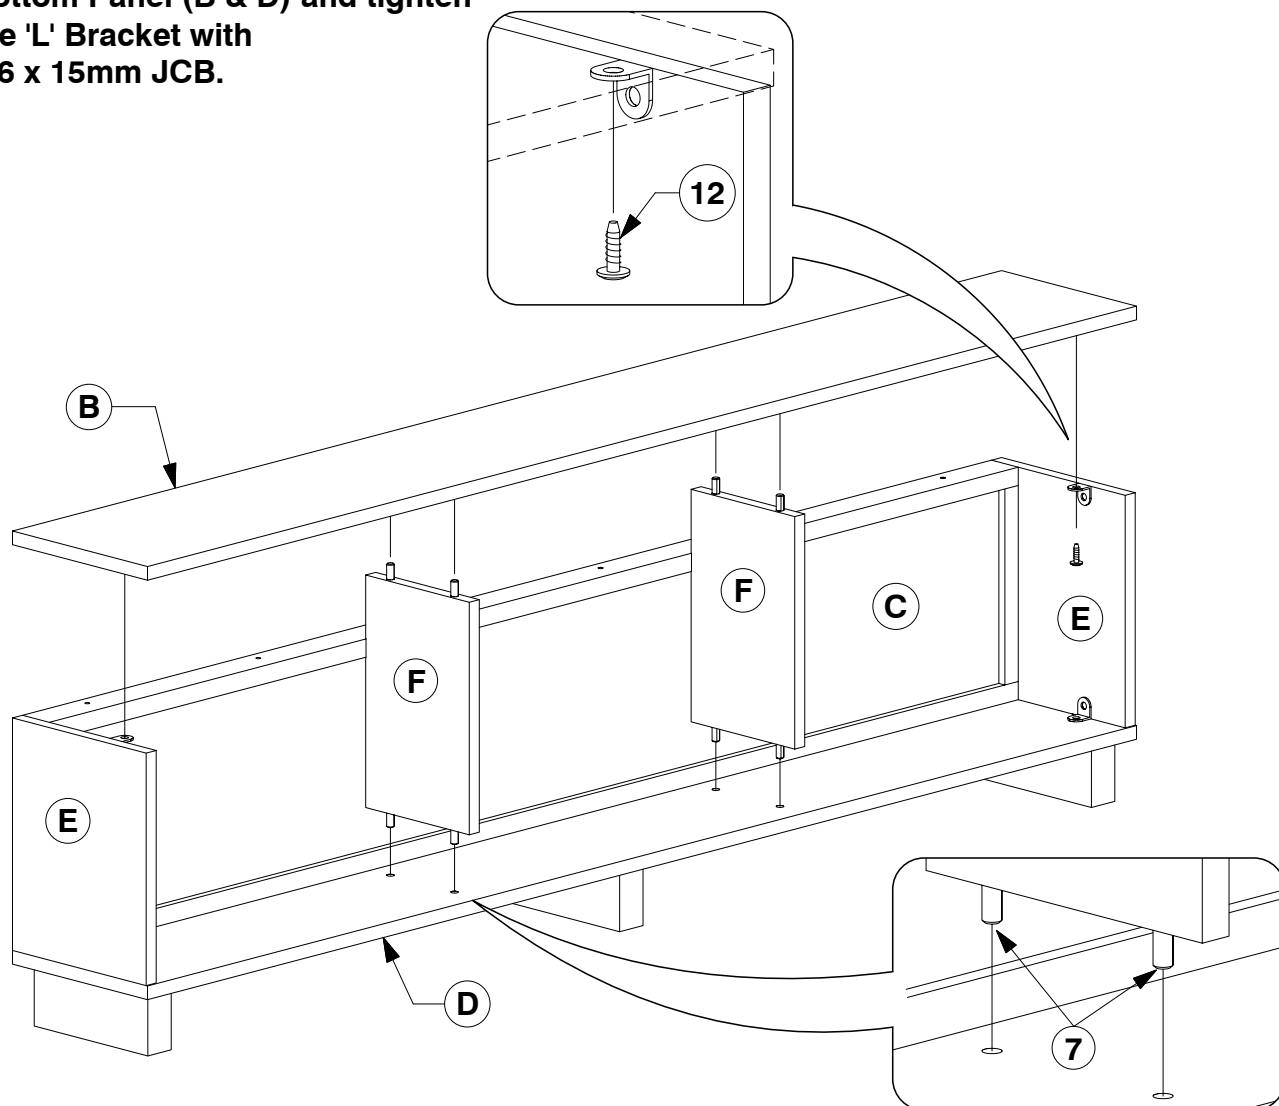

- 15** Fit the Footboard Top & Bottom Panel (B & D) with M4 x 32mm Wood Screw.

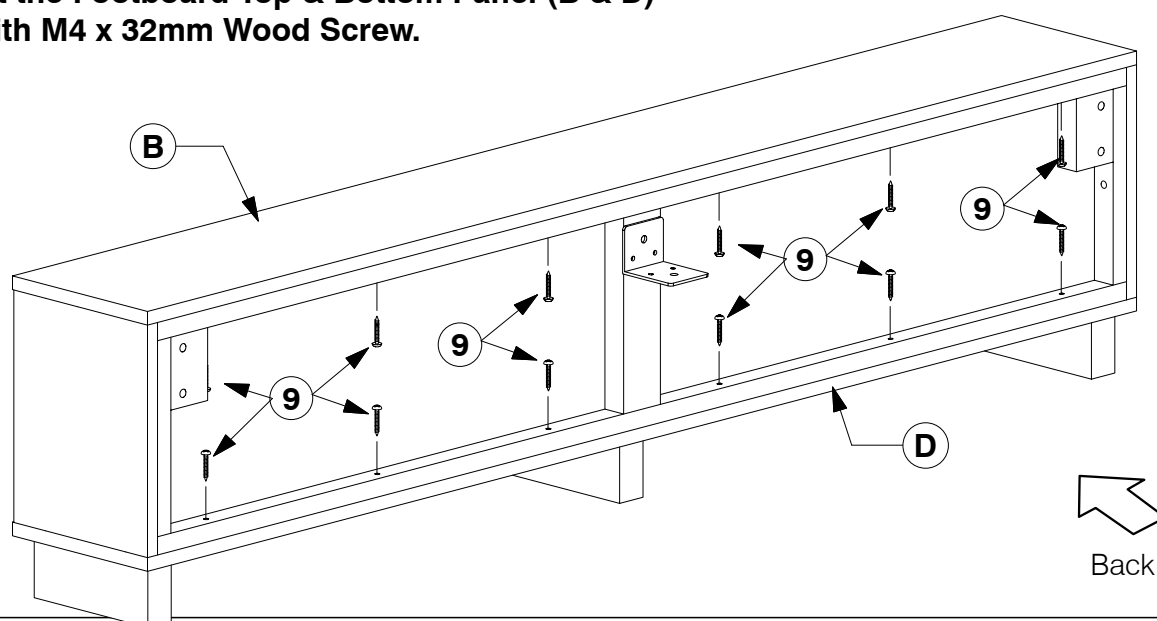


Back

6001-1S 4D Full Bed


Assembly Instructions

W11-0919

16 Assemble the Side Rail (J) to the Head / Footboard.

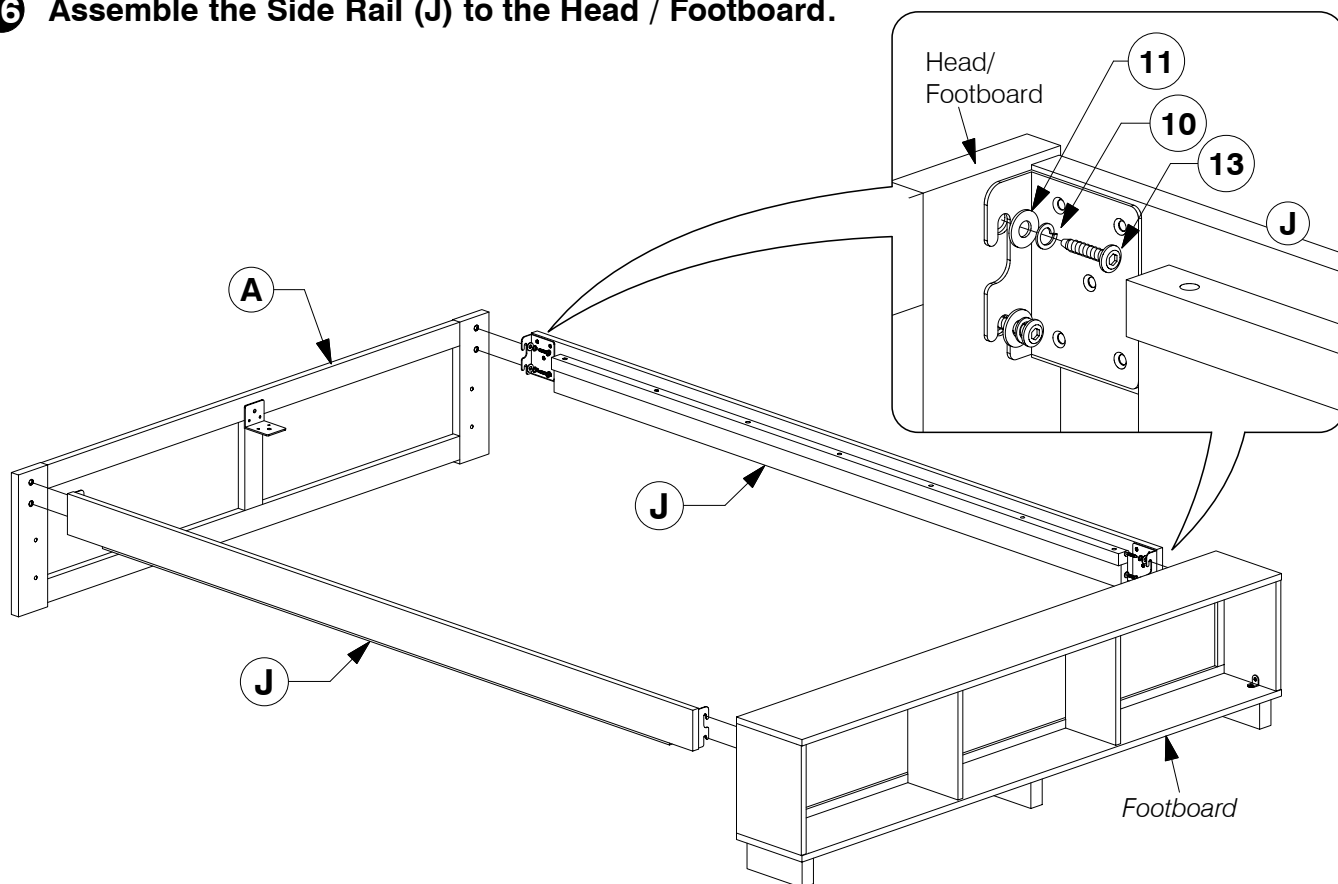

17 Bolt the Long Support (K) to the Center Rail Brackets on the Head / Footboard.

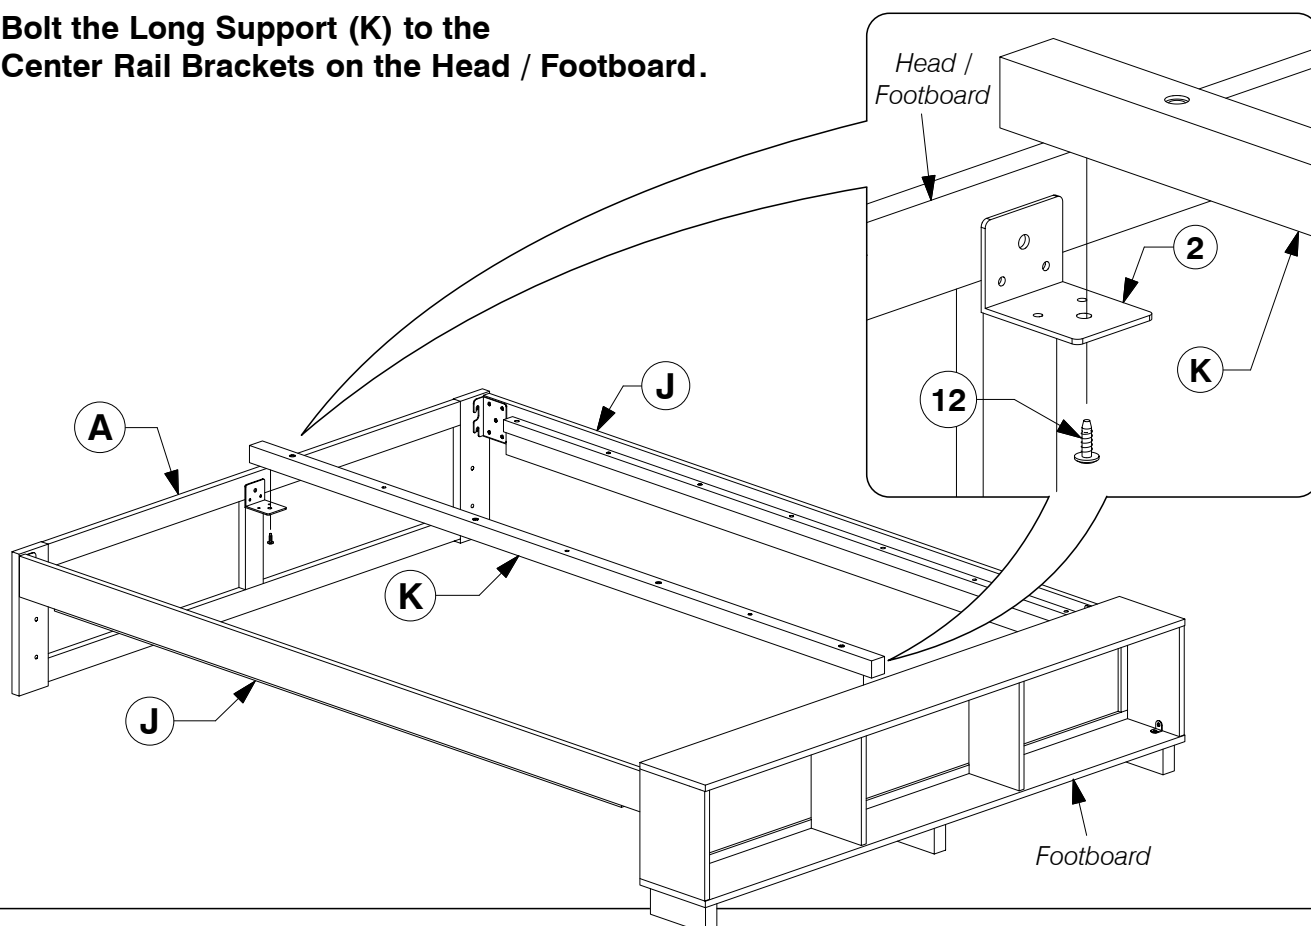


6001-1S 4D Full Bed


Assembly Instructions

WII-0919

- 18** Fit the first 3 Slats and assemble the Support Leg (H) to the Bed Slat (L). Bolt & screw the Bed Slats (L) to the Side Rail (J) & Long Support (K).

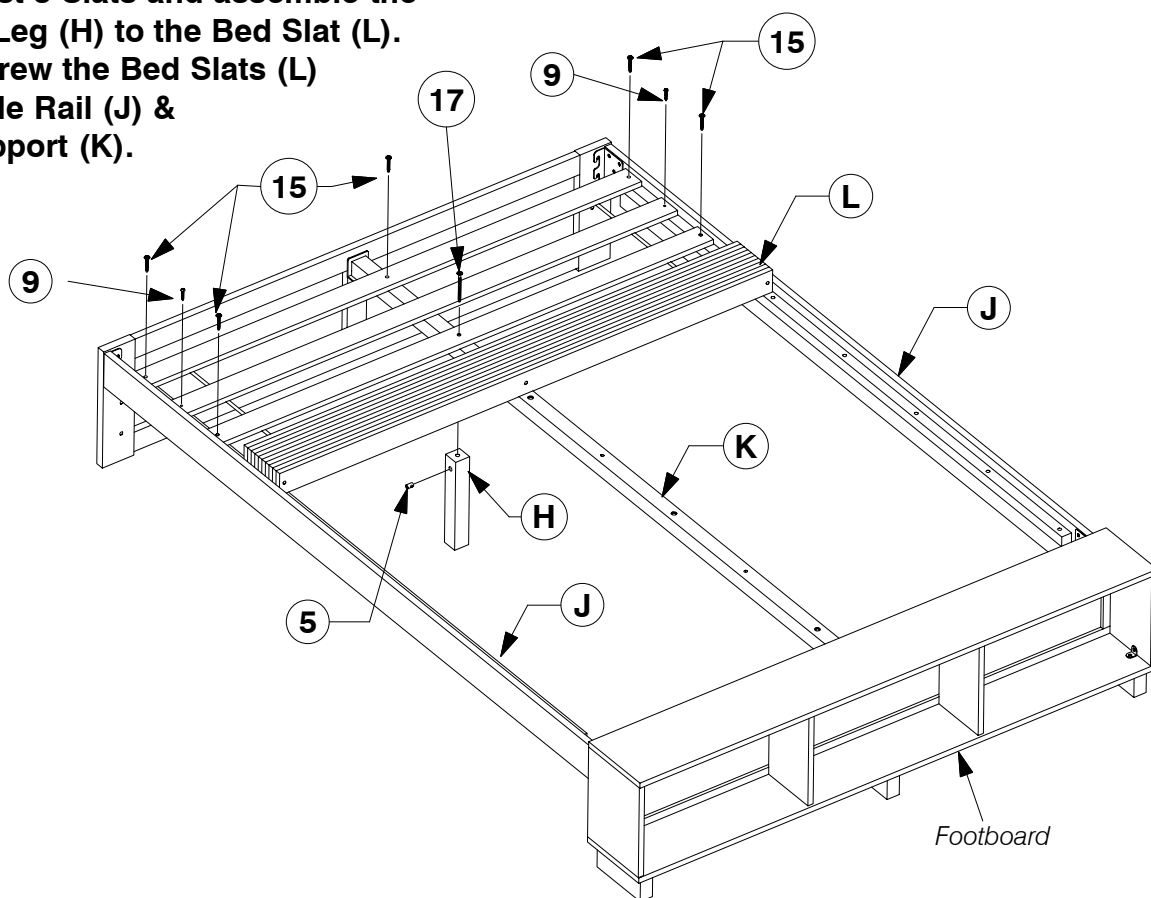

- 19** Fit the other Slats out and assemble the Support Leg (H) to the Bed Slat (L). Bolt & screw the Bed Slats (L) to the Side Rail (J) & Long Support (K).

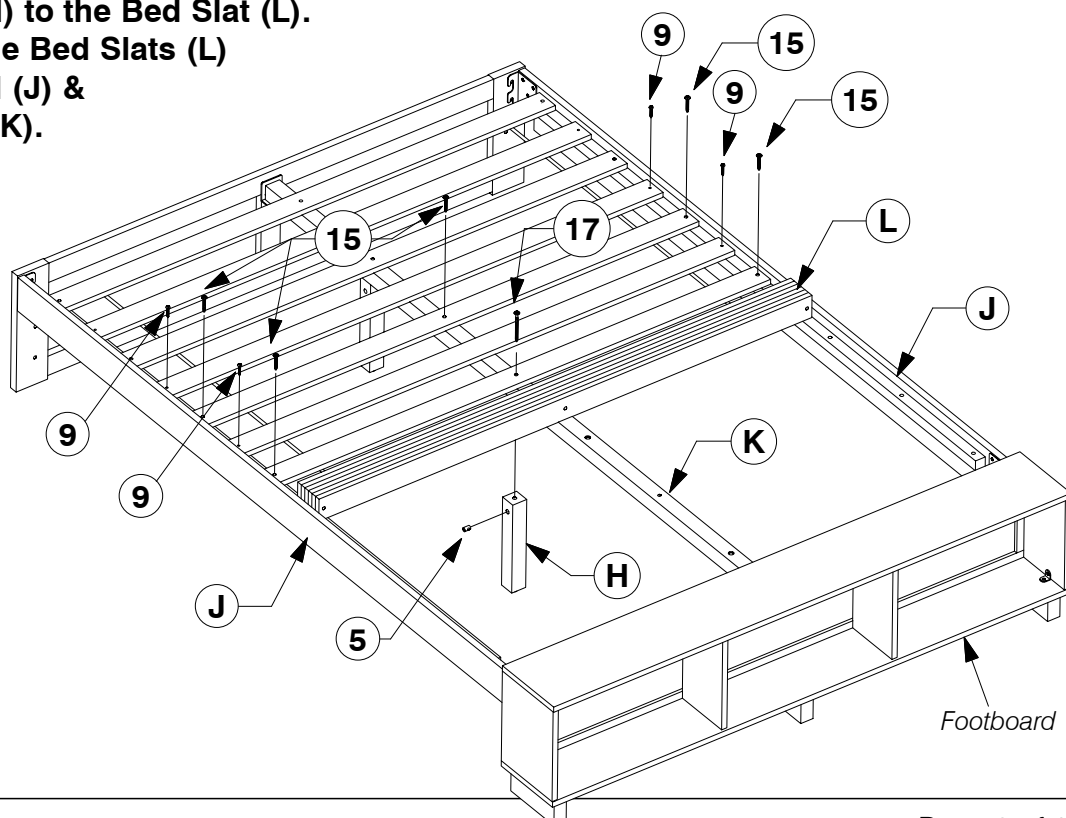


6001-1S 4D Full Bed

Assembly Instructions

WII-0919

- 20** Fit the other Slats out and assemble the Support Leg (H) to the Bed Slat (L). Bolt & screw the Bed Slats (L) to the Side Rail (J) & Long Support (K).

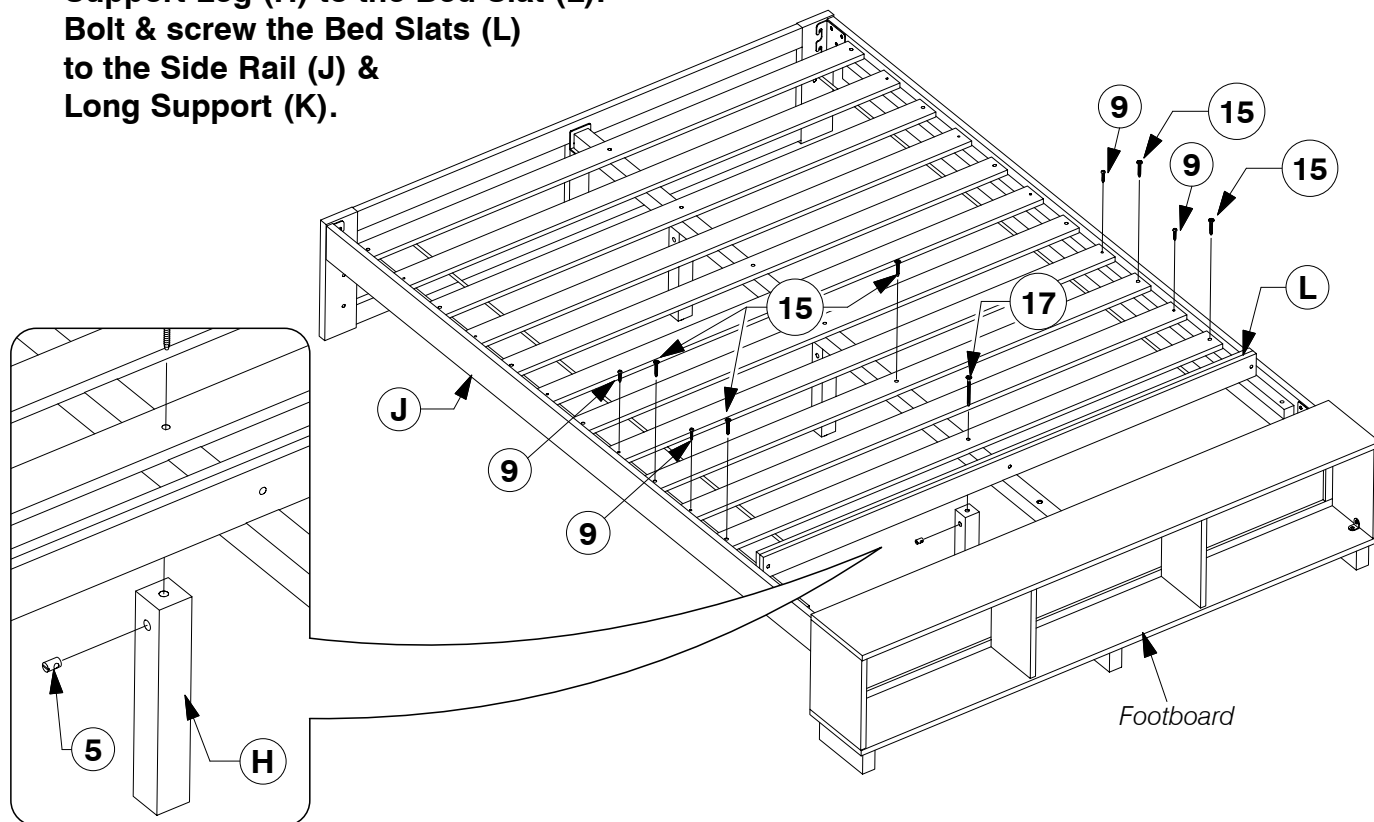

- 21** Bolt & screw the remaining Bed Slats (L) to the Side Rail (J).

Finally fit the assembled Drawers.

