For Style 1120P20 Assembly Instruction Sheet #IS- 1120P20

STEP 4 - Wire Conn

A.Install bulbs into sockats and push snugly into place B. Attach Glass rod to Fixture's Body. STEP 6 - Install Bulbs and Glass rod.

adiver, pliem, wire cuttern, wire strippern, electrical tape, safety glasses


is Required: Pathed screetifier, Philips screetifier, plans, who calters, who artispers, electrical tape, safety gasses. Int Searce: (42) G9 AMX 40W (htd. Include).

Include Amenaby Time: 10-20 mit utes
passifier: Identify and Inspect of parts before beginning installation. Check package content list and diagrams below to be sure of parts are
passifier: Identify and Inspect of parts before beginning Installation. Check package content list and diagrams below to be sure of parts are
passifier: If any parts are missing or damaged, do not allernyl to assemble, install, or operate the Status. Context customer service for explanament.

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a illomated electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the ficture. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing builbs. Make sure builbs are given sufficient time to cool before removal

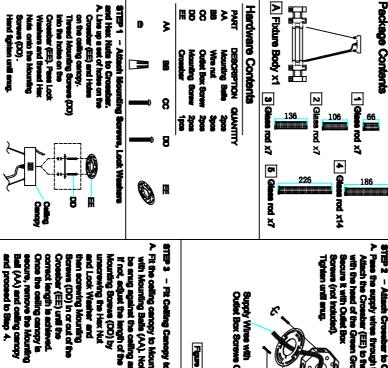

A. Pass the supply wires through the Grossbar (EE).
Attach the Grossbar (EE) to the Oufet Box (GC)
with the head of the Green Ground Sorew facing you.
Secure it with Oufet Box
Sorews (not included). STEP 3 — Fit Calling Canopy to Crossber Assembly STEP 2 - Attach Croseber to Outlet Box. ighten until erup. Supply Wires with Outlet Box Screws Ground Wire Figure 2

A. Fit the ceiling canopy to Mounting Screwe (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be snug against the ceiling and the Mounting Balls (AA). If not, adjust the length of the Screws (DD) in or out of the Croseber (EE) until the necrowing the Hex Nut lounting Screws (DD) by nd Look Washer and en screwing Mounting 8 ₹

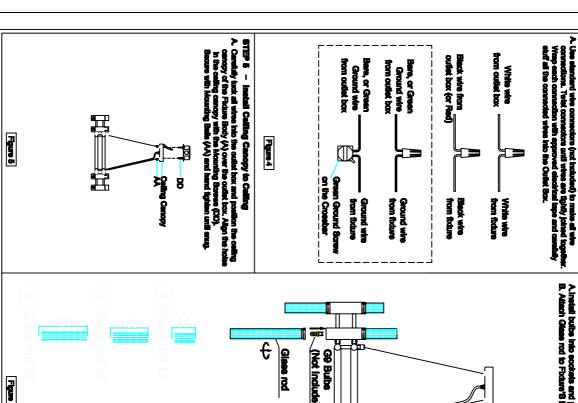


Figure 1

Figure 3

Figure 0