









# VICTORIA 6 DRAWER DRESSER

Assembly instructions:

PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	CABINET BODY		1
P2	LEG		4
P3	LEG ( CENTER )		1
P4	TILT KIT BRACKET		1


HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	BOLT		10
H2	SPRING WASHER		10
H3	FLAT WASHER		10
H4	ALLEN KEY		1


**NOTE:** PO# is located underneath/ inside of each item. Please be prepared to provide this # should any claim be necessary.

**CAUTION:** Item is heavy assembly should be performed by two people.

1

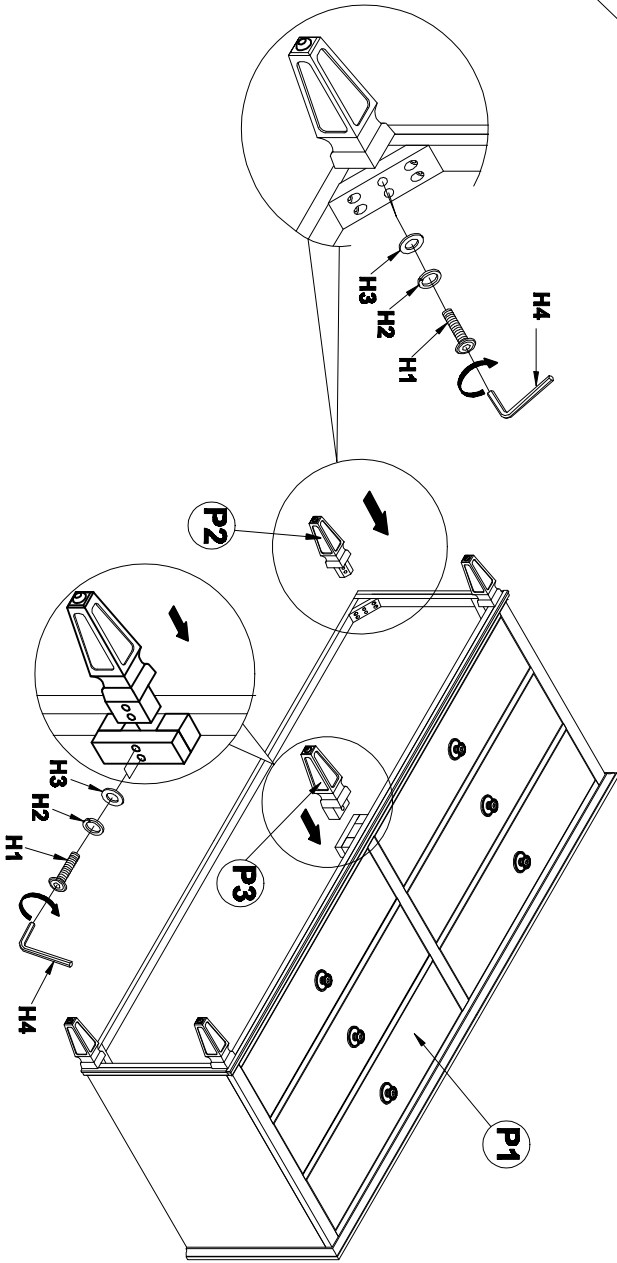

2

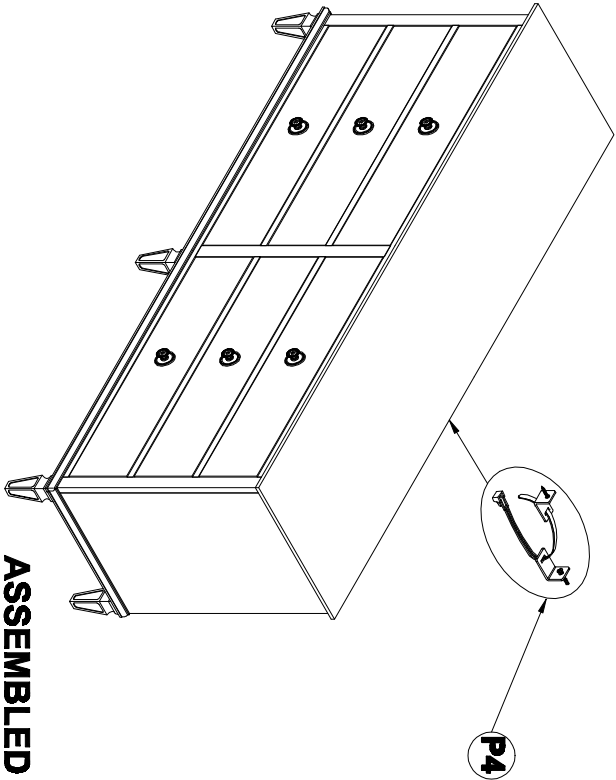

ASSEMBLED COMPLETE