

# ASSEMBLY INSTRUCTIONS

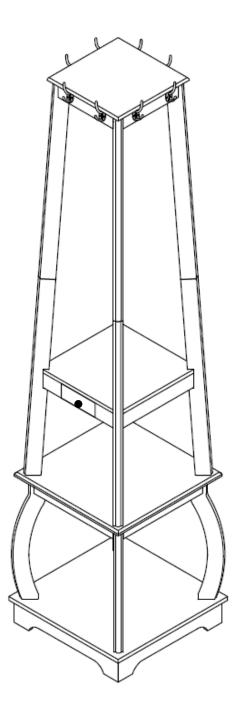

Page 1 of 12

- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Prepare a soft clean surface for assembly.
- To guard against color transfer, do not assemble directly on carpet, flooring, or other sensitive coverings.

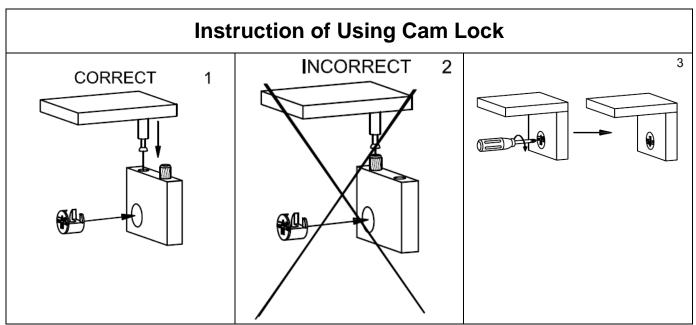

- Please do not over tighten cam locks. Please turn cam locks clockwise and stop when you feel tight.
- If the cam nuts won't turn or can't catch the cam pins, you can tighten or loosen the cam pins a little bit and try again.


#### Parts List


Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean padded surface. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.


			r		
(1).	Quantity Of	2 Post	(2).	Quantity Of 2	Post
(3).	Quantity Of 2	2 Post	(4).	Quantity Of 2	Post
(5)	Quantity Of	1 Top Panel	(6).	Quantity Of 1 She	lf w/ Drawer
(7).	Quantity Of	1 Shelf	(8).	Quantity Of 4	Bottom Post
(9).	Quantity Of	1 Bottom Panel			

	Hardware List				
(A).	Quantity Of 20 Bolt	(B). Quantity Of 20 Spring washers			
(C).	Quantity Of 20 Flat washers	(D). Quantity Of 1 Allen Wrench			
(E).	Quantity Of 16 Screw	(F). Quantity Of 8 Metal Hook			
(G).	Quantity Of 1 Knob with bolt	e To			
(G).	Quantity Of 1 Knob with bolt				

Assembly Tool Required: Phillips Screwdriver (Not Included).




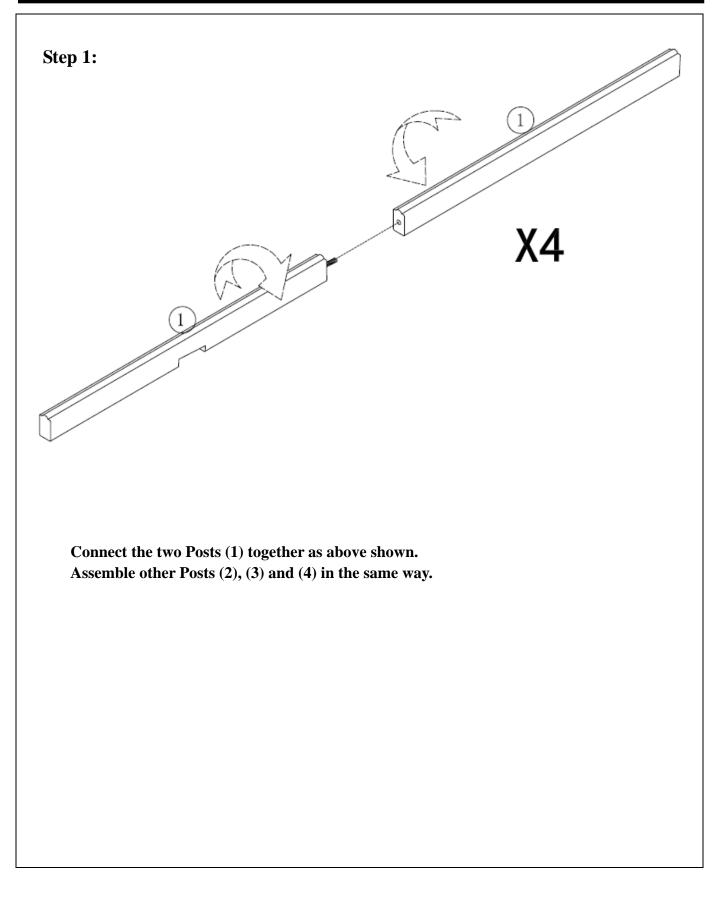

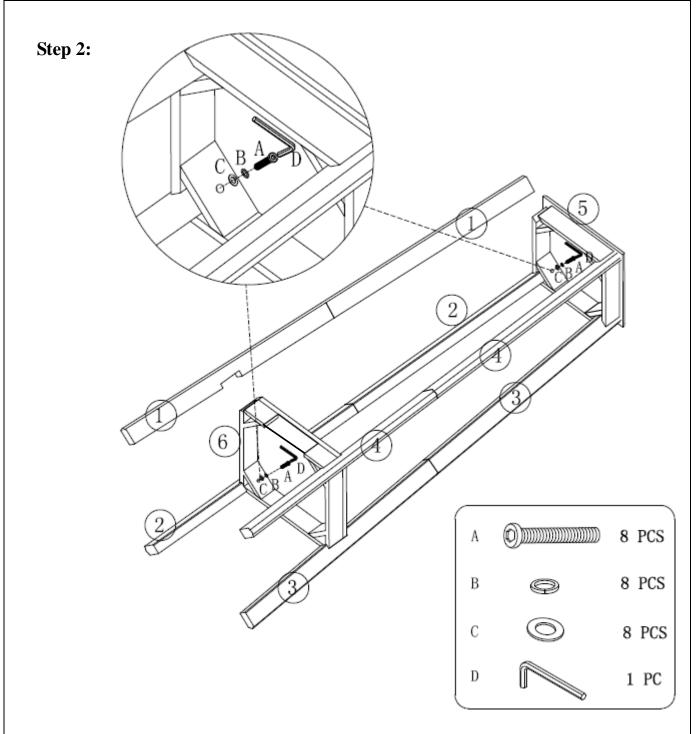


Assemble Posts (1), (2), (3), (4) to Top Panel (5) and Shelf w/Drawer (6) using Bolts (A) with Spring Washers (B) & Flat Washers (C) by Allen Wrench (D).


Note: Please do not tighten bolts until all of them are attached.

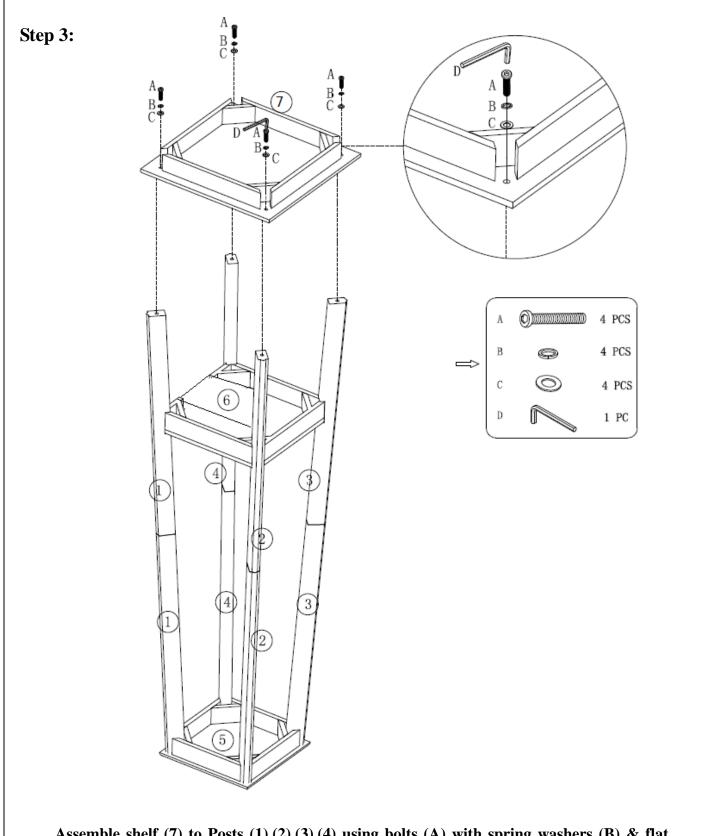

Assemble shelf (7) to Posts (1),(2),(3),(4) using bolts (A) with spring washers (B) & flat washers(C) by Allen Wrench.

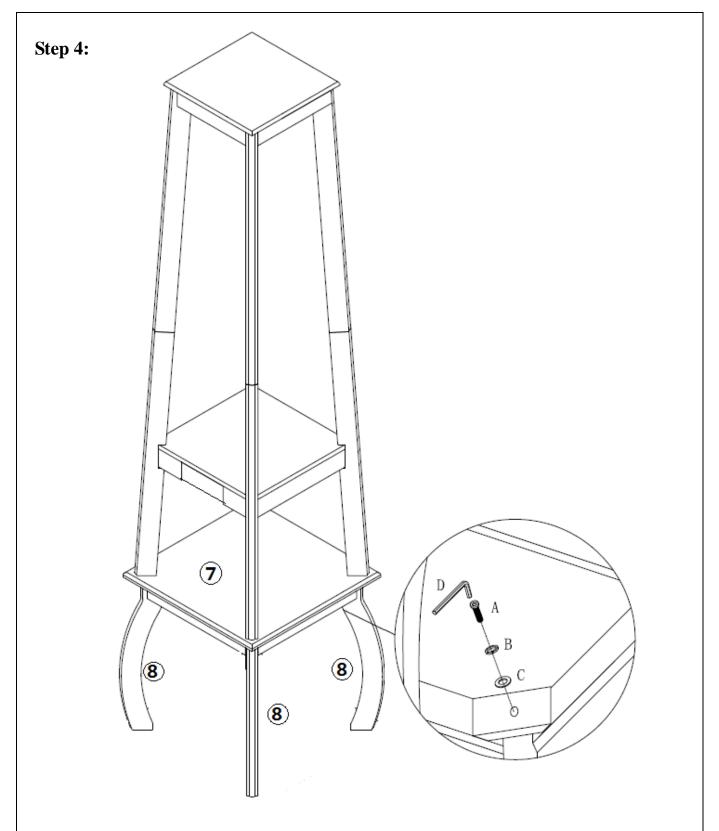

Assemble Bottom Posts (8) to Shelf (7) using Bolts (A) with Spring Washers (B)& Flat Washers (C) by Allen Wrench.

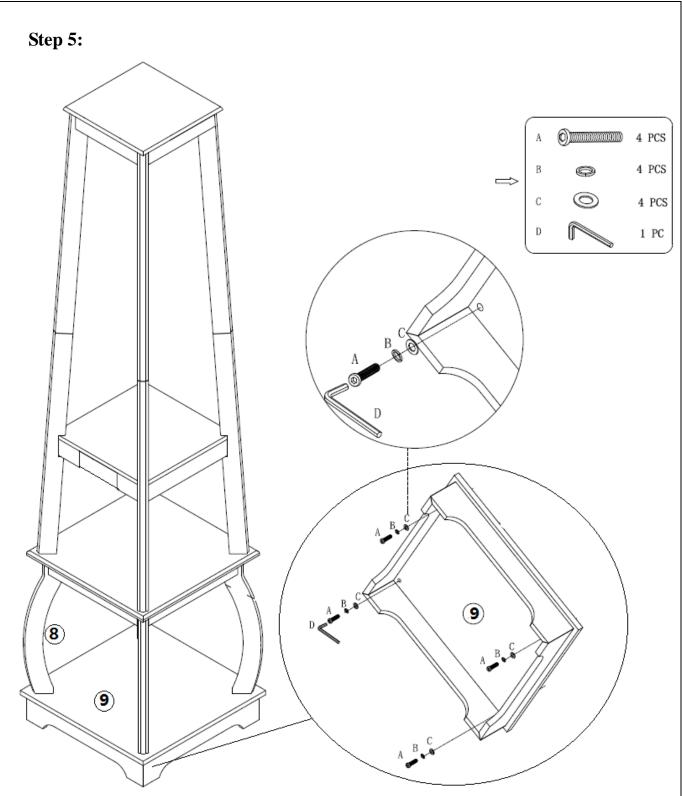

Assemble the Bottom Panel (9) to Bottom Legs (8) using Bolts (A) with Spring Washer(B) and Flat Washers (C).

Note: Please do not tighten bolts until all of them are attached.

