

9730 Full / Queen Headboard

Assembly Instructions

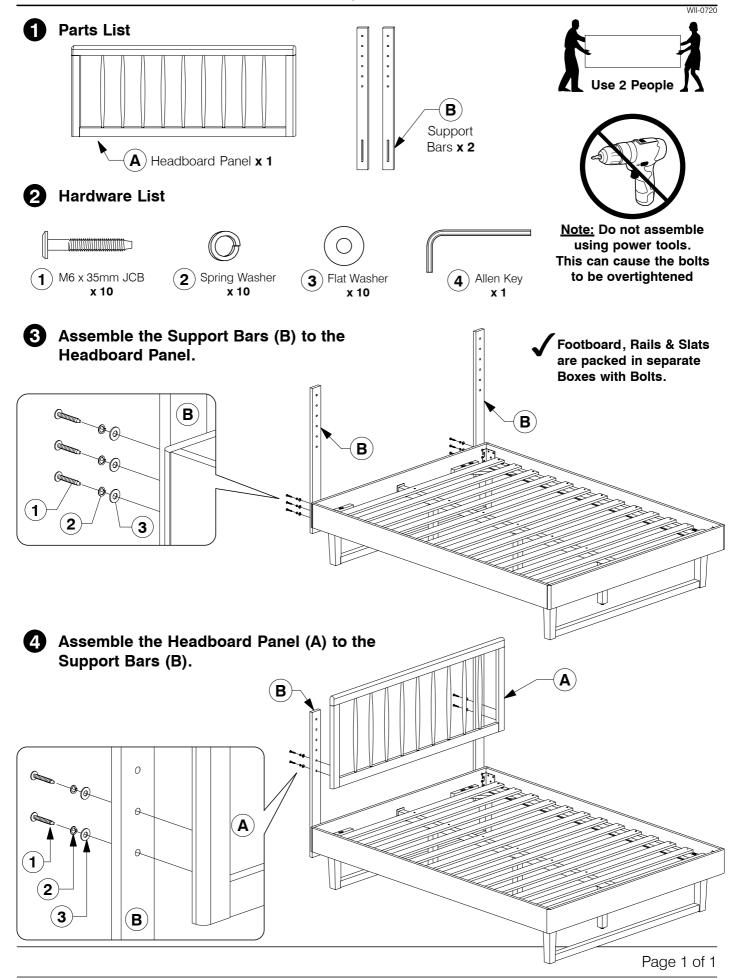



Assembly Instructions

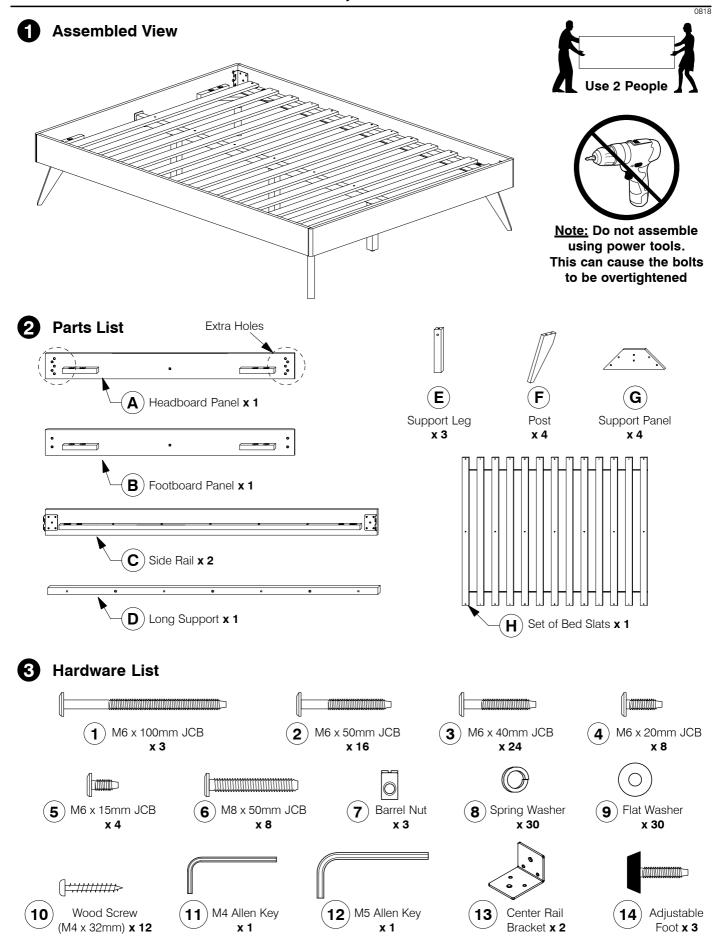


Assembly Instructions

4 Fix the Adjustable foot to the bottom of the Support Leg (E).

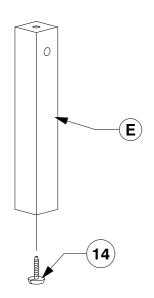

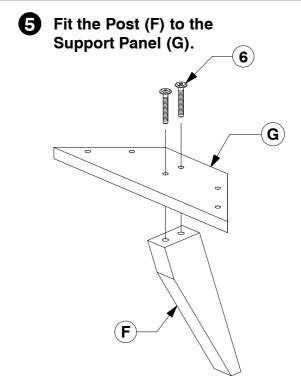



6 Fit the Center Rail Bracket to the Headboard Panel (A).

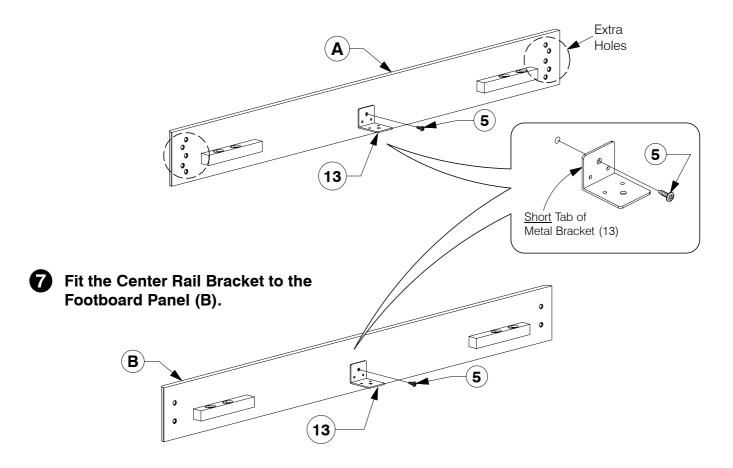

Assembly Instructions


8 Bolt the assembled Support Panel (G) to the Side Rail (C).

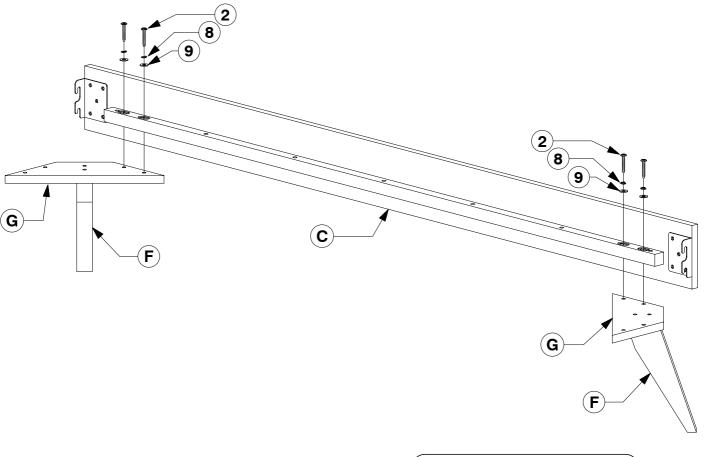

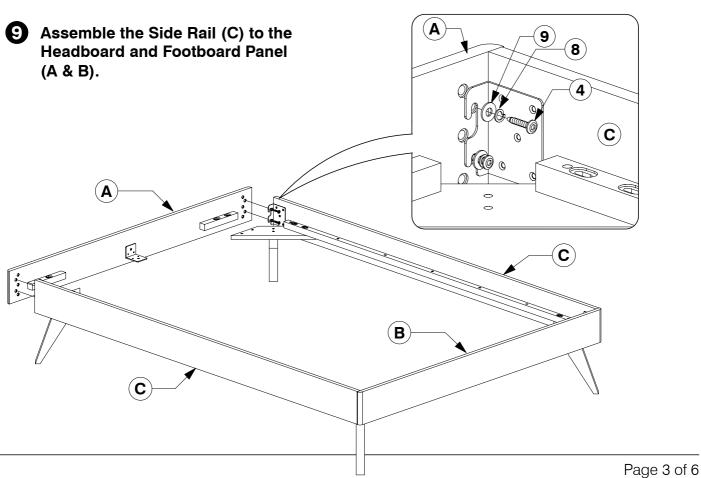


081


Assembly Instructions

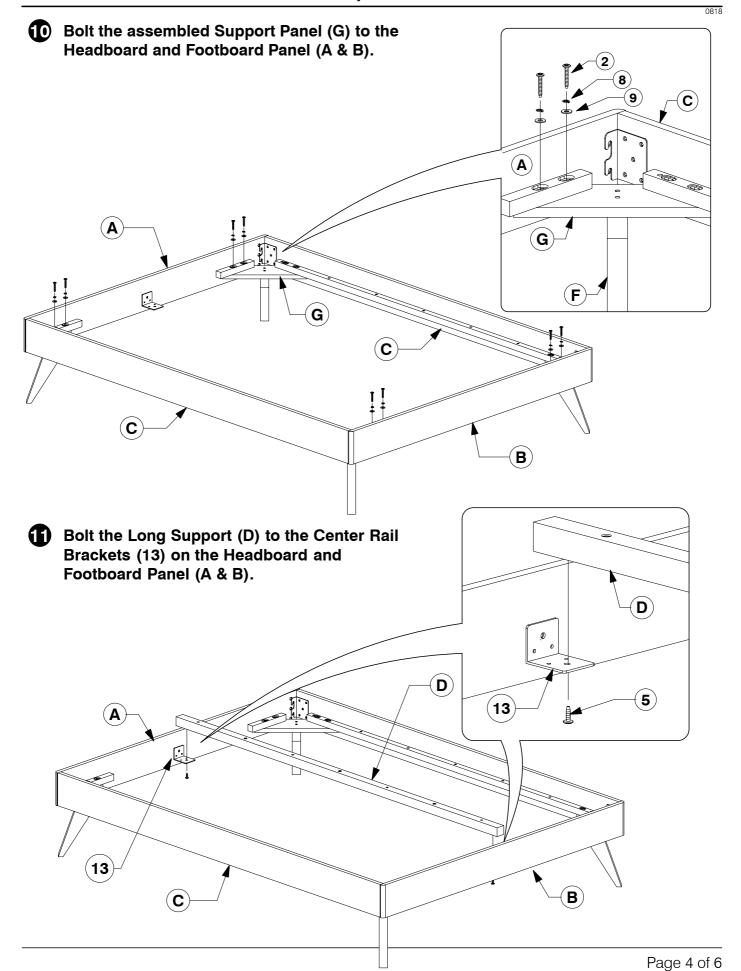

Assembly Instructions


010

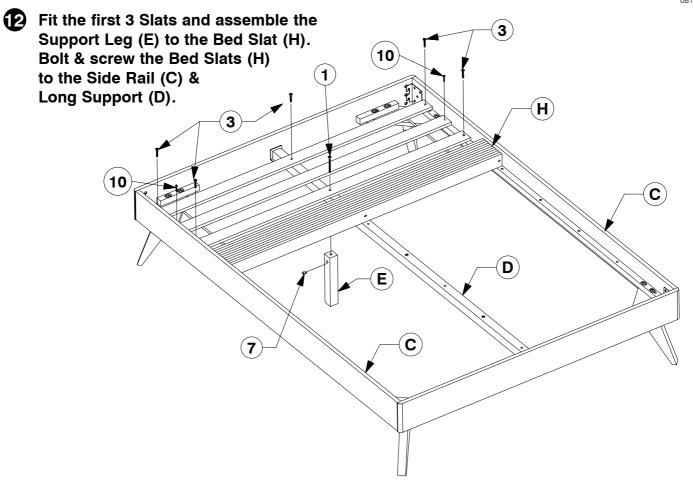

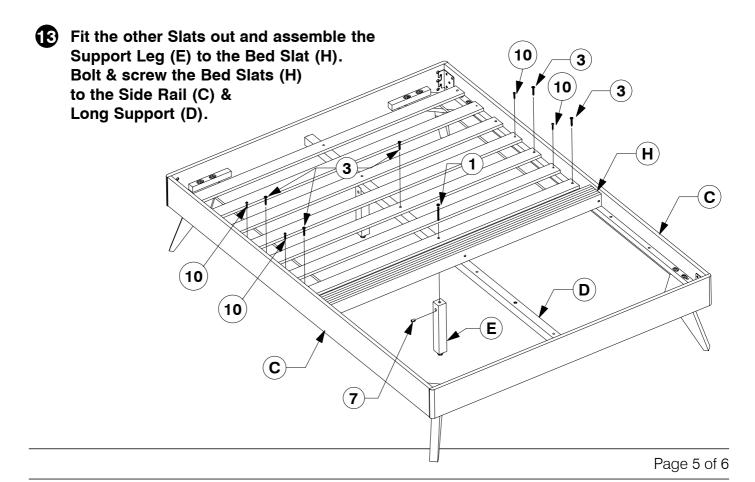


Assembly Instructions

Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (H). Bolt & screw the Bed Slats (H) to the Side Rail (C) &

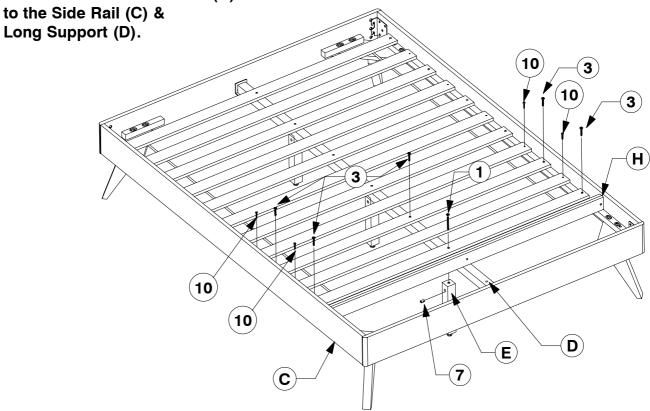

Bolt & screw the remaining Bed Slats (H) to the Side Rail (C).

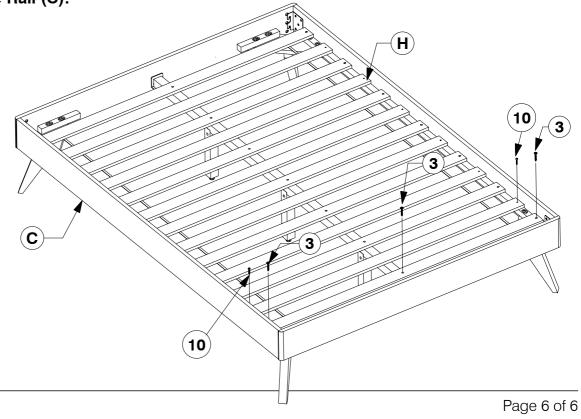

0818