

JONATHAN ADLER


Assembly Instructions:

Step 1: Assemble Legs -

Carefully place the Cabinet (A) upside down on a carpet or non-marring surface.

2 PEOPLE REQUIRED to place credenza upside down on a carpet or non-marring surface.

Install Legs (B) into Cabinet (A) using Bolt (1), and Allen Key (2).

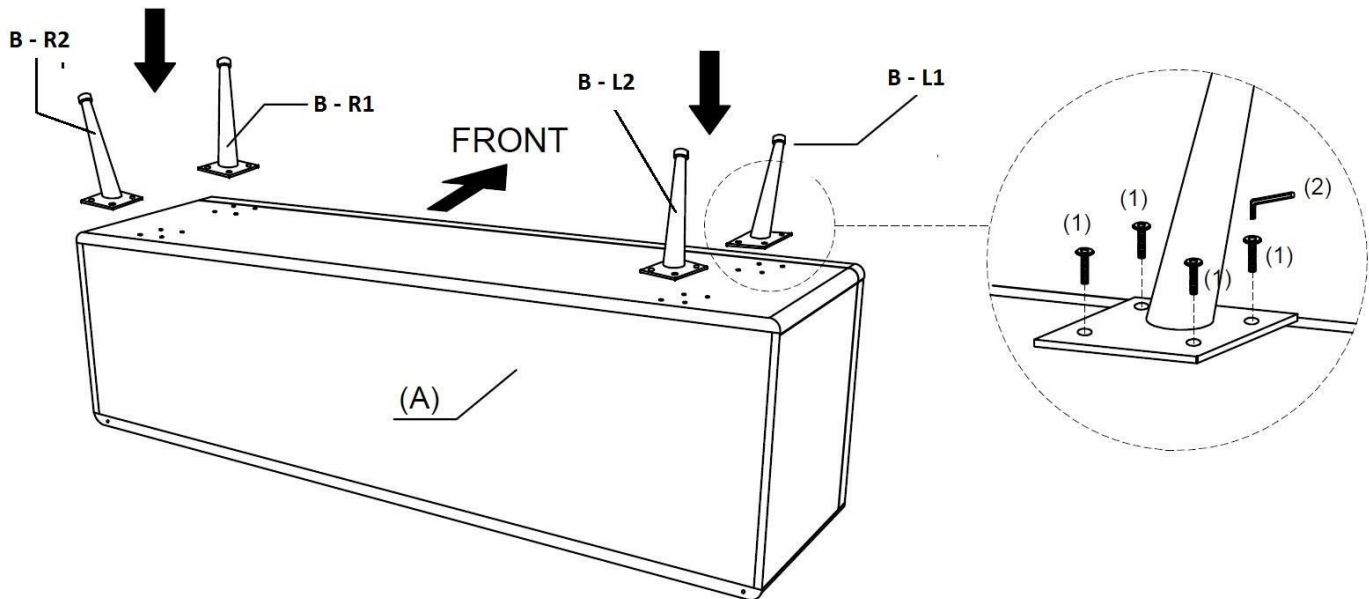

Step 2: Turn the cabinet upright.

The Credenza is ready to use. **PUSH TO OPEN THE DOORS**

