








Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use. For your safety and ease, assembly by two or more adults is recommended.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description		QTY
P1	Back Cushion		1
P2	Seat Frame		1
P3	Left Back Leg	 (P3)	1
P4	Right Back Leg	 (P4)	1
P5	Left Arm with Leg	 (P5)	1
P6	Right Arm with Leg	 (P6)	1
P7	Seat Cushion		1

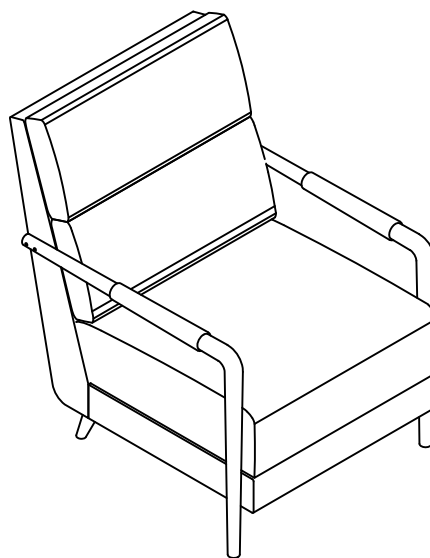

Hardware List

Item	Description		QTY
H1	Big Short Bolts Ø5/16"×1"L		6
H2	Big Long Bolts Ø5/16"×2"L		5
H3	Small Bolts Ø1/4"×1-1/2"L		8
H4	Big Lock Washers 5/16"		11
H5	Big Flat Washers 5/16"×19mm		11
H6	Big Allen Wrench 5/16		1
H7	Small Lock Washers Ø1/4"		8
H8	Small Flat Washers 1/4"×12mm		4
H9	Small Flat Washers 1/4"×19mm		4
H10	Small Allen Wrench 1/4		1
H11	Wooden Plugs		4

DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Note: It will take around 15 minutes to assemble the chair by an adult.

Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the left back leg (P3) and right back leg (P4) to the bottom of back cushion (P1) as shown below.

(H1)x6 Big Short Bolts Ø5/16"*1"L




(H4)x6 Big Lock Washers 5/16"



(H5)x6 Big Flat Washers 5/16"*19mm



(H6)x1 Big Allen Wrench Ø5/16"

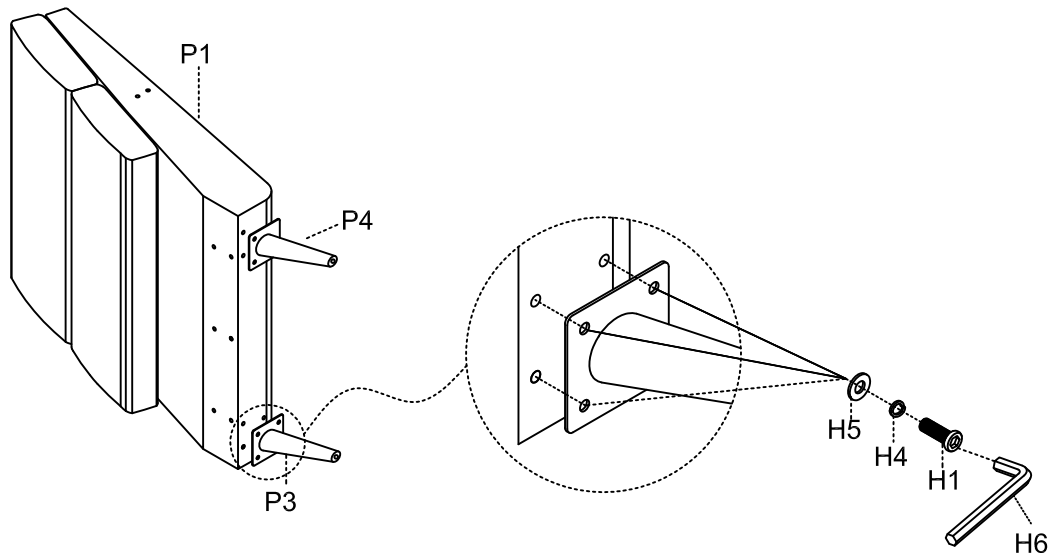

Step 2. Attach the seat frame (P2) to the assembled back cushion (P1) as shown below. **Do not tighten the bolts on this step.**

(H2)x5 Big Long Bolts Ø5/16"*2"L




(H4)x5 Big Lock Washers 5/16"



(H5)x5 Big Flat Washers 5/16"*19mm




(H6)x1 Big Allen Wrench 5/16"

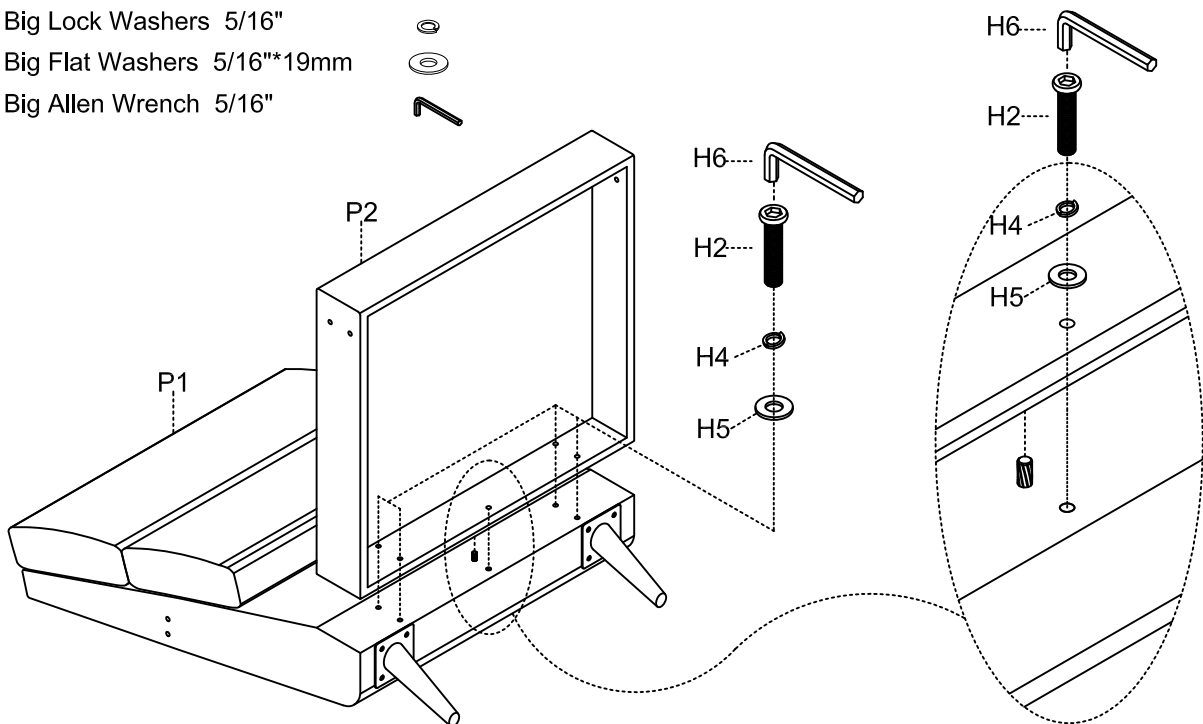


Step 3. Attach left arm with Leg (P5) and right arm with Leg (P4) to the assembled seat frame (P2) and back cushion (P1) as shown below.

- (H3)x8 Small Bolts $\varnothing 1/4 \times 1-1/2$ "L
- (H7)x8 Small Lock Washers 1/4"
- (H8)x4 Small Flat Washers 1/4"×12mm
- (H9)x4 Small Flat Washers 1/4"×19mm
- (H10)x1 Small Allen Wrench 1/4"

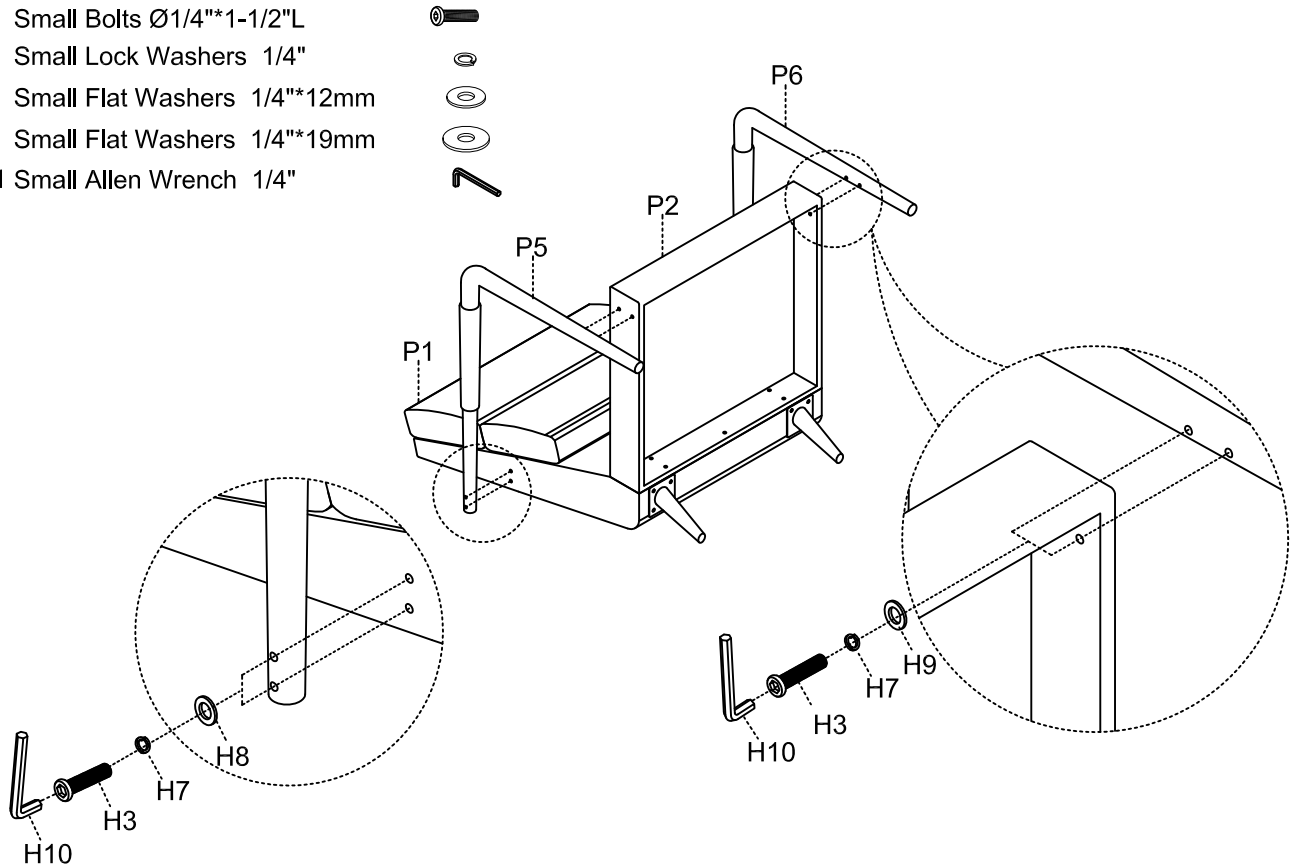

Step 4. a) Securely tighten all bolts with Allen wrench(H6&H10), turn the assembled chair to an upright position.
b) Insert the wooden plugs (H11) to the arm with Legs (P5&P6) as shown below. **Failure to follow these instructions may cause the bolts to misalign during assembly.** Assembly is complete.
c) **Leveler adjustment:** Leveler are pre-installed on the front legs and adjust as needed to make sure the chair is level.

- (H11)x4 Wooden Plugs

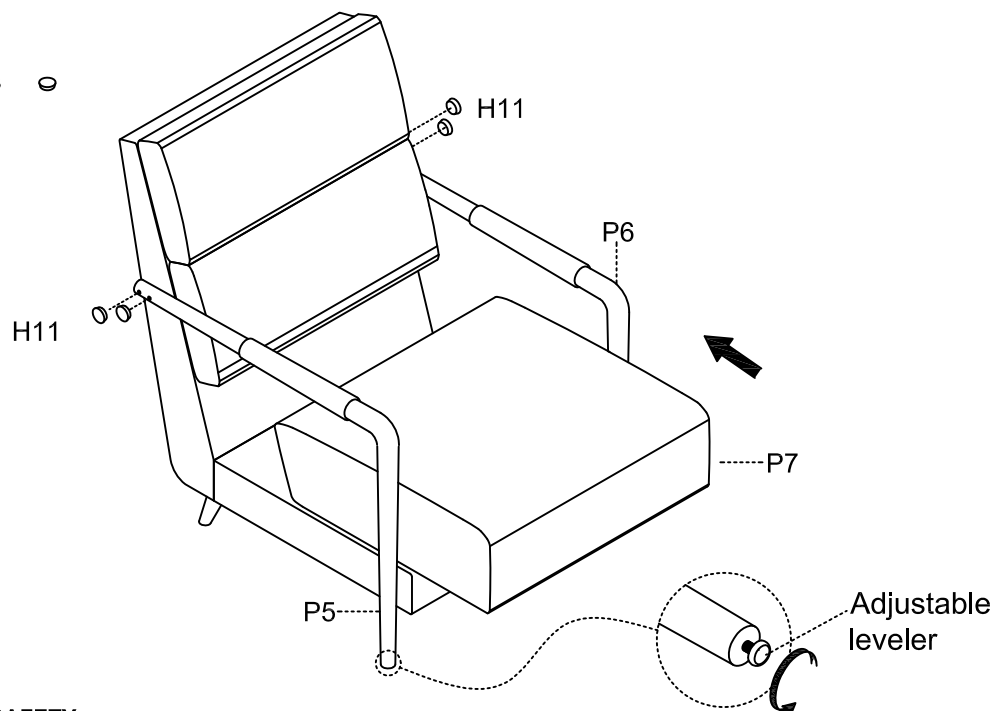

ADDITIONAL NOTE ABOUT SAFETY:
BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.
THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase