

INSTALLATION INSTRUCTION

600 Series Quick Connect™ Socket Set

QP-601

WAC LIGHTING

Responsible Lighting®

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY

Lighted lamp is HOT!

SAFETY INSTRUCTION

To reduce the risk of FIRE OR INJURY:

- Turn off all power and allow to cool before replacing lamp.
- Lamp gets HOT quickly! Contact only switch/plug when turning on.
- Do not touch lens, guard, or enclosure.
- Keep away from materials that may burn.
- Do not touch the lamp at any time. Use a soft cloth.
- Oil from skin may damage lamp.
- Do not operate the luminaire with a missing lens or damaged shield.
- Save these instructions.

OVERVIEW

Pendant sockets sets are designed for use with all WAC Quick Connect™ adapters. They may also be used on other manufacturers brand of quick connect (consult factory for compatibility). Pendants may be mounted to monorail, mono/multi points, or line volt track, by coupling to a low voltage quick connect adapter. Sockets are supplied with a 6' cable and may be field cut to desired length.

INSTALLING LAMP & SHADE:


1. It is necessary to remove the adapter from the top of the cable. Follow detailed instructions for removal (steps 1 & 2) on the reverse side of this page. If you intend to shorten the pendant proceed to steps 3 & 4.
2. Once the adapter is removed, pass it through the hole in the shade. The socket shaft will seat against the inside of the shade. It has a threaded collar to allow adjustment for variations in shade thickness.
3. Screw the finial to the socket shaft so it is snug, but not tight to the shade.
4. Return to the top end of the cable and re-install the adapter following steps 5, 6, & 7. Insert the lamp into the fixture by aligning the pins with the socket holes, and gently pushing until lamp seats.
5. Use 12V 50W bi-pin Halogen lamp with G6.35 base (supplied) with 12V, 50-watt Halogen) (24V lamp may be used depending on power supply).
6. Screw bulb shield on to the socket.

Installing Pendant to Quick Connect:

1. Insert the post of the quick connect into the quick connect adapter.
2. Thread the top half of the conical section until it seats with the adapter.

See p.2 for field shortening pendants.

INSTALLING LAMP & SHADE

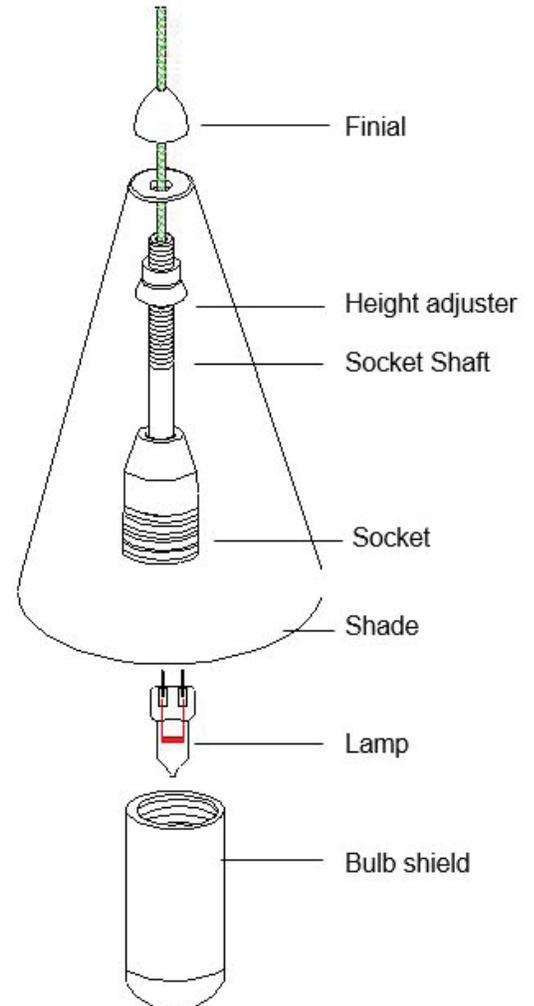

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585






INSTALLATION INSTRUCTION
600 Series Quick Connect™ Socket Set
QP-601

WAC LIGHTING
Responsible Lighting®

TO INSTALL/ SHORTEN PENDANT:

All Pendant shades use the quick connect adapter to attach to the rail. On the QP-601 the mating piece (top conical section) for quick connect adapter comes uninstalled. Feed the cable end through the glass shade and the metal finial. If cable needs to be shortened, make the cut now. To install the top conical section, follow the step-by-step instructions below.

NOTE: PENDANT CABLES ARE CO-AXIAL, IF THE LOWER SCREW IN STEP 4 IS MADE TOO TIGHT, THE INNER AN OUTER WIRE WILL SHORT. A SHORT CIRCUIT WILL RENDER THE ENTIRE SYSTEM IN-OPERATIVE AND POSSIBLY DAMAGE THE TRANSFORMER. CHECK ALL PENDANT SPLICES FOR CONTINUITY BEFORE INSTALLING.

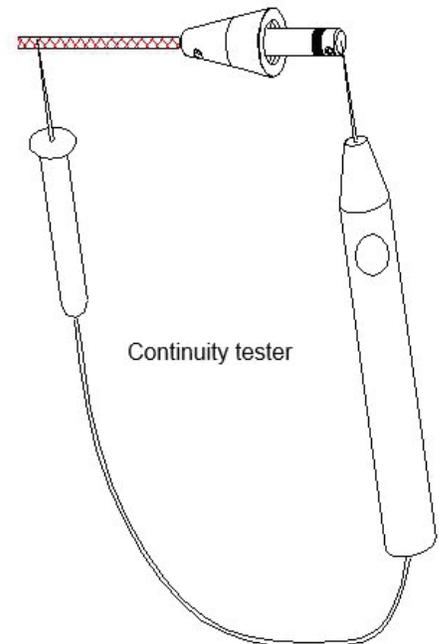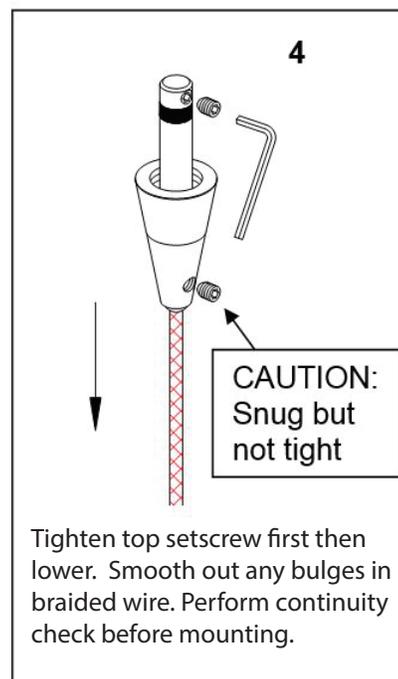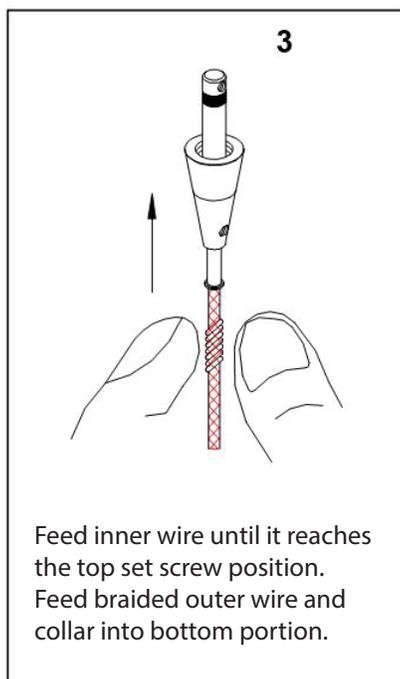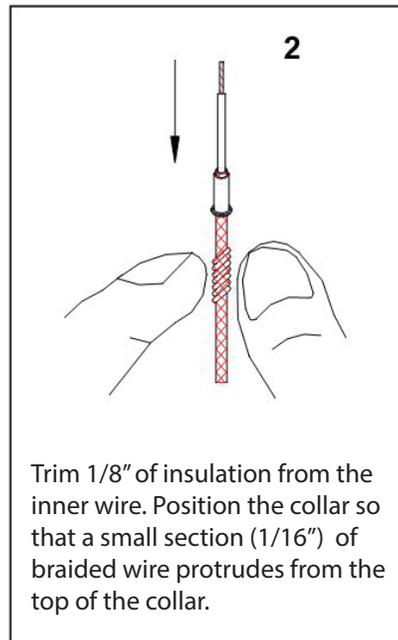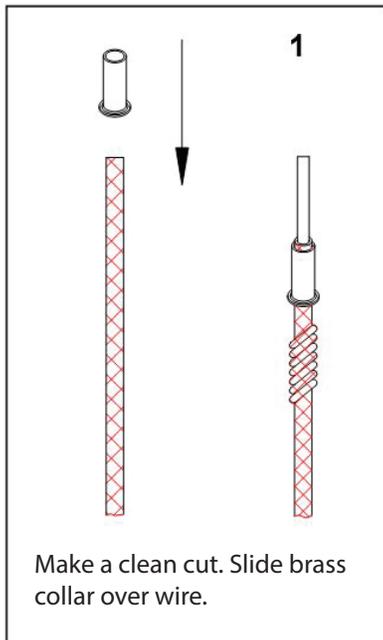

CHECK SPLICE:

Before mounting, with lamp removed from the socket, check for continuity. There should be none.

Insert lamp in socket and re-check. There should now be continuity, indicating a completed circuit.

Install with power off.

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585

INSTALLATION INSTRUCTION

Quick Adjust™ Pendant Canopy

MP-60E

WAC LIGHTING
Responsible Lighting®

SAFETY INSTRUCTION



- Do not conceal or extend exposed conductors through a building wall.
- Do not install this system in wet locations.
- To reduce the risk of fire and burns, do not install this lighting system where the exposed bare conductors can be shorted or contact any conductive materials.
- Make sure all connections are tight.
- Do not install any luminaire closer than 6 inches from any curtain, or similar combustible materials.
- Turn off electrical power before modifying the lighting system in any way.
- Install over a standard 4 inch junction box.

OVERVIEW

MP-60E canopy designed to fit all WAC Pendants. Uses a 50 watt max halogen lamp.

The pendant weight should be no more than 5 pounds. MP-60E canopy comes with a self-contained electronic transformer that may be dimmed with an electronic low voltage dimmer switch.

1. Unscrew "canopy nut" and remove "canopy cover" from the threaded cable grip.
2. Pull down the "insulation plate".
3. Support canopy and guide the black and white wires from the transformer into the junction box.
4. Connect ground wire from junction box to the green grounding wire from the base plate.
5. Connect corresponding line volt wires from the junction box to transformer wires (white wire connect to white wire and black wire connect to black wire), with wire nuts (supplied). Tuck excess wire into the junction box.
6. Attach the "base plate" to the junction box using the slotted holes and screws.
7. Re-attach "insulation plate".

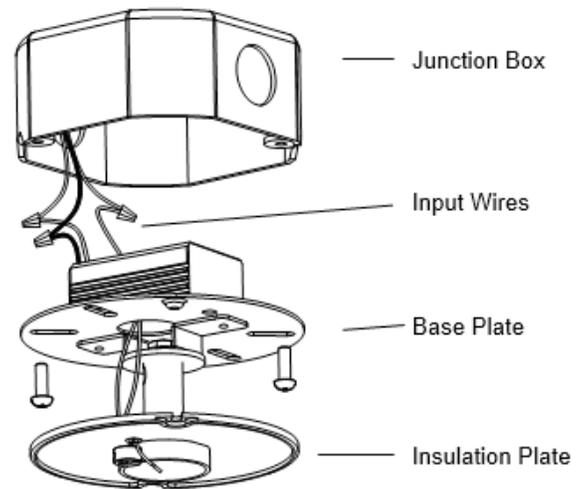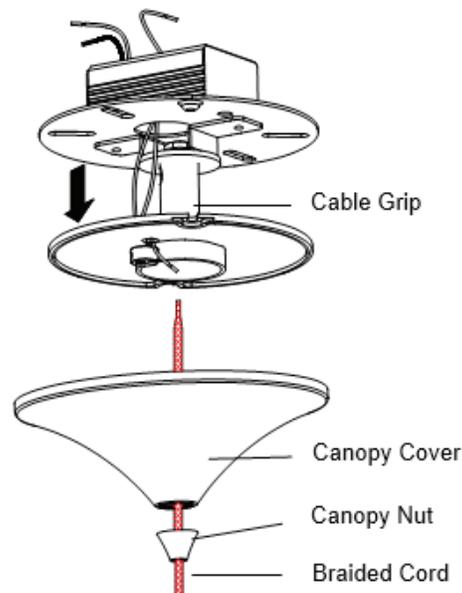

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585


INSTALLATION INSTRUCTION
Quick Adjust™ Pendant Canopy

MP-60E


WAC LIGHTING
Responsible Lighting®

PENDANT INSTALLATION


1. Make the desired cut of the "braided cord" for proper mounting height. Trim 1/8" of insulation from the inner wire.

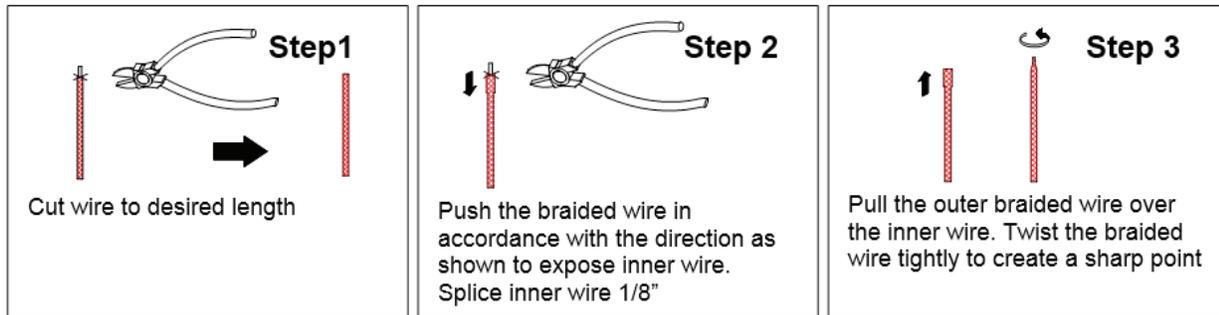

2. Feed the "braided cord" through "canopy nut" and "canopy cover". Push up the "cable grip" top and feed the braided cord until 3" braided cord comes out from side hole.

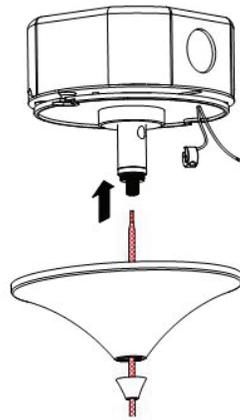

3. Position the "side collar" (supplied) so that a small section (1/16") of "braided cord" protrudes from the top of the collar.
4. Feed the "braided cord" and "side collar" into the end of the "wire ring" and tighten the set screw with allen wrench (supplied).
5. Use wire nuts (supplied) to connect the protruding braid cord to the wire coming from the transformer.
6. Raise the "canopy cover" and make sure that wires are contained in the "canopy cover".
7. Tighten "canopy nut".

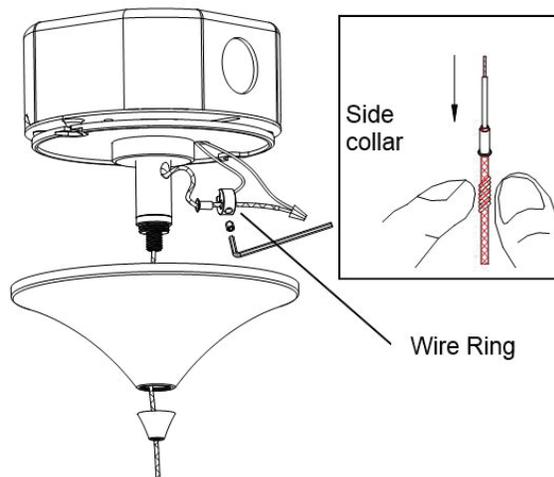

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585