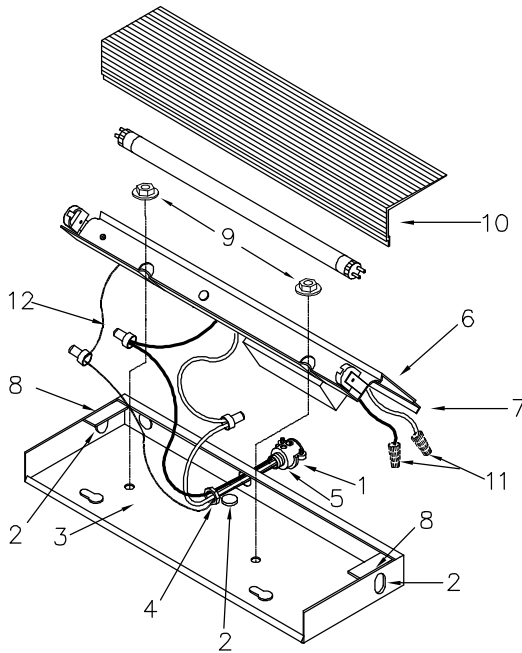

Fluorescent undercabinet light

ASSEMBLY INSTRUCTIONS

Read All Instructions Carefully

For Safe Operation and Installation.



REMOVE ALL PARTS
AND PARTS BAG
FROM CARTON

A. Insert connector(1) to desired knockout(2) in housing(3). Knockout is removed by pressing with screwdriver.

B. Attach connector(1) to housing(3) using lock nut (4) provided. Insert 1/2" or 3/8" conduit (not provided) through connector(1) and secure with fastener(5) provided. (screw heads must always face up and view holes down.)

C. Mount housing(3) to desired surface.

D. Take wireway channel(6) and with power off attach green supply wire to bare brass wire (12) on wireway

with wire nut (local hardware item). Attach black fixture wire to black supply wire, white fixture wire to white supply wire. **DO NOT MIX!!!** Use wire nuts (local hardware item) to splice connections.

E. Place wireway tabs(7) onto housing tabs(8) and slide into place using provided hex nuts(9). Attach to housing.

F. Insert lamp(s) and test unit by restoring power. If unit does not light correctly, **turn off power** before making corrections.

G. Snap diffuser(10) into place.

NOTE: (1) FIXTURE MUST BE WIRED IN ACCORDANCE WITH ALL NATIONAL/LOCAL ELECTRICAL CODES.
(2) CONNECTIONS TO THE SECOND FIXTURE CAN BE ACCOMPLISHED BY CONNECTING TO THE LEADS MARKED FOR EXTENSION LINK (11) AND USING THE WIRE NUTS PROVIDED ON THE LEADS.

CAUTION: Disconnect electrical power Before installing servicing Any part of fixture.

Coupez le courant au niveau de la boîte à fusibles en enlevant un fusible ou en déclenchant le déjoncteur avant d'effectuer l'installation,
"MIN 90°C SUPPLY LEADS" and "LES FILS D'ALIMENTATION DOIVENT
CONVENIR POUR 90°C "