ASSEMBLY INSTRUCTIONS


MODEL: BIANCA SOFA - 1 SEATER

IMPORTANT NOTE:


- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

HARDWARE LIST		
А	JCBC M6 x 50mm + S/W M6 + F/W M6 x 13mm	6PCS
В	ALLEN KEY M4	1PC
С	BARREL NUT M6 x 13mm 🔾 🔊	4PCS
D	WOOD BUTTON Ø 14.5	6PCS
Е	FH SCREW #8 X 32mm ←ttttttt (%)	2PCS
F	WOOD DOWEL M10 x 40mm	4PCS
G	L - BRACKET	2PCS
Н	CSK SCREW M3.5 x 16mm <====@	4PCS

	PART LIST	
1	SOFA LEG (L/R)	2PCS
2	FRONT RAIL	1PC
3	BACK FRAME	1PC
4	SEAT FRAME	1PC

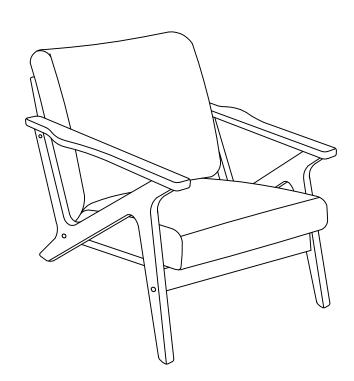


COMPLETED SOFA ASSEMBLY.

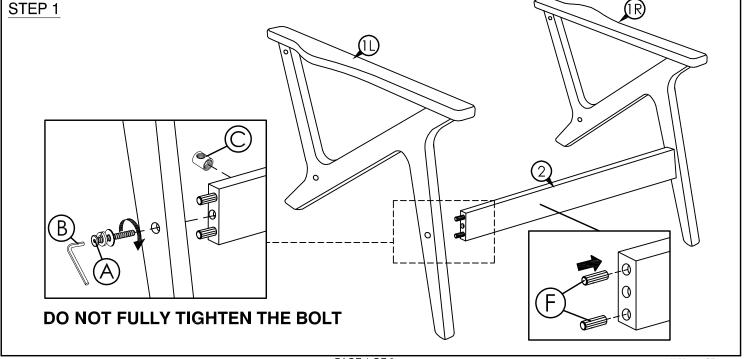

PAGE 1 OF 2 WM1610-SF

ASSEMBLY INSTRUCTIONS

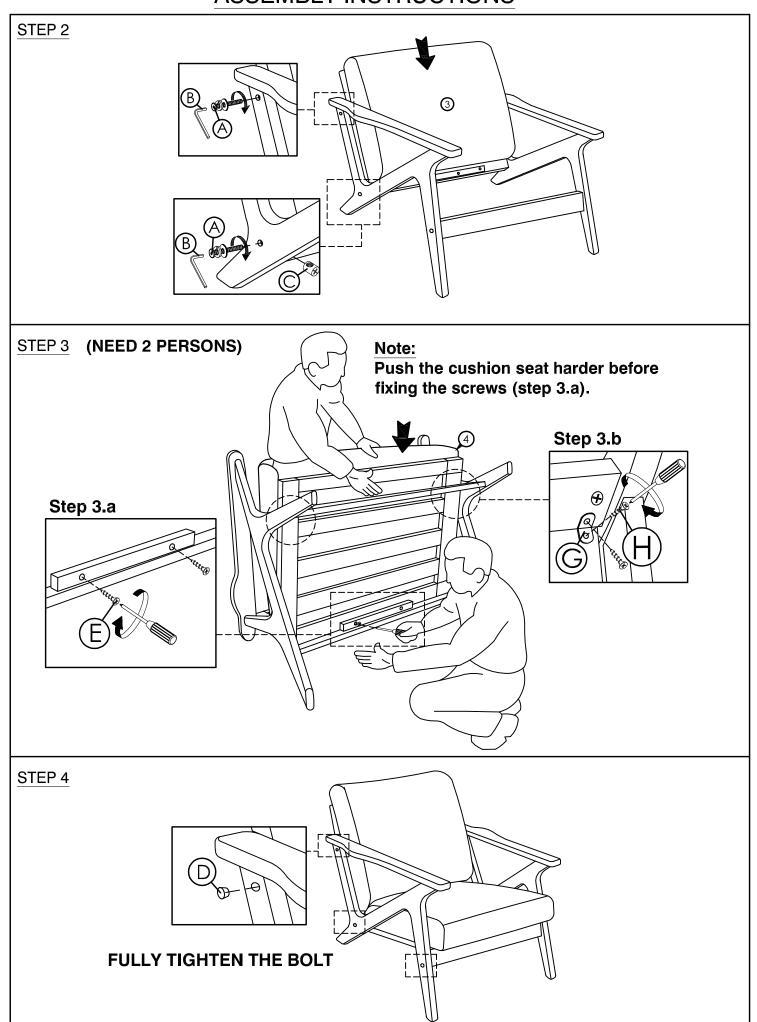

PAGE 2 OF 2 WM1610-SF

ASSEMBLY INSTRUCTIONS

MODEL: BIANCA OTTOMAN

- IMPORTANT NOTE: * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
 - PLEASE FOLLOW ASSEMBLY INSTRUCTIONS STEP BY STEP.
 - DO NOT FULLY TIGHTEN ALL SCREWS UNTIL THE CHAIR PARTS HAVE BEEN ASSEMBLED.


HARDWARE LIST PART LIST JCBC M6 x 50mm + S/W M6 1 LEG 2PCS + F/W M6 x 13mm 4PCS 2 2PCS STRECTHER В ALLEN KEY M4 1PC 3 **CUSHION SEAT** 1PC L-BRACKET 4PCS CSK SCREW M3.5 x 12mm 8PCS WOOD DOWEL M8 x 25mm 2PCS

PLEASE NOTE:


(1) DO NOT FULLY-TIGHTEN THE NUTS AND BOLTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

(TO AVOID CAUSING DAMAGE TO THE THREADS, DO NOT OVER-TIGHTEN THE NUTS AND BOLTS.)


(2) KEEP ALL PARTS OUT OF THE REACH OF CHILDREN.

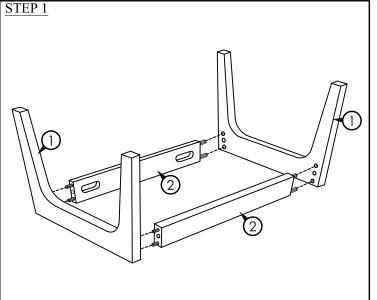


STEP 4

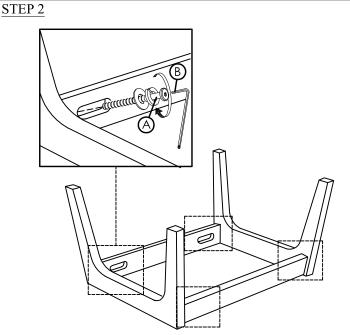


STEP 5

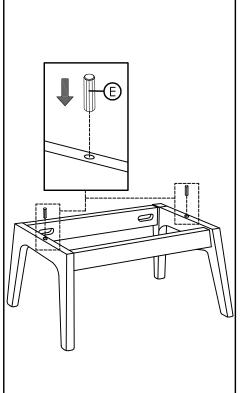

STEP 3

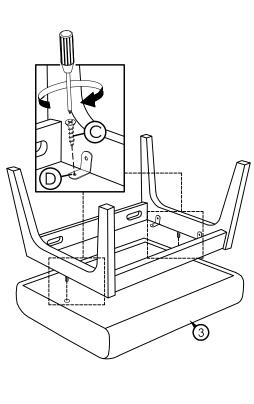

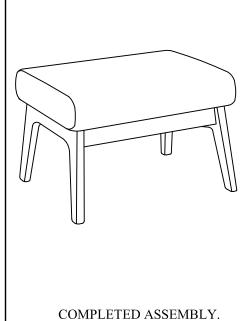

WM1610-OT