





80cm; 31 1/2"

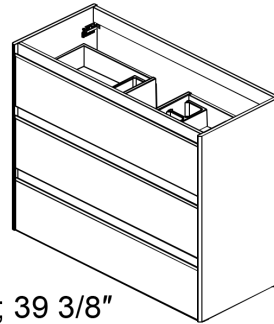



100cm; 39 3/8"

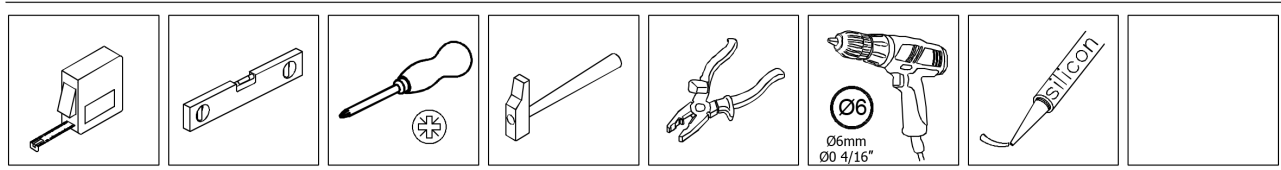

## 01.

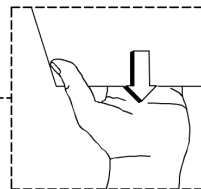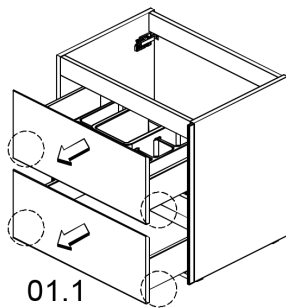

01.2

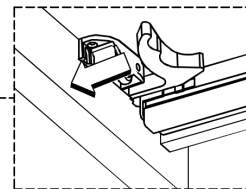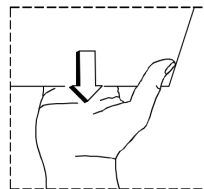

01.3

Collection  
Installation  
Instructions




Model |  
Belle

Dimensions Metric  
1 inch = 2.54 cm  
1 inch = 25.4 mm




**WS**<sup>®</sup>  
BATH  
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426  
Tel. 215 513 9400 - Fax 610 831 0215  
[www.ws bathcollections.com](http://www.ws bathcollections.com) - [info@ws bathcollections.com](mailto:info@ws bathcollections.com)

02.

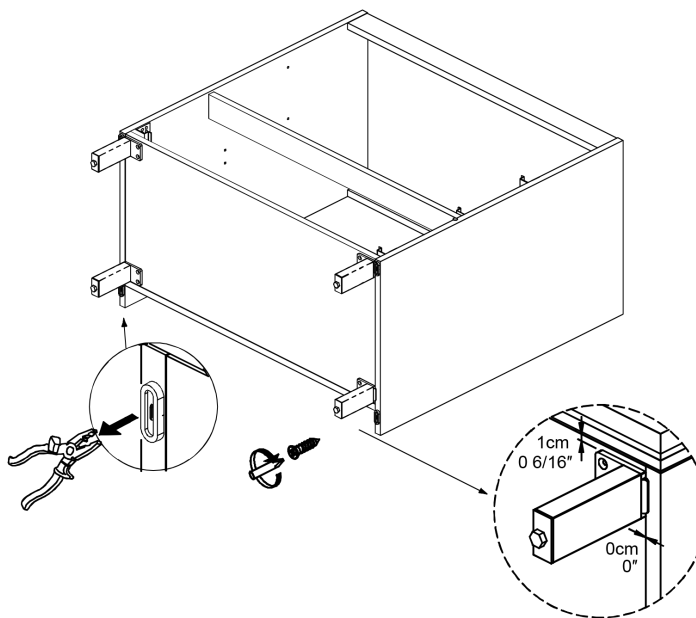

03.

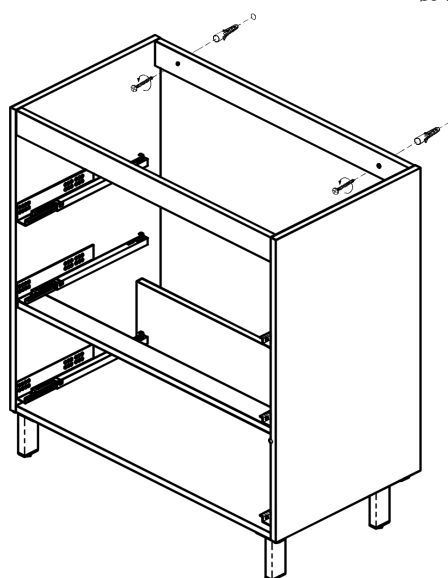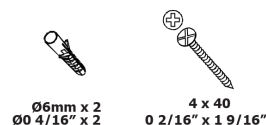


Collection  
Installation  
Instructions

Model |  
Belle


Dimensions Metric  
1 inch = 2.54 cm  
1 inch = 25.4 mm

**WS**<sup>®</sup>  
BATH  
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426  
Tel. 215 513 9400 - Fax 610 831 0215  
[www.ws bathcollections.com](http://www.ws bathcollections.com) - [info@ws bathcollections.com](mailto:info@ws bathcollections.com)

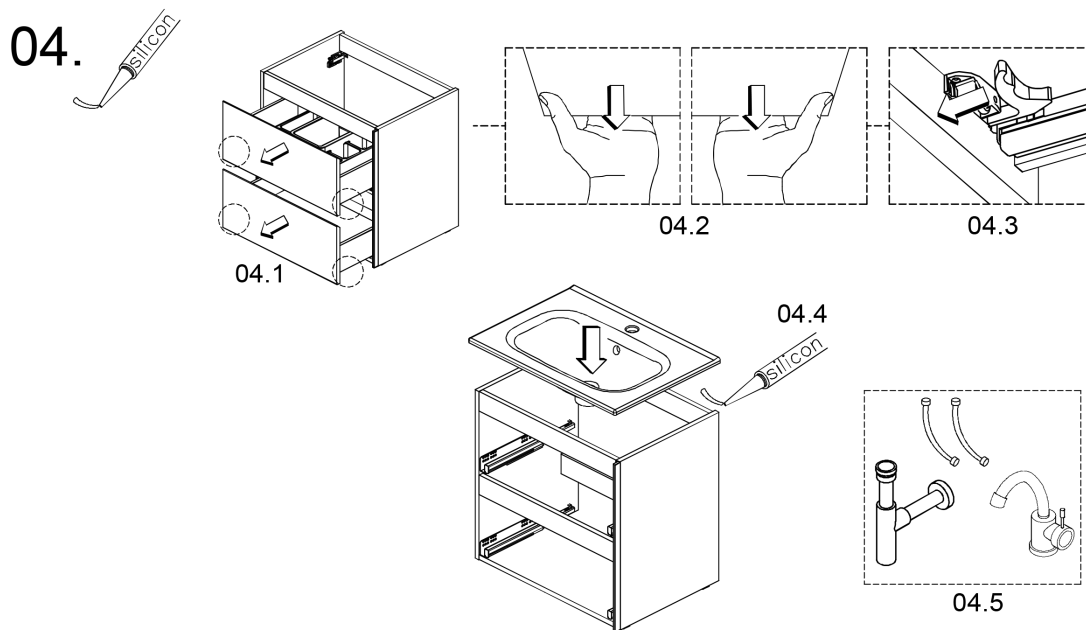

## 05.

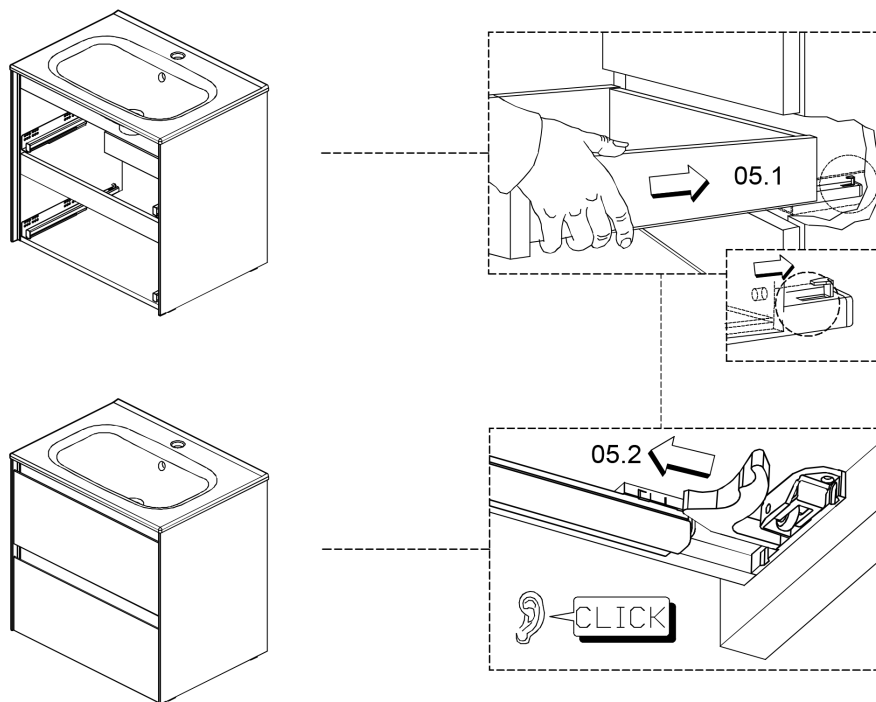

Collection  
Installation  
Instructions



Model |  
Belle

Dimensions Metric  
1 inch = 2.54 cm  
1 inch = 25.4 mm

**WS**®  
BATH  
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426  
Tel. 215 513 9400 - Fax 610 831 0215  
[www.ws bathcollections.com](http://www.ws bathcollections.com) - [info@ws bathcollections.com](mailto:info@ws bathcollections.com)

06.

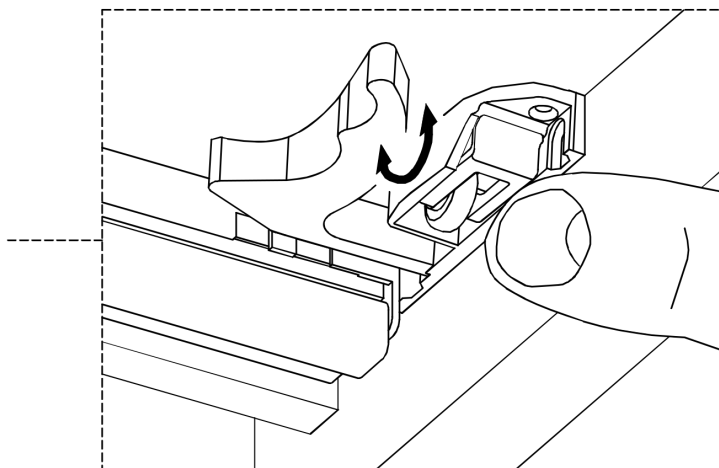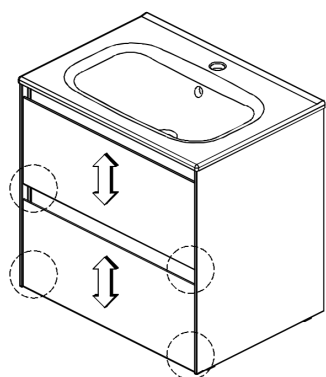

Collection  
Installation  
Instructions

Model |  
Belle

Dimensions Metric  
*1 inch = 2.54 cm*  
*1 inch = 25.4 mm*


**WS**<sup>®</sup>  
BATH  
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426  
Tel. 215 513 9400 - Fax 610 831 0215  
[www.ws bathcollections.com](http://www.ws bathcollections.com) - [info@ws bathcollections.com](mailto:info@ws bathcollections.com)

17/05/17

# ESPEJOS/MIRRORS


144373

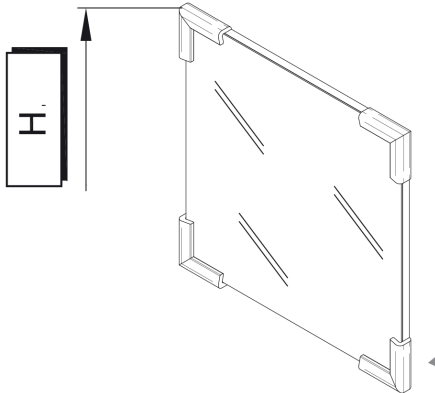


- E** No retirar protecciones hasta que el espejo esté instalado
- UK** NO TAKE OFF THE PROTECTIONS UNTIL THE MIRROR IS INSTALLED
- D** Schutz nicht zurücksiehen, bis der Spiegel ist verpackt!
- F** NE PAS RETIRER LA PROTECTION TANT QUE LE MIROIR N'EST PAS INSTALLÉ.
- GR** ΜΗΝ ΑΦΑΙΡΕΙΤΕ ΤΑ ΠΡΟΣΤΑΤΕΥΤΙΚΑ ΜΕΧΡΙ ΤΗΝ ΤΟΠΟΘΕΤΗΣΗ ΤΟΥ ΚΑΘΡΕΠΤΗ
- NL** Verwijder de protectie niet tot dat de spiegel is geïnstalleerd
- H** A VÉDŐCSOMAGOLÁST A TÜKÖR FELHELYEZÉSÉIG KÉRJÜK MEGŐRIZNI
- I** Non ritirare protezioni fino a che lo specchio sia installato
- NO** Ikke fjern beskyttelsen før speilet er montert opp
- RU** Не удалять элементы защиты до завершения установки зеркала
- PL** Nie zdejmować zabezpieczenia dopóki lustro nie będzie zamontowane!!!




## 01.

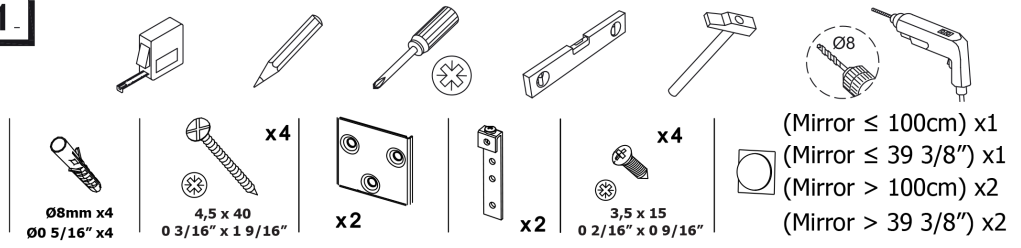

## 02.

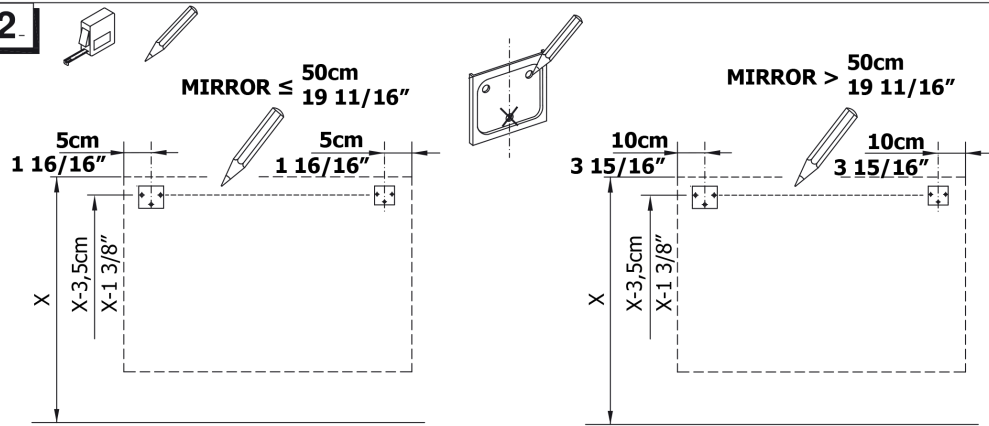

## 03.

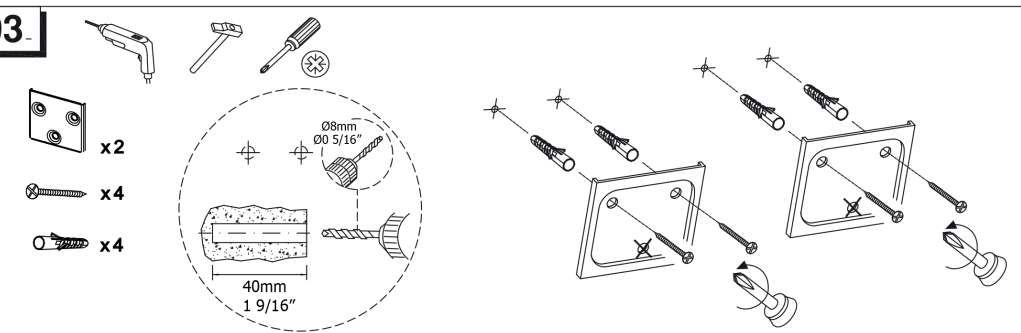


Collection  
Installation  
Instructions

Model |  
Mirror


Dimensions Metric  
1 inch = 2.54 cm  
1 inch = 25.4 mm

**WS<sup>®</sup>** BATH COLLECTIONS  
 1051 Lea Drive - Colleagueville, PA 19426  
 Tel. 215 513 9400 - Fax 610 831 0215  
[www.wsbathcollections.com](http://www.wsbathcollections.com) - [info@wsbathcollections.com](mailto:info@wsbathcollections.com)


## 04.



### 04.1

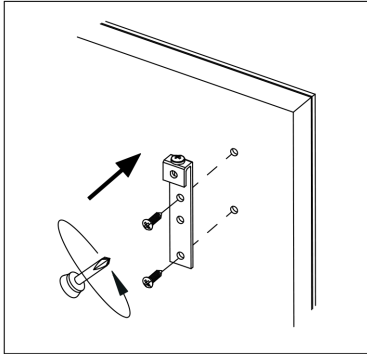


### 04.2

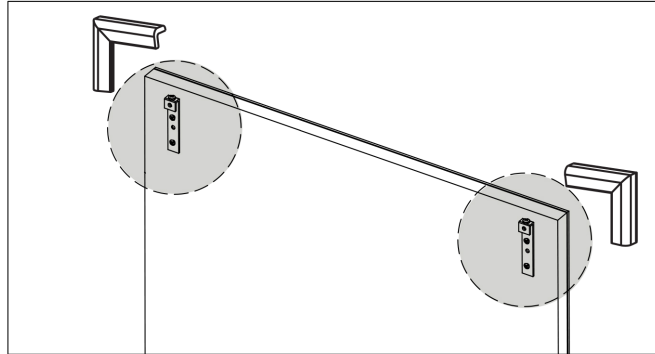


## 05.




MIRROR  $\leq$  100cm  
39 3/8"

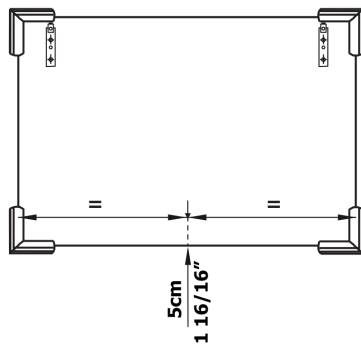


MIRROR > 100cm  
39 3/8"

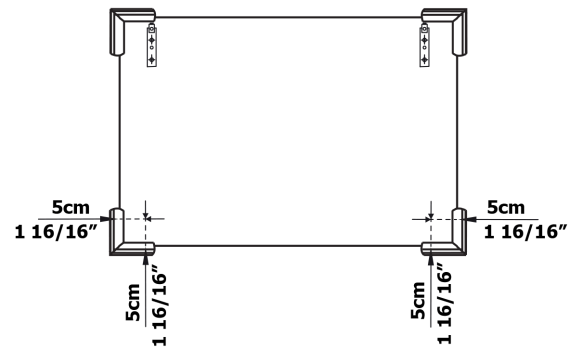

## 06.

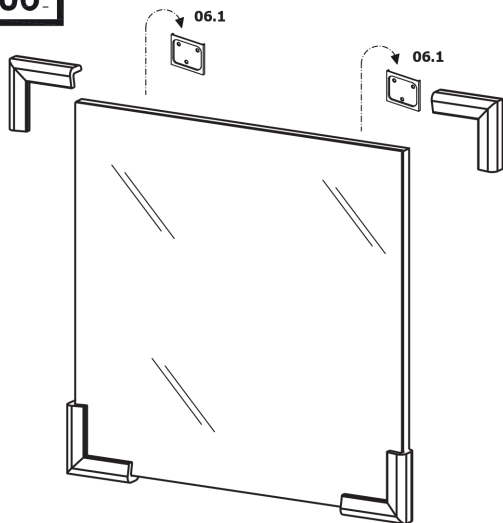

## 07.

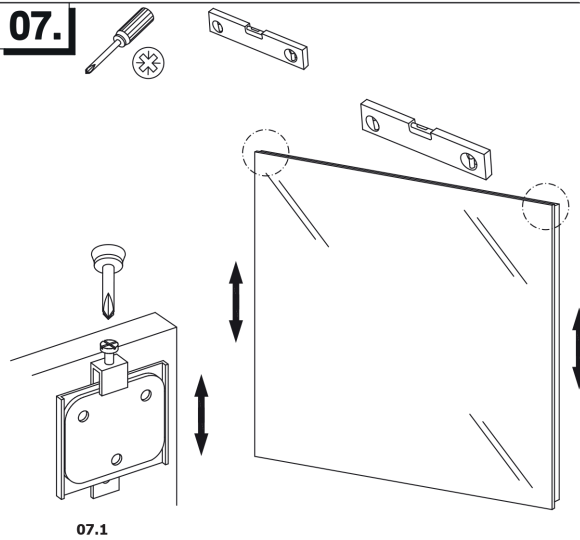

07.1

Collection  
Installation  
Instructions

Model |  
Mirror

Dimensions Metric  
1 inch = 2.54 cm  
1 inch = 25.4 mm

**WS**<sup>®</sup>  
BATH  
COLLECTIONS

1051 Lea Drive - Collegeville, PA 19426  
Tel. 215 513 9400 - Fax 610 831 0215  
[www.ws bathcollections.com](http://www.ws bathcollections.com) - [info@ws bathcollections.com](mailto:info@ws bathcollections.com)