




HEADBOARD SET ASSEMBLY INSTRUCTION (TOTAL 1 BOX)

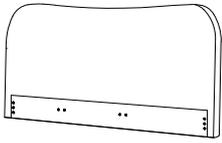

A x 1 pc

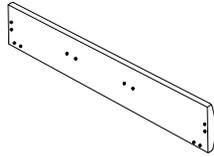

B x 1 pc

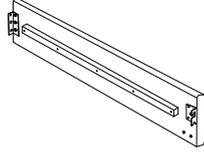

C x 2 pcs



E x 4 pcs



I x 1 pc

Please read over the instructions, it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.

Part#	Picture	Description	QTY	Location	Part#	Picture	Description	QTY	Location
H		Center leg	2	Embossed film wrap	U		Spring Washer Ø8	8	Hardware Pack
J		Triangle connection piece	2	Embossed film wrap			20	Already in Place	
K		Legs	4	Spare Parts caton box	V		Flat Washer Ø8x25mm	8	Hardware Pack
M		Bolt Ø6x30mm	6	Already in Place			20	Already in Place	
N		Bolt Ø8x30mm	20	Already in Place	W		Spring Washer Ø6	6	Already in Place
P		Bolt Ø8x70mm	4	Hardware Pack	X		Flat Washer Ø6x25mm	6	Already in Place
Q		"L" Wrenches Ø4	1	Hardware Pack	Y		Spring Washer Ø10	2	Hardware Pack
R		"L" Wrenches Ø5	1	Hardware Pack	Z		Flat Washer Ø10x25mm	2	Hardware Pack
S		Nut Ø8	4	Hardware Pack	ZA		Spanner Ø14	1	Hardware Pack
T		Nut Ø10	2	Hardware Pack	ZB		Spanner Ø17	1	Hardware Pack
					ZC		Screws 4x30mm	24	Hardware Pack

