
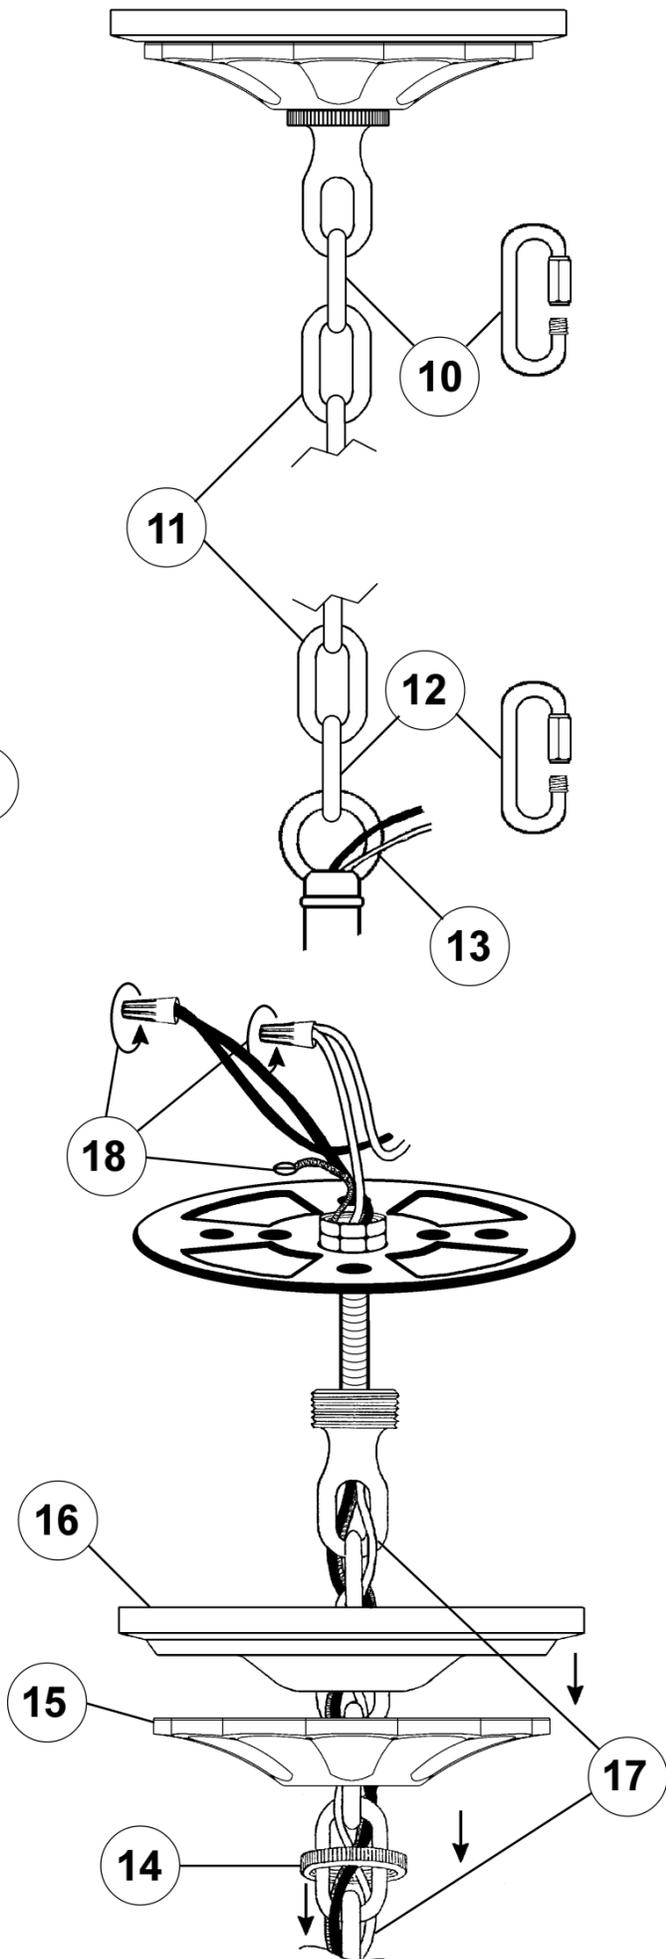


Instructions for electrician
STEPS 2 - 21

2 **WARNING:**

Electrical Danger **Turn Power Off**


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

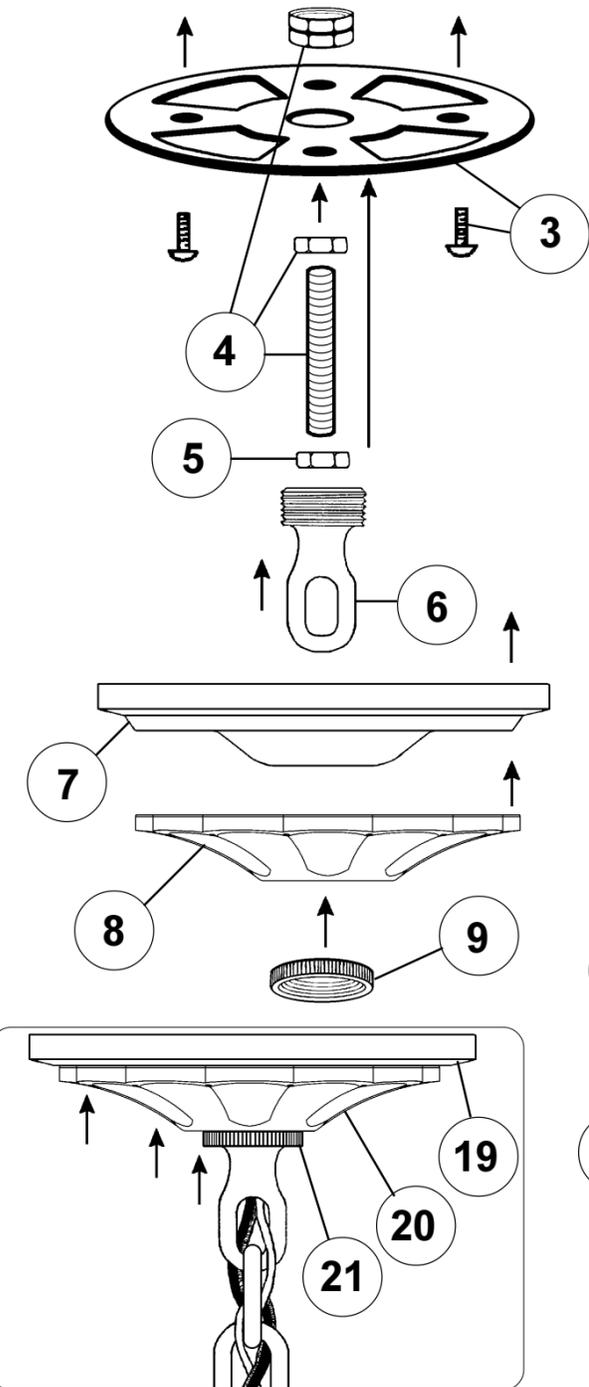

CHANDELIER 9690-_____ TRIM DIAGRAM

(Finish Option) (Trim Option)

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING INC.

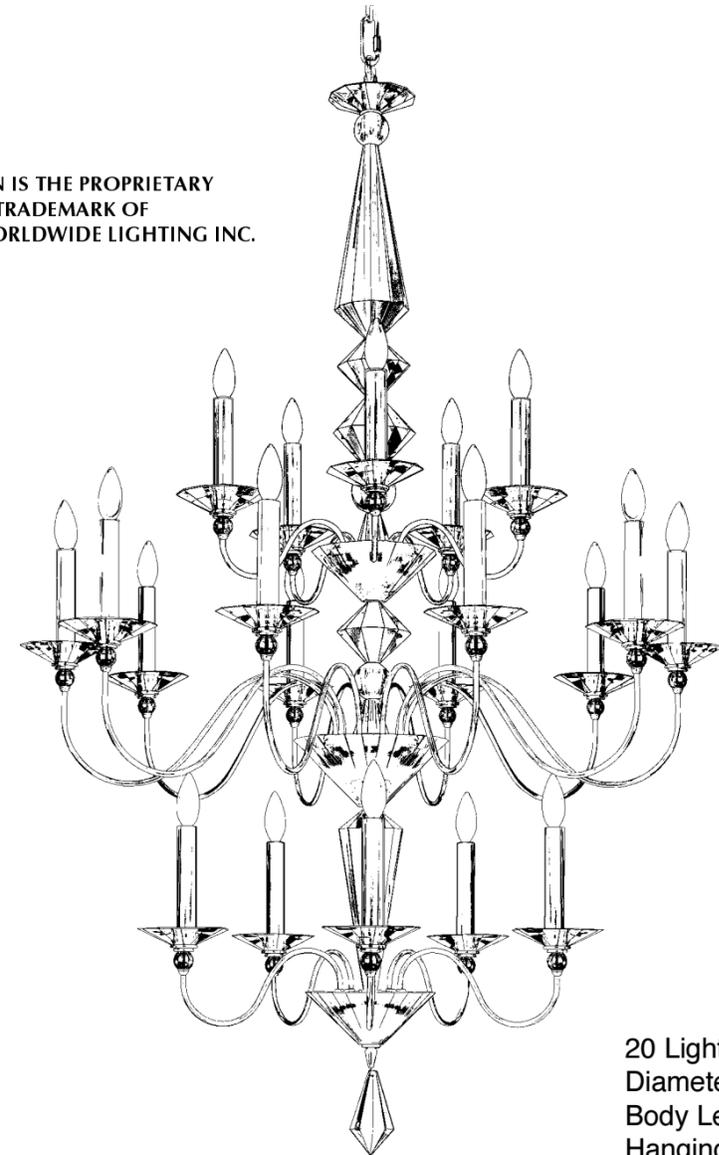

20 Lights
Diameter: 36"
Body Length: 57"
Hanging Weight: 50 lbs.

SCHONBEK®

See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

1 **IMPORTANT**
Person who opens carton should record the following information for future service.

CODE # _____	Four-digit number on outside of carton.
PACKER # _____	See crystal package label.
ORDER # _____	See crystal package label.

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE:
#D515,727 & #D515,728

Instructions for crystal trimming

STEPS 22 - 28




26

You will need 20 - C10
25 Watts Recommended
60 Watts Max


**Install bulbs and be
sure to test fixture
BEFORE trimming.**

22

Connect upper arm
wires to the center column
using plug-in connectors.
See detailed illustration.



Push wires into hole and attach
arm to upper washer by rotating
arm into place. Lock down by
tightening screws into flange.
See detailed illustration.

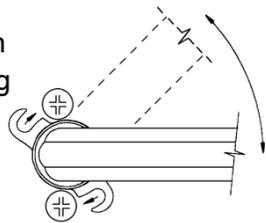

Repeat steps above for middle and lower arms.

25

#90191/500
glass candleslip sits on
top of bobèche 90183-**

24

23

#90183 -**

#90183

#90163 -**

#90160

#90193

#90194

#90164

#90171

#90159

#90193

#90163-**

#90171

#90168

#90157

#90159

27

Seating Ring

28

N10138 -**

