CARE AND MAINTENCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List

Piece	Description	Picture	Quantity
Α	HEADBOARD		1X
В	L-POST	(- »)	1X
С	R-POST	(= =	1X
D	FOOTBOARD		1X
Е	SUPPORT LEGS OF SLATS	e	8X
F	SUPPORT LEGS OF RAILS	0	2X
G	SLAT		4X
Н	L-RAIL		2X
1	R-RAIL		2X
J	L-WOOD LEG	\(\bigcap \)	1X
K	R-WOOD LEG	F	1X
L	WOOD BAR	Service Control of the Control of th	2X
H1	BOLT 5/16"*2-1/2"	O	10X
H2	BOLT 5/16"*2"	•	4X
H3	BOLT 1/4"*2"	®	10X
H4	WRENCH		1X
H5	SCREW Ø8*30mm	₹#### ()	8X
H6	SCREW Ø8*15mm	41116	8X
H7	METAL PLATE 50*33*1mm		2X



Model# FOX6214-F
Product Dimensions:87"W*59"D*52-1/4"H





Weight capacity: 550lbs


WARNING: DO NOT STAND ON THE BED

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:15 minutes.


Tools Required for Assembly (included):Wrench.

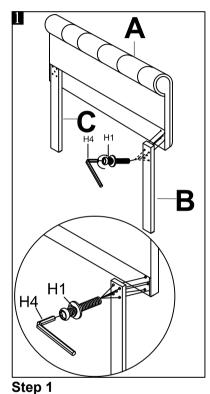


Attach L/R posts "B" &
"C" to headboard "A" by
using wrench (H4) to
lock with bolts "H1".

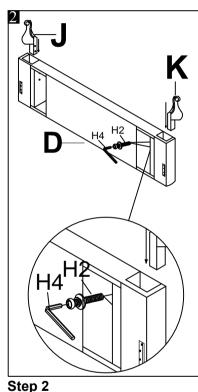

Attach wood legs "J" & "K" with footboard "D". Using wrench (H4) to lock with bolts "H2".

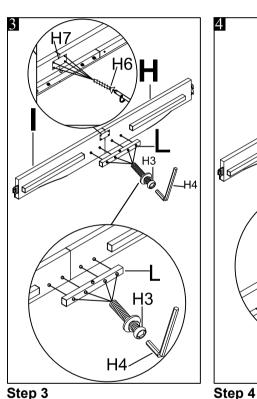


Attach wood bar "K" to the 2 rails "H" & "I".Using Allen key (H4) to lock with bolts "H3". Lock the both side rails (H & I) (front & rear of rail) tight and alignment with metal plate (H7) by using 8x screws (H6

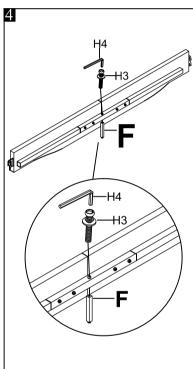

Attach support legs "F" to wood bar "L" .Using wrench (H4) to lock with bolts "H3".

Important:
For correct assembly please ensure
the double hooks are latched properly.

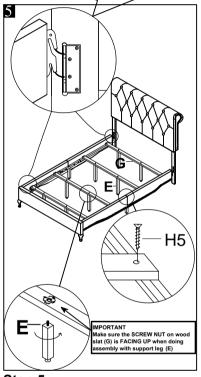

Step 5

Attach 2 rails to the L/R posts & the footboard assembled with legs.

Attach 2 support legs(E) to each slat(G).

Lock the slats tight with wood bar(both inside of rails) by using 8x screws(H5).

CARE AND MAINTENCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List

Piece	Description	Picture	Quantity
Α	HEADBOARD		1X
В	L-POST	<u></u>	1X
С	R-POST	(<u>= ×</u>)	1X
D	FOOTBOARD		1X
Е	SUPPORT LEGS OF SLATS		8X
F	SUPPORT LEGS OF RAILS	0	2X
G	SLAT		4X
Н	L-RAIL		2X
I	R-RAIL		2X
J	L-WOOD LEG	<u>~</u>	1X
K	R-WOOD LEG		1X
L	WOOD BAR	Self-se	2X
H1	BOLT 5/16"*2-1/2"	00	10X
H2	BOLT 5/16"*2"	00	4X
H3	BOLT 1/4"*2"	•••	10X
H4	WRENCH		1X
H5	SCREW Ø8*30mm	<(8X
H6	SCREW Ø8*15mm	****** (8X
H7	METAL PLATE 50*33*1mm	•	2X



Model# FOX6214-Q Product Dimensions:93"W*65"D*52-1/4"H





Weight capacity: 550lbs


WARNING: DO NOT STAND ON THE BED

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:15 minutes.


Tools Required for Assembly (included):Wrench.

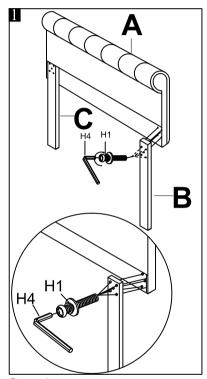


Step 1
Attach L/R posts "B" &
"C" to headboard "A" by
using wrench (H4) to
lock with bolts "H1".

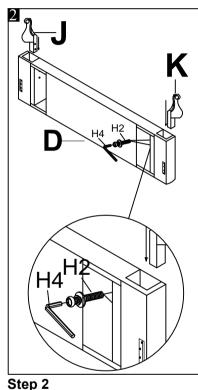

Attach wood legs "J" & "K" with footboard "D". Using wrench (H4) to lock with bolts "H2".

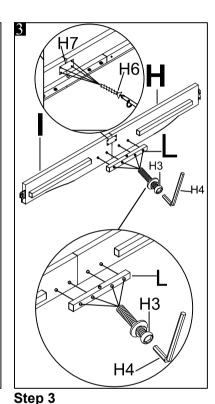


Attach wood bar "K" to the 2 rails "H" & "I".Using Allen key (H4) to lock with bolts "H3". Lock the both side rails (H & I) (front & rear of rail) tight and alignment with metal plate (H7) by using 8x screws (H6)

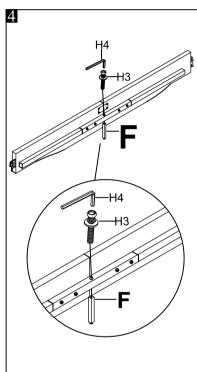

Attach support legs "F" to wood bar "L" .Using wrench (H4) to lock with bolts "H3".

Step 4

Important:
For correct assembly please ensure the double hooks are latched properly.

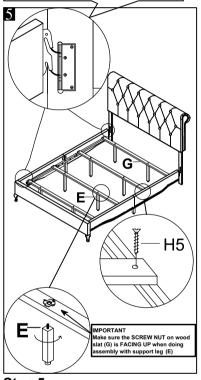

Step 5

Attach 2 rails to the L/R posts & the footboard assembled with legs.

Attach 2 support legs(E) to each slat(G).

Lock the slats tight with wood bar(both inside of rails) by using 8x screws(H5).

CARE AND MAINTENCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List

Piece	Description	Picture	Quantity
Α	HEADBOARD		1X
В	L-POST		1X
С	R-POST		1X
D	FOOTBOARD		1X
E	SUPPORT LEGS OF SLATS		6X
F	SUPPORT LEGS OF RAILS	e	2X
G	SLAT		3X
Н	L-RAIL		2X
1	R-RAIL		2X
J	L-WOOD LEG		1X
K	R-WOOD LEG		1X
L	WOOD BAR		2X
H1	BOLT 5/16"*2-1/2"	0.00 mass	14X
H2	BOLT 1/4"*2"	®	10X
H3	WRENCH		1X
H4	SCREW	<	6X



Model# FOX6214-T Product Dimensions:88"W*42-1/2"D*52-1/4"H

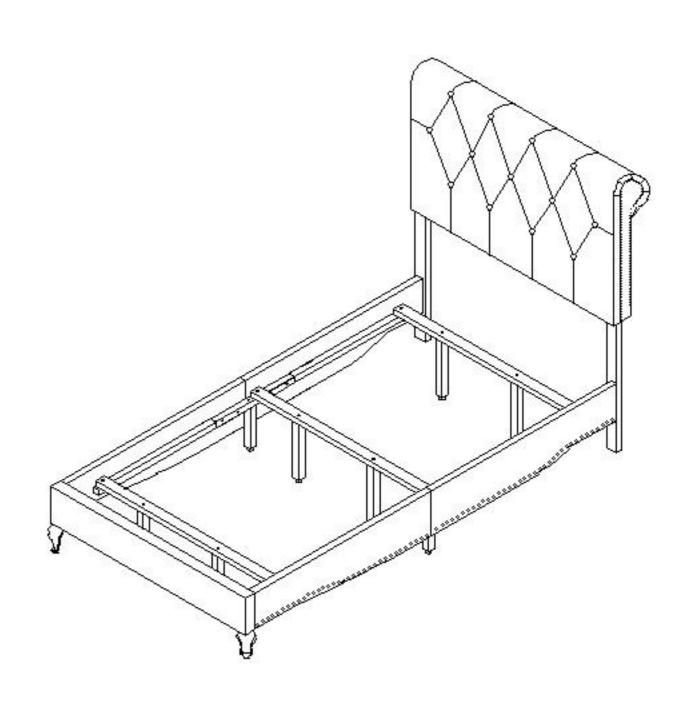


PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:15 minutes.


Tools Required for Assembly (included):Wrench.

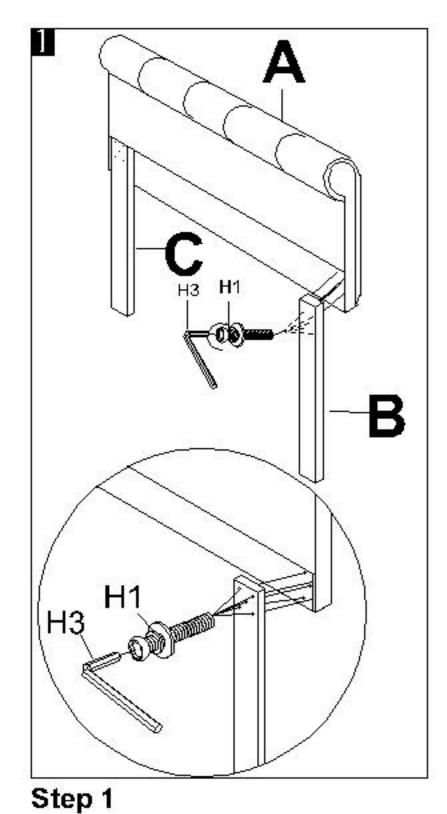


Attach L/R posts "B" &
"C" to headboard "A" by
using wrench (H3) to
lock with bolts "H1".

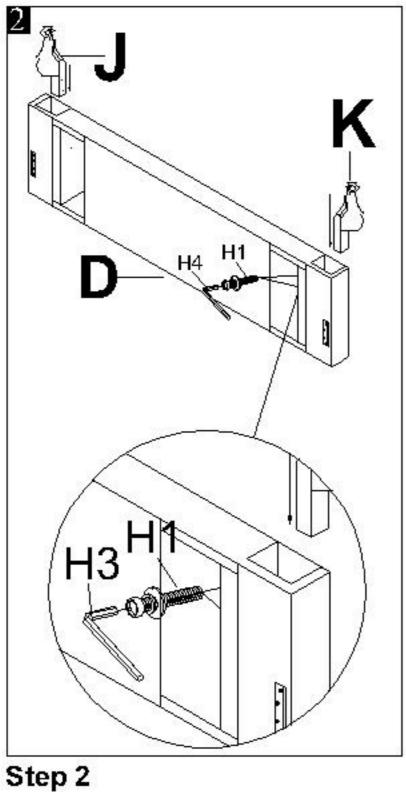

Attach wood legs "J" & " K" with footboard "D". Using wrench (H3) to lock with bolts "H1".

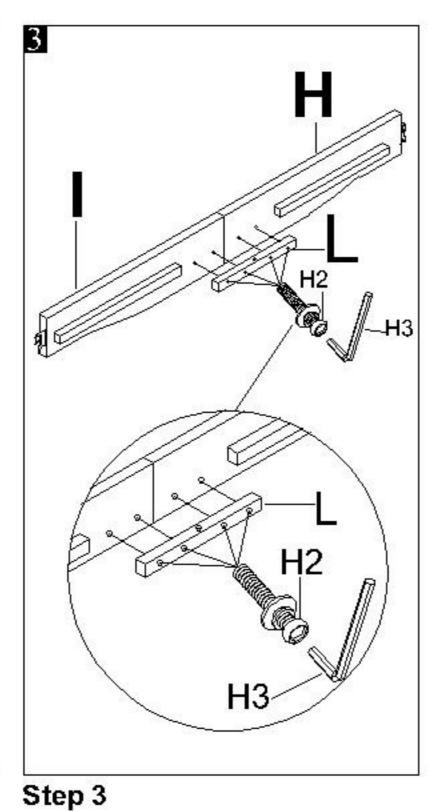


Attach wood bar "L" to the 2 rails "H" & "I". Using wrench (H3) to lock with bolts "H2".

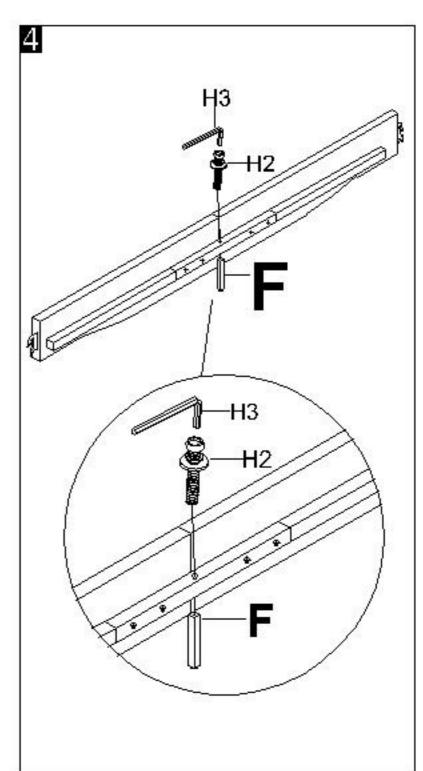

Attach support legs "F" to wood bar "L" .Using wrench (H3) to lock with bolts "H2".

Step 4

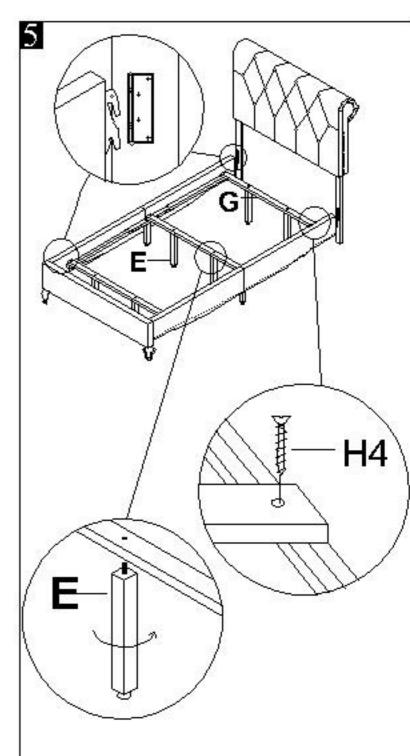

Attach 2 rails to the L/R posts & the footboard assembled

Attach 2 support legs(E) to each slat(G).

Step 5

with legs.

Lock the slats tight with wood bar(both inside of rails) by using 6x screws(H4).