

Maykke™

www.maykke.com

Installation, Care Guide and Warranty



Wall-Hung Vanity Set

YSA1203601

YSA1203602

NOTICE: Do not change or modify the product in any way. Doing so may compromise the products structural integrity and will void the warranty.

NOTICE: Installation instructions must be followed. Any diversions from the installations instructions may risk property damage and will void the warranty.

NOTICE: When moving your vanity be sure to lift, never slide or pull, doing so may result in damage to the product.

IMPORTANT:


Observe all state and local building codes.

PRE-INSTALLATION

Tools Required




Hardware Included

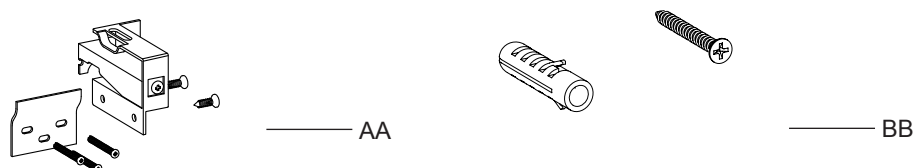

Part	Description	Quantity
AA	Mounting Brackets	2 sets
BB	Anchor and screws	2 sets

PRE-INSTALLATION (continued)

Package Contents

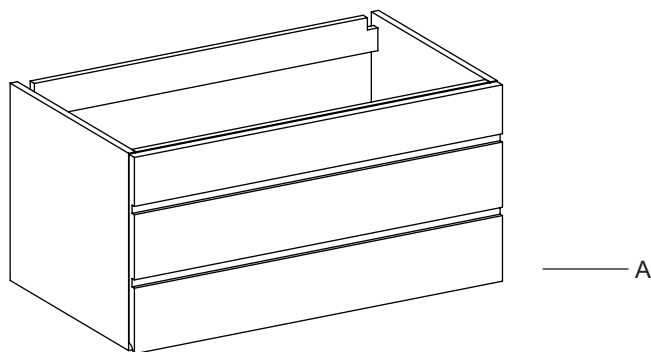

Part	Description	Quantity
A	Cabinet body	1


INSTALLATION

1 Determine ideal position (see fig 1)

Determine the ideal location for your new bath furniture.

- Use a stud finder to locate the studs to which you will attach the vanity. Vanity heights should be within 32" - 34" from the floor to top of vanity (including vanity top).
- With a level, draw lines along the studs from the floor to the top of the vanity. These lines will help you spot where to place the screws in Step 3.
- Using a 5/16" drill 2 holes into the wall and secure the anchors into the wall.

Fig 1

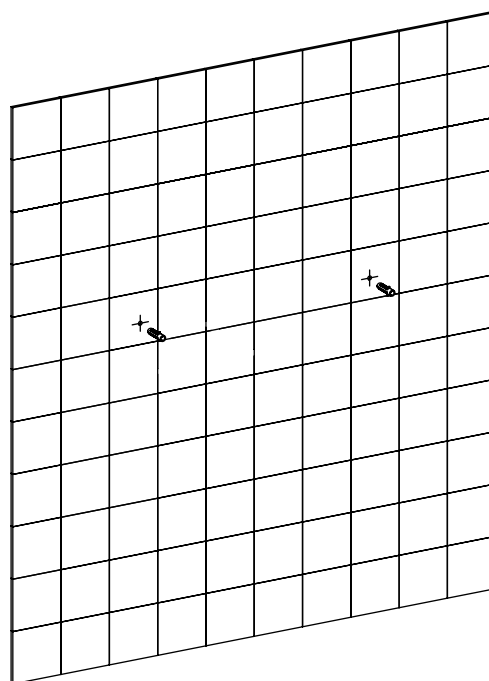


INSTALLATION (continued)

2 Installing support for vanity (see fig 2)

Provide 2x6 backing material behind the finished wall to properly support the vanity.

- Extend the backing material beyond the width of the vanity to the nearest stud. This will ensure proper support for the vanity.
- Front-notch the studs to ensure the 2x6 backing material is flush against the studs.
- Secure the 2x6 backing material to the studs with framing nails.
- Rough-in the water supply and drain lines into the rough-in plumbing areas of the vanity.

Fig 2

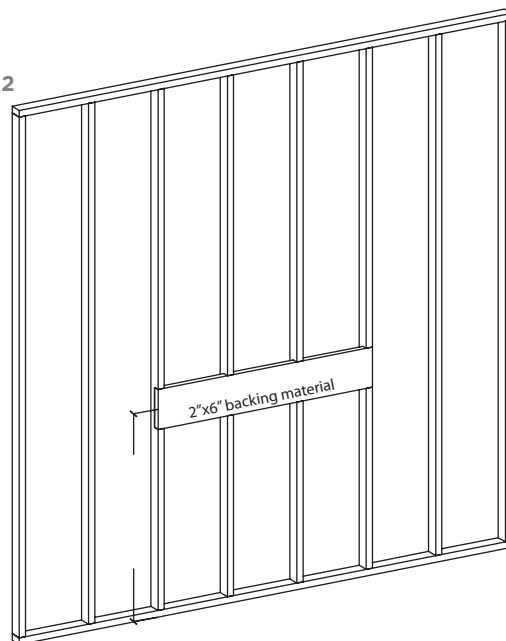

3 Mounting the wall vanity (see fig 3 & 4)

Before attaching the vanity to the wall make sure the vanity is clear of any plumbing. Modifications may be needed due to different plumbing. It is recommended that you discuss this with a professional before attempting to install the vanity.

- Attach the mounting brackets to the back of the vanity by lining up the pre-drilled holes and brackets.
- Secure the mounting brackets to the back of the vanity.
- Position the wall vanity to the wall cleat on the wall and let it rest into the cleat

Fig 3


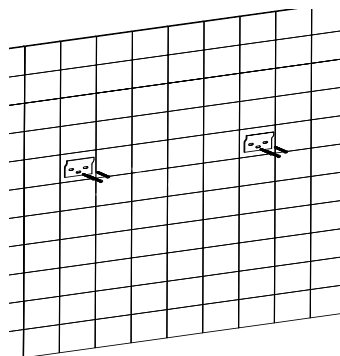


Fig 4

4 Leveling vanity

- Verify the vanity is level and back rail is flush against the wall.

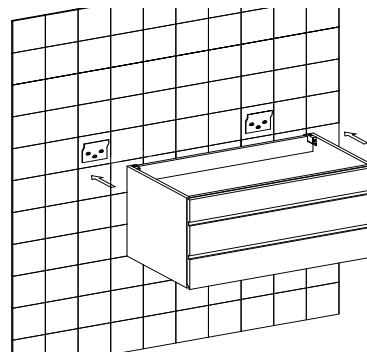

INSTALLATION (continued)


4 Installing the faucet to the vanity top

Follow the manufacturer's instructions to install the faucet and drain assembly to the vanity top.

5 Installing the Sink to the top (If installing Maykke sink)

- ❑ Turn the vanity top (C) upside down and unscrew the bolts attaching the preinstalled sink (D) to the top (C).
- ❑ Apply a small bead of silicone compound around the sink cut out on the vanity top (C), reposition the sink (D) on the top (C), pressing firmly together.
- ❑ Secure the sink (D) to the top (C) with the screws.

Fig 5

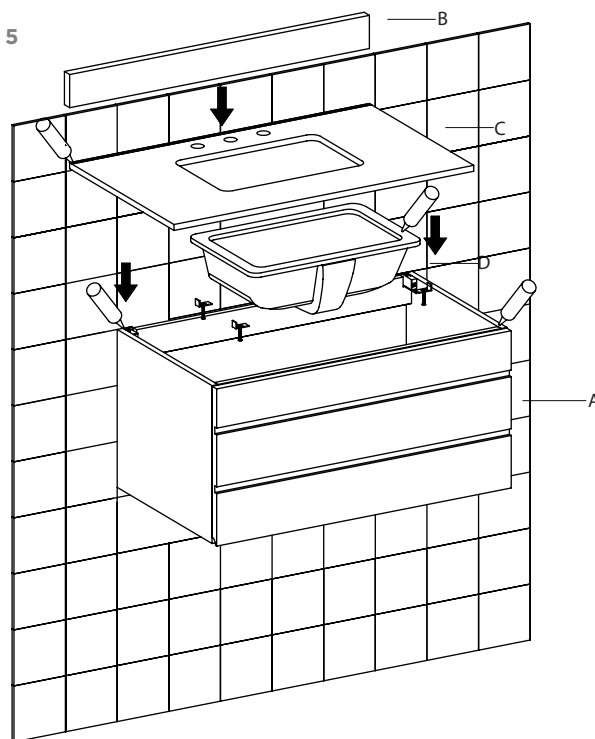

6 Securing the vanity top (If installing Maykke vanity top) (see fig 5)


- ❑ Place the vanity top (C) with the sink (D) over the vanity (A).
- ❑ Make sure the wall is straight and there are no gaps between the wall and vanity top (C).
- ❑ Remove the top (C) and apply a small bead of silicone compound to the top of the vanity before the vanity top is set into position.
- ❑ Firmly press the vanity top (C) into position; check the level and evenness across the front of the vanity (A), and make sure the vanity top (C) is flush to the wall.
- ❑ Apply silicone compound to the back and bottom of the backsplash (B). Firmly press the backsplash (B) to the vanity top (C) to set into place, then firmly press the backsplash (B) to the wall.

7 Reconnecting the water supply

- ❑ Reconnect the faucet supply lines to the water supply and reconnect the p-trap.
- ❑ Install the pop-up drain.
- ❑ Turn on the water supply or the home's main water supply and test for leaks.

DRAWER ADJUSTMENT

UP AND DOWN

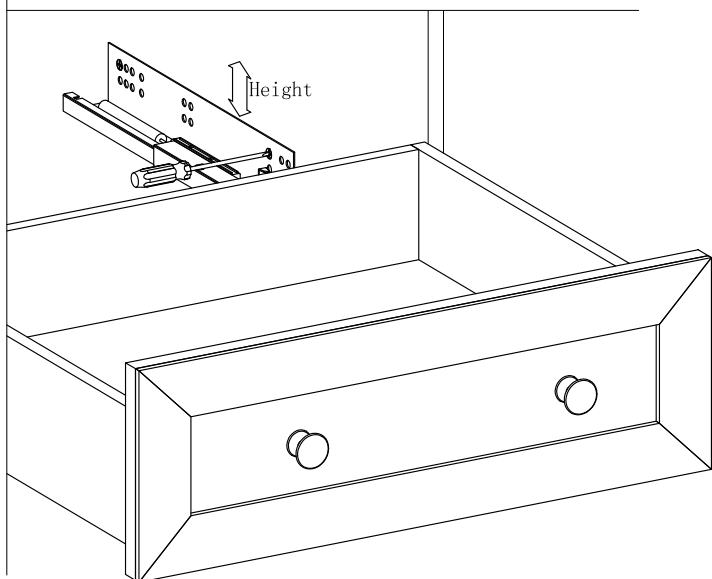


If the gaps above or below the drawer need adjustment, simply turn the screw that is mounted to the glide of the drawer box.

By loosening the screws this gives the drawer box freedom to move up or down.

Remember to tighten the screws after the drawer box is in place.

FRONT TO BACK

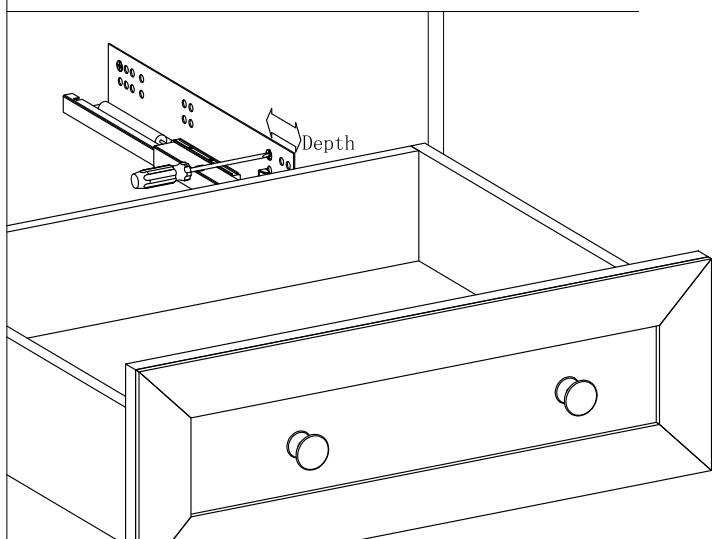

If the drawer is not aligned with the vanity frame, pull the drawer out to its furthest point to reveal the screw closest to you.

By turning the screw clockwise or counter clockwise it will adjust the depth of the drawer.

Adjust the drawer until the face is flush with the vanity frame.

CARE AND CLEANING

Wood

Care: Excess moisture can be damaging to any fine wood finish, be sure to clean up any spills right away.

Over time, exposure to sunlight, smoke and chemicals may cause some finishes to vary from their original color. Cabinets or accessories added at a later date may not match cabinets previously installed. For the same reason, finish samples on displays may not represent the exact color of cabinets received at the time of shipment.

Over exposure to humidity may cause permanent damage to the product. It is very important to dissipate the humidity in the room as soon as possible. If exposed to higher temperatures (excess of 160°) for extended periods of time the heat may be excessive and the doors and drawers should be removed right away.

Cleaning: Dust Cabinets using a soft, lint-free cloth. When needed, clean the vanity with a clean damp cloth, wiping dry with another clean soft cloth. A non-silicone based furniture cleaner can be used periodically when additional cleaning is needed.

Vitreous China

Care: Rinse thoroughly and use a soft cloth to wipe the product dry after each use to prevent hard water stains.

Cleaning: Soft abrasive cleaners may be used when necessary.

Granite or Marble Tops

Care: Natural stone is a porous material; and may stain if not properly cared for. Stone tops should be sealed before using. Follow the instructions on the sealer label.

Cleaning: For best results use a natural stone cleaner and follow the directions on the label.

Quartz Tops

Care: Quartz is an easy material to maintain. It is a non-porous material that is highly resistant to staining, scratching, and heat. Though non-porous, it is not stain, scratch, or heat proof. Spills should be cleaned as soon as possible.

Cleaning: For best results use warm water with a small amount of non-abrasive cleaner that does not contain bleach.

WARRANTY

WHAT IS COVERED

All products in the package carry a One-Year Limited Warranty. This warranty applies only to the original purchaser and to the original installation of the product.

WHAT IS NOT COVERED

Damage caused during moving or during installation is not a defect or warranty issue and will not be considered as such. This warranty does not cover product failure caused by abusive treatment, surface scratches, misuse, neglect or damage due to handling or faulty installations. All wood naturally ages, darkens, changes in color, and mellows over time due to exposure to light. While this color change is imperceptible from day to day, it may be significant over a long period of time, or due to amount of light the wood is exposed to. Imperfections such as small surface splits, small dark holes or darker mineral streaks are natural and are not considered defects.

Contact support@maykke.com or call toll free 1 (877) 659-2858 M-F 7:30am - 4:30pm (PST) with any questions or warranty concerns

