


ASSEMBLY INSTRUCTIONS CABINET TRAVIS

ZUIVER^o

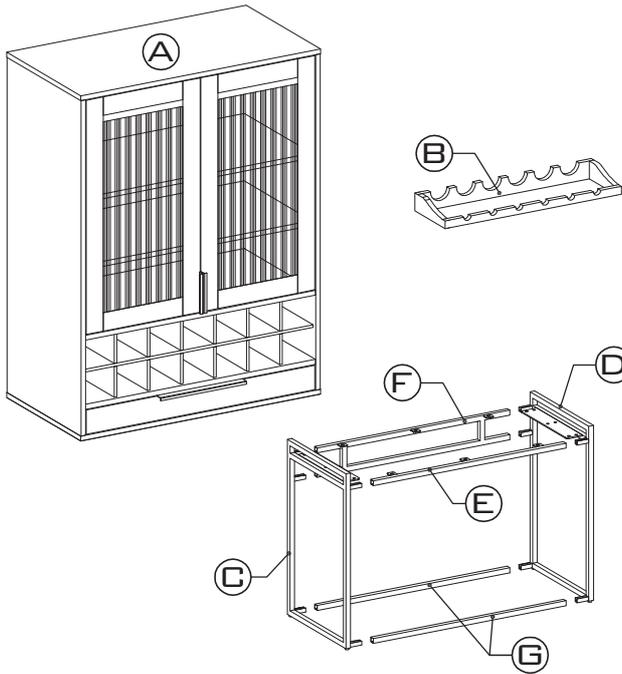

PARTS CHECK LIST




CODE	COMPONENTS	QTY
(A)	BODY	x01
(B)	WINE RACK	x01
(C)(D)	LEG FRAME	x02
(E)	BACK STRETCHER	x01
(F)	FRONT STRETCHER	x01
(G)	BOTTOM STRETCHER	x02

HARDWARE CHECK LIST

CODE	DESCRIPTION	QTY
[01]	SHORT BOLT	x20
[02]	LONG BOLT	x18
[03]	SPRING WASHER	x18
[04]	PLAT WASHER	x18
[05]	ALLEN KEY	x01
[06]	METAL BRACKET	x04
[07]	SCREW	x04
[08]	PLASTIC STRAP	x02
[09]	NYLON WALL STRAP	x02


- PLEASE DO NOT DISCARD ANY OF THE PACKAGING UNTIL YOU HAVE CHECKED ALL THE PARTS AND THE PACKS OF HARDWARE.
 - BEFORE YOU BEGIN TO ASSEMBLE YOUR NEW PIECE OF FURNITURE, PLEASE CHECK TO ENSURE THAT ALL PARTS HAVE BEEN SUPPLIED.
 - FOLLOW INSTRUCTIONS CLOSELY AS DEVIATION FROM THEM MAY VOID YOUR WARRANTY AND PRESENT A POSSIBLE SAFETY RISK.
 - IT IS RECOMMENDED THAT ASSEMBLY IS DONE ON A SOFT SURFACE LIKE CARPET TO AVOID ANY DAMAGE.
 - PERIODICALLY CHECK AND RE-TIGHTEN ANY FASTENERS. WIPE DOWN ALL SURFACES WEEKLY WITH A CLEAN CLOTH. DO NOT CLEAN ANY SURFACES WITH HARSH ABRASIVES OR CHEMICALS.

TOOLS REQUIRED
NOT SUPPLIED

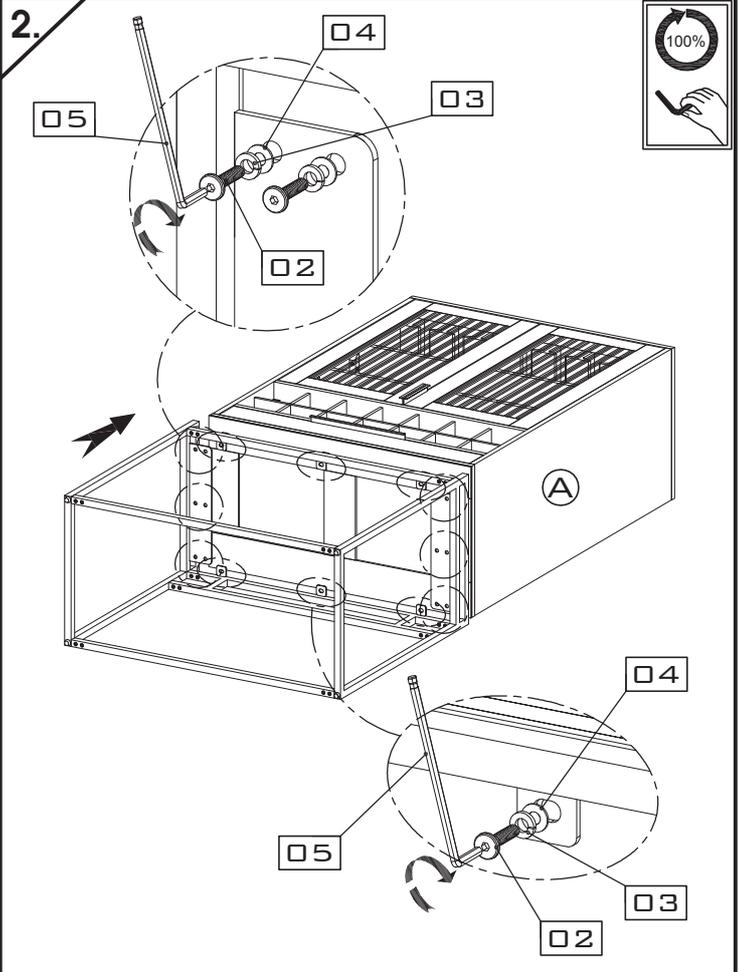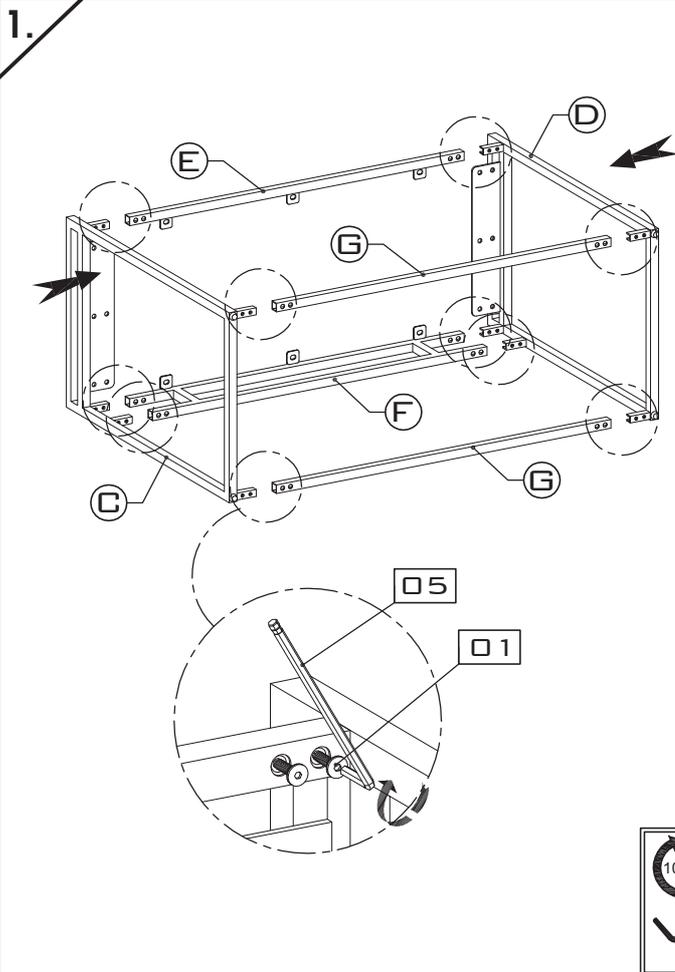



3.



BACK VIEW

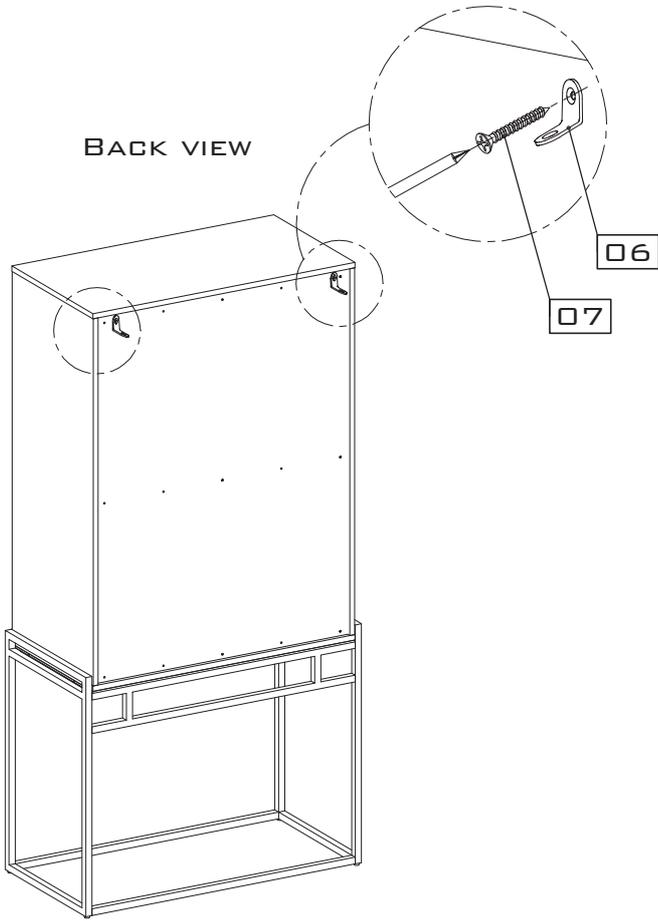

4.

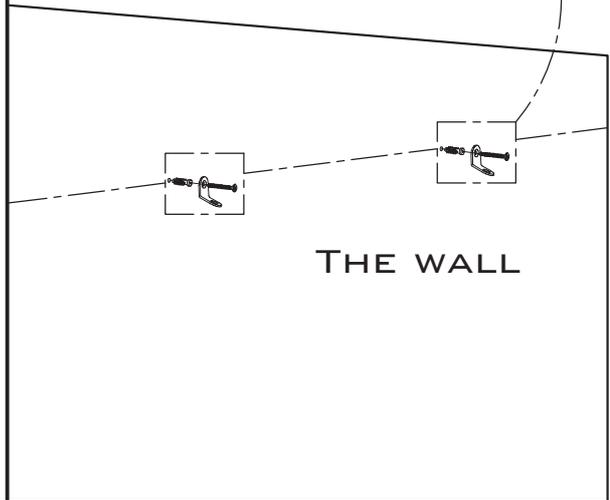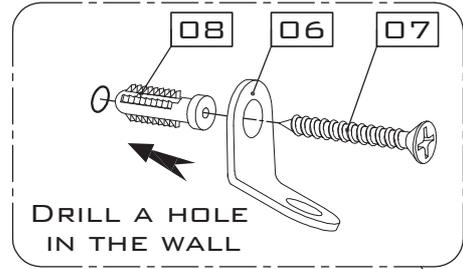

5.

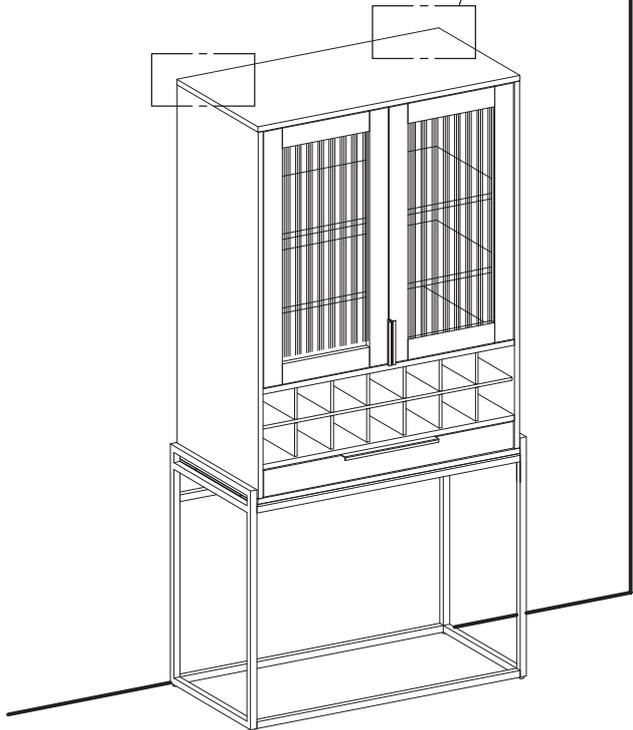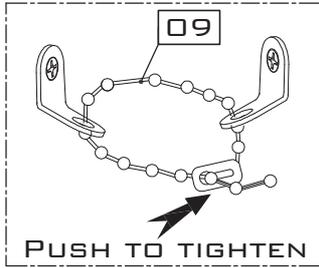

6.

