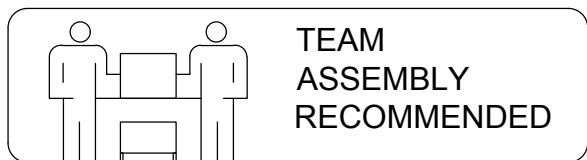
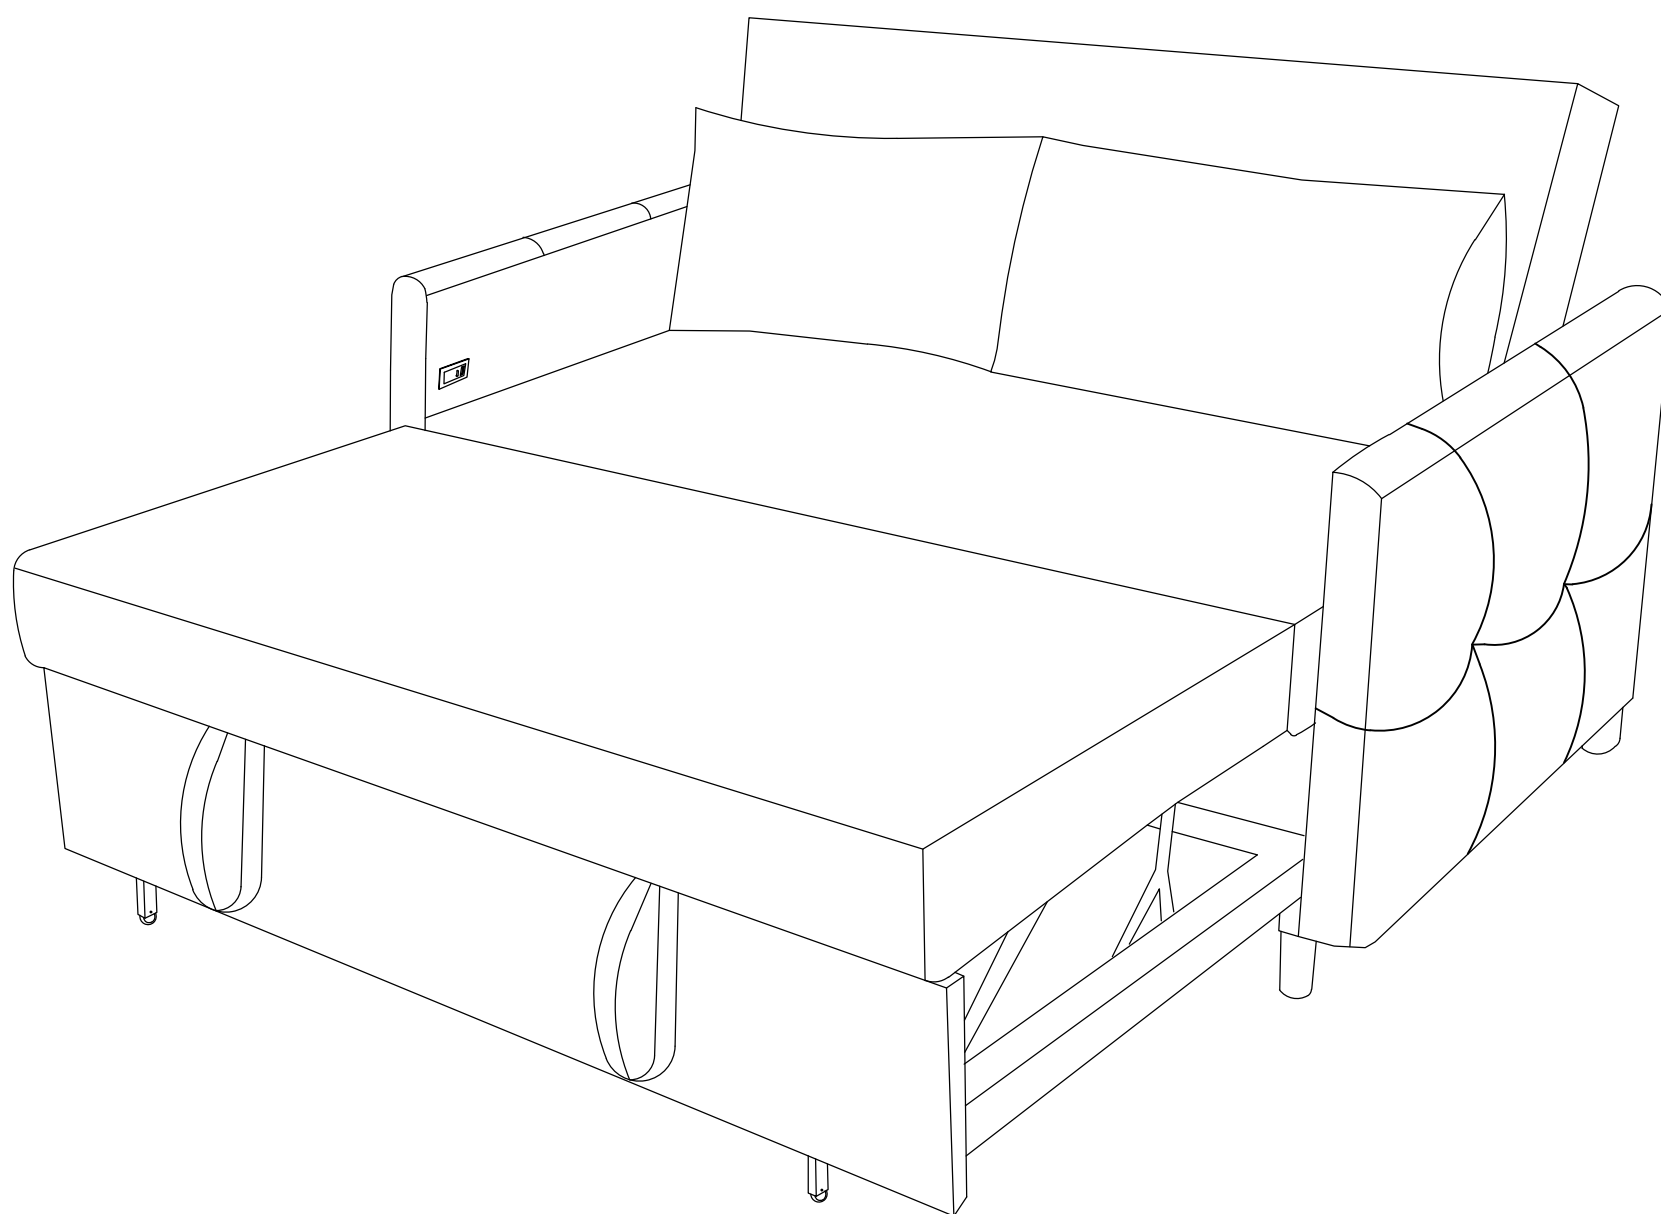


INSTRUCTION

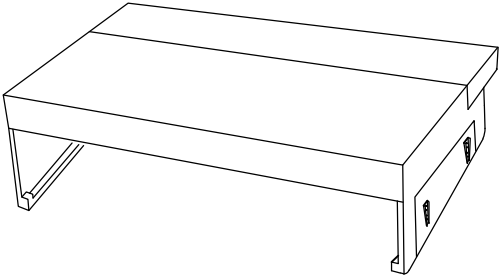
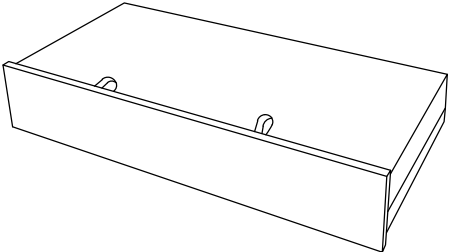
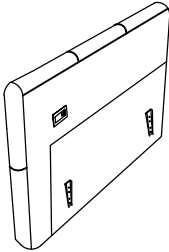
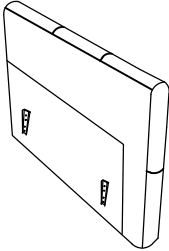
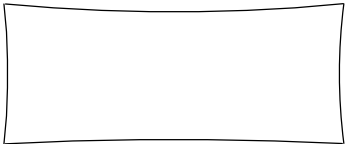

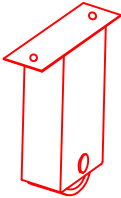
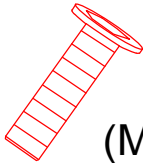
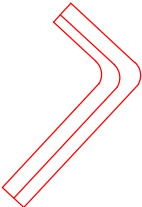
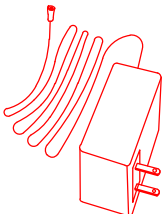


N719P185194




SOFA BED

PARTS LIST

NO	PART	DECS	QTY
A		SEAT CUSHION	1pc
B		TRUNDLE BED	1pc
C		LEFT ARM	1pc
D		RIGHT ARM	1pc
E		PILLOW	2pcs
F		LEGS	4pcs
G		WHEELS	4pcs
H	 (M6*20MM)	SHORT SCREW	8pcs
I		L-SHAPED WRENCH	1pc
J		USB POWER	1pc


STEP 1

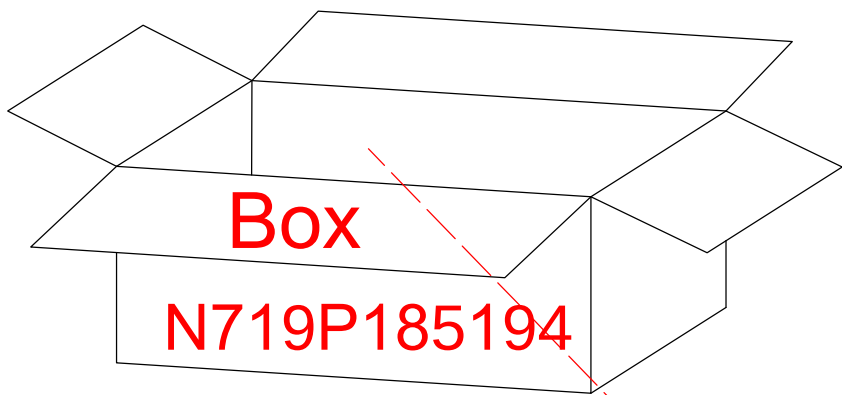Ship by 1 box




NO	PART	DECS	QTY
A		SEAT CUSHION	1pc
B		TRUNDLE BED	1pc
C		LEFT ARM	1pc
D		RIGHT ARM	1pc
E		PILLOW	2pcs
F		LEGS	4pcs
G		WHEELS	4pcs
H	 (M6*20MM)	SHORT SCREW	8pcs
I		L-SHAPED WRENCH	1pc
J		USB POWER	1pc

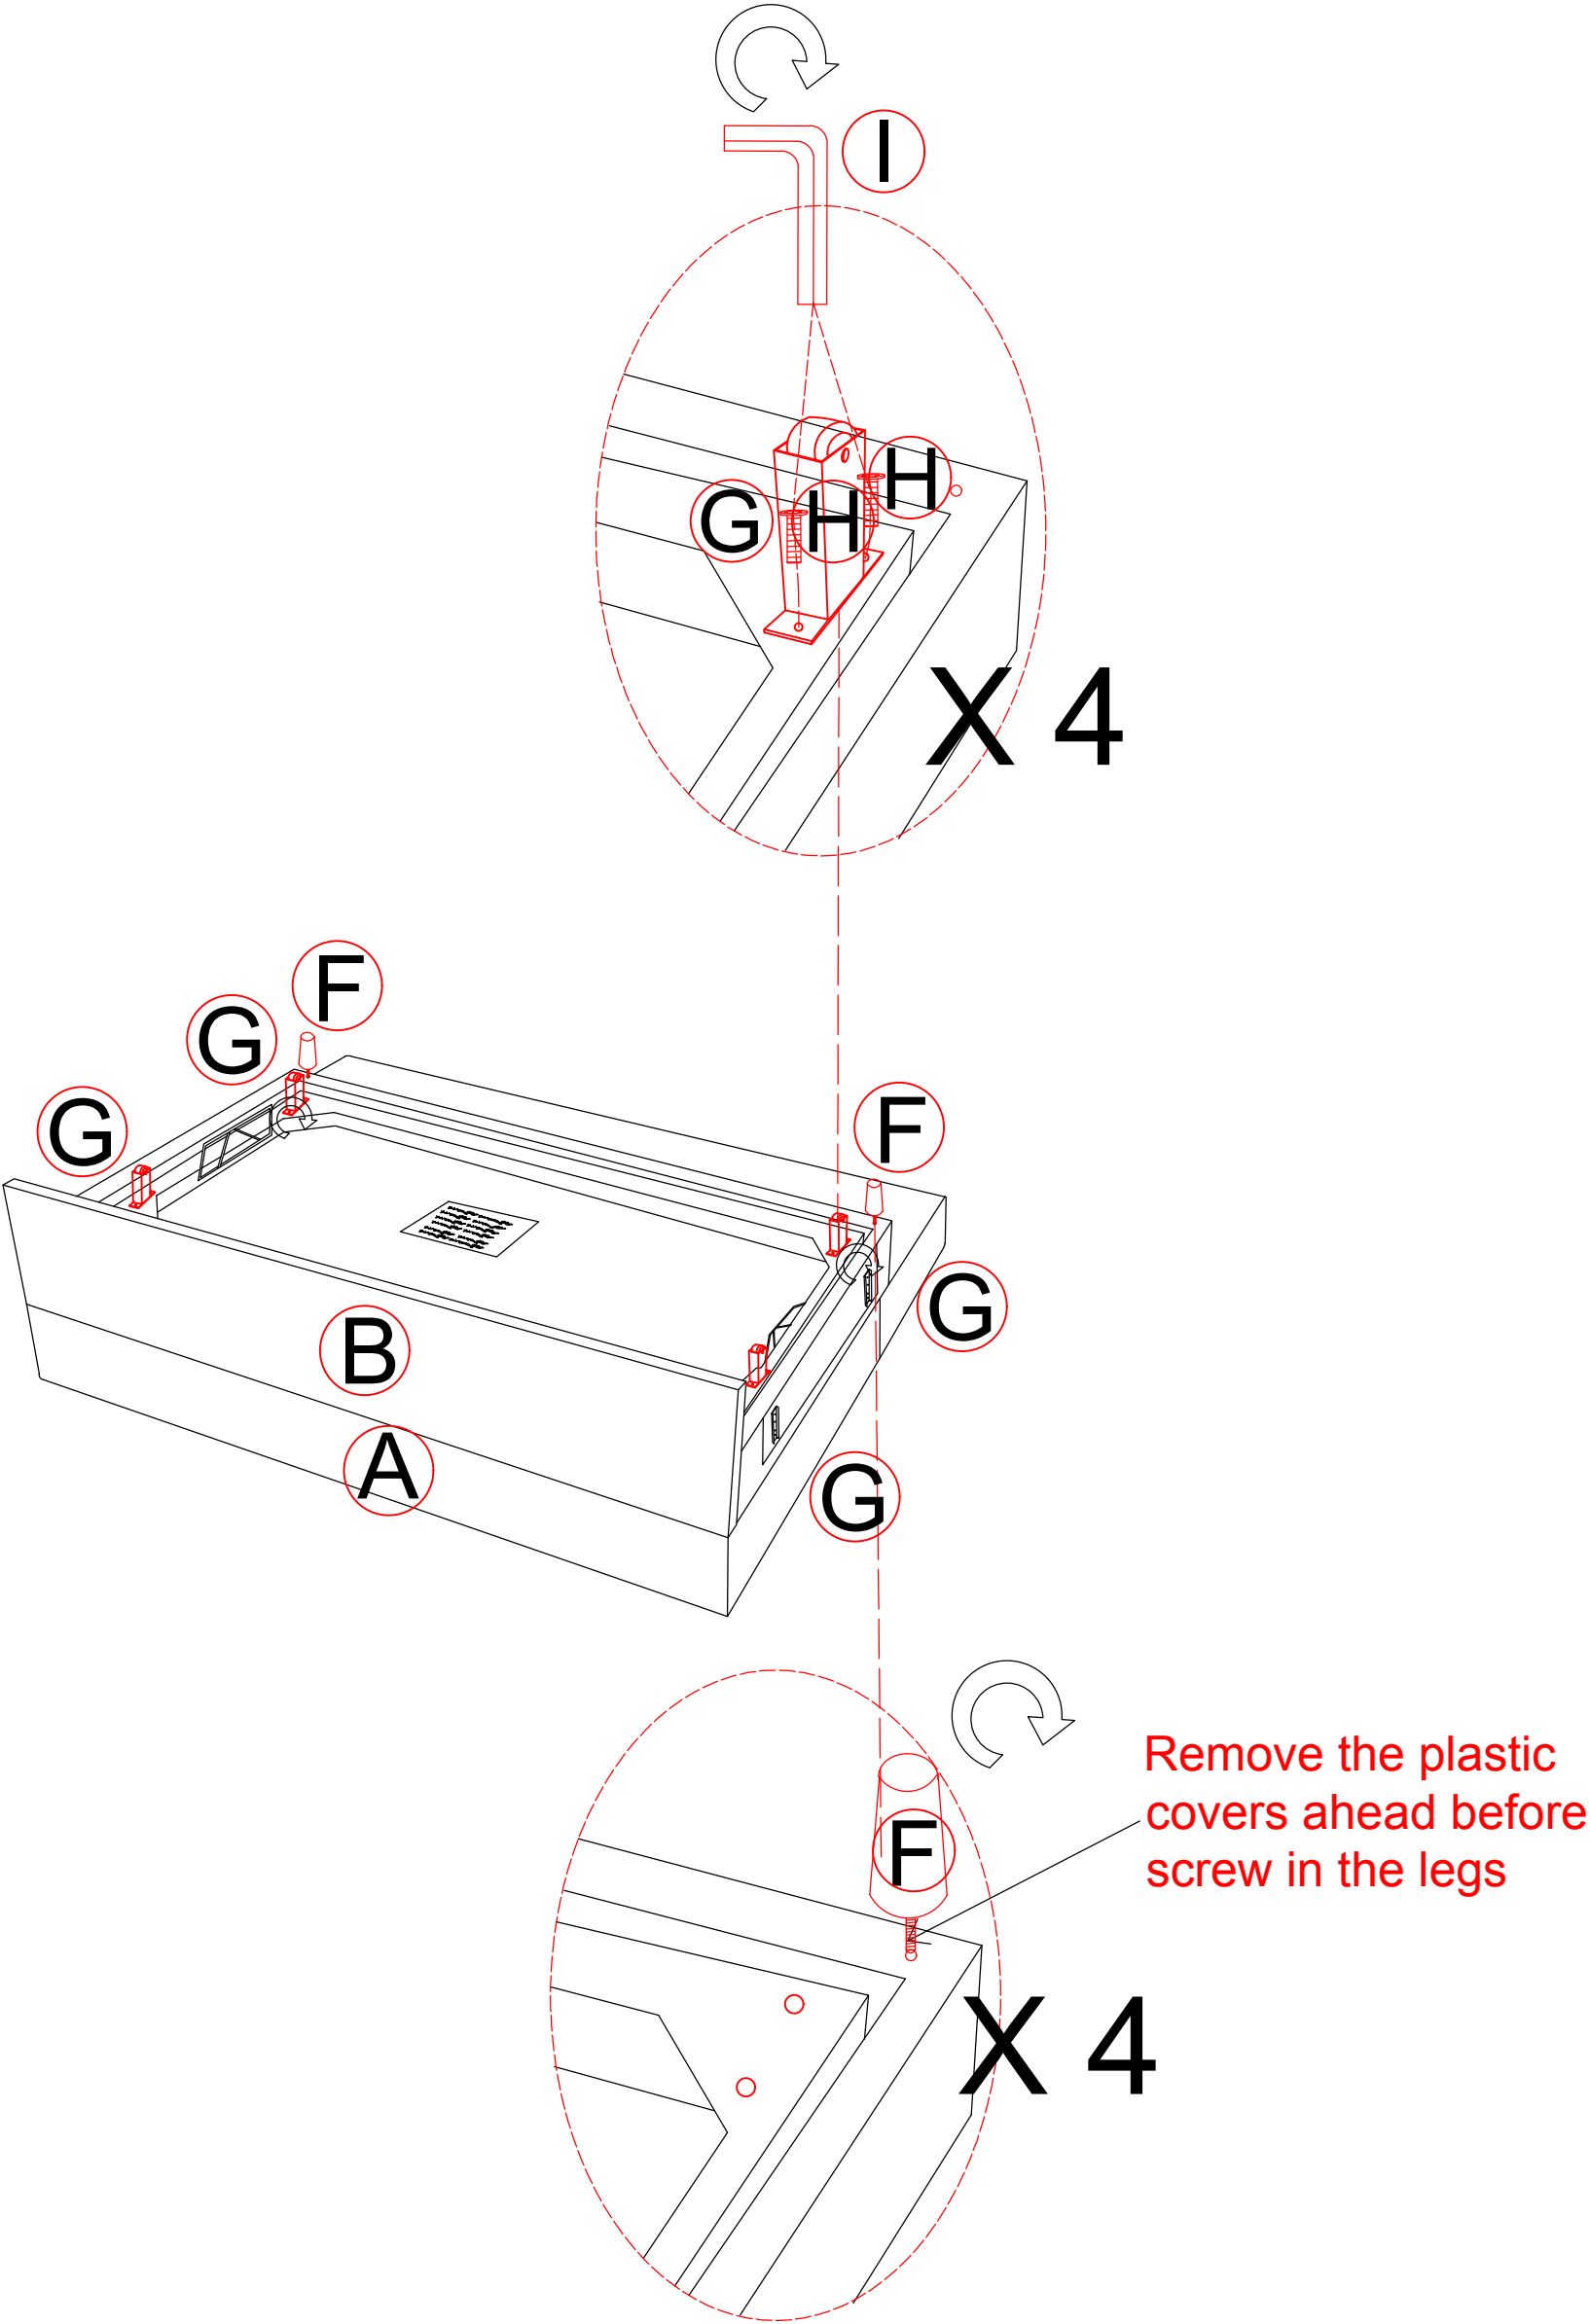STEP 2




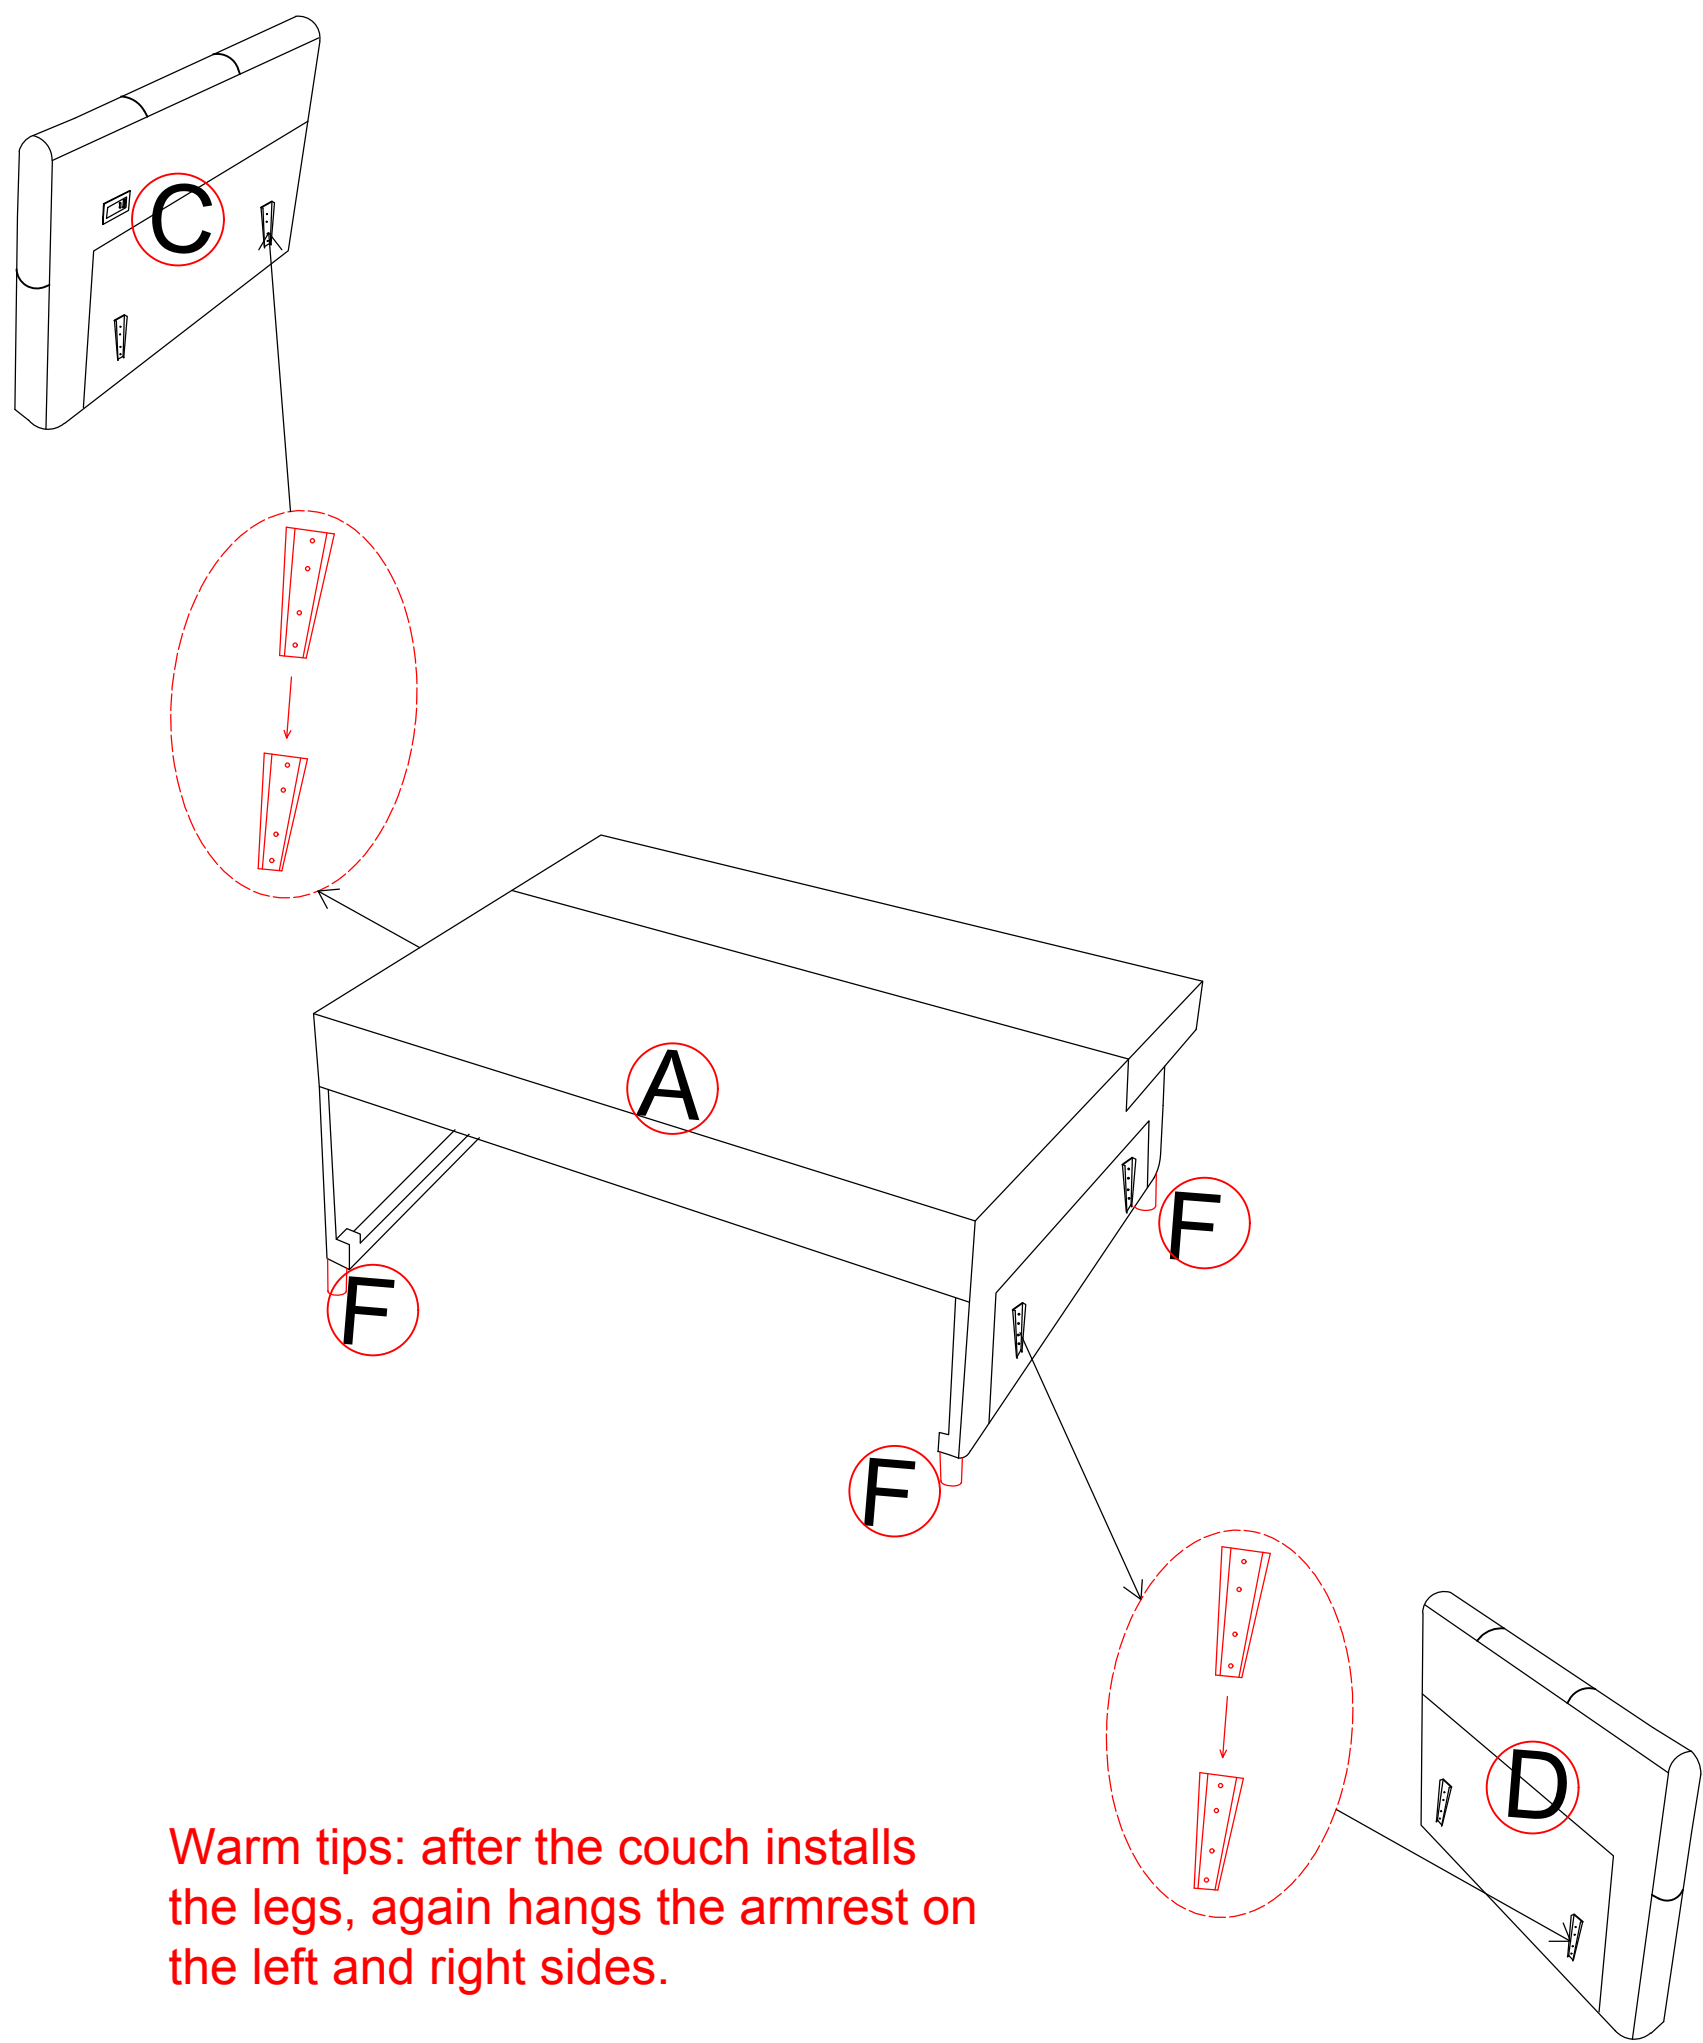STEP 3




Warm tips: after the couch installs the legs, again hangs the armrest on the left and right sides.

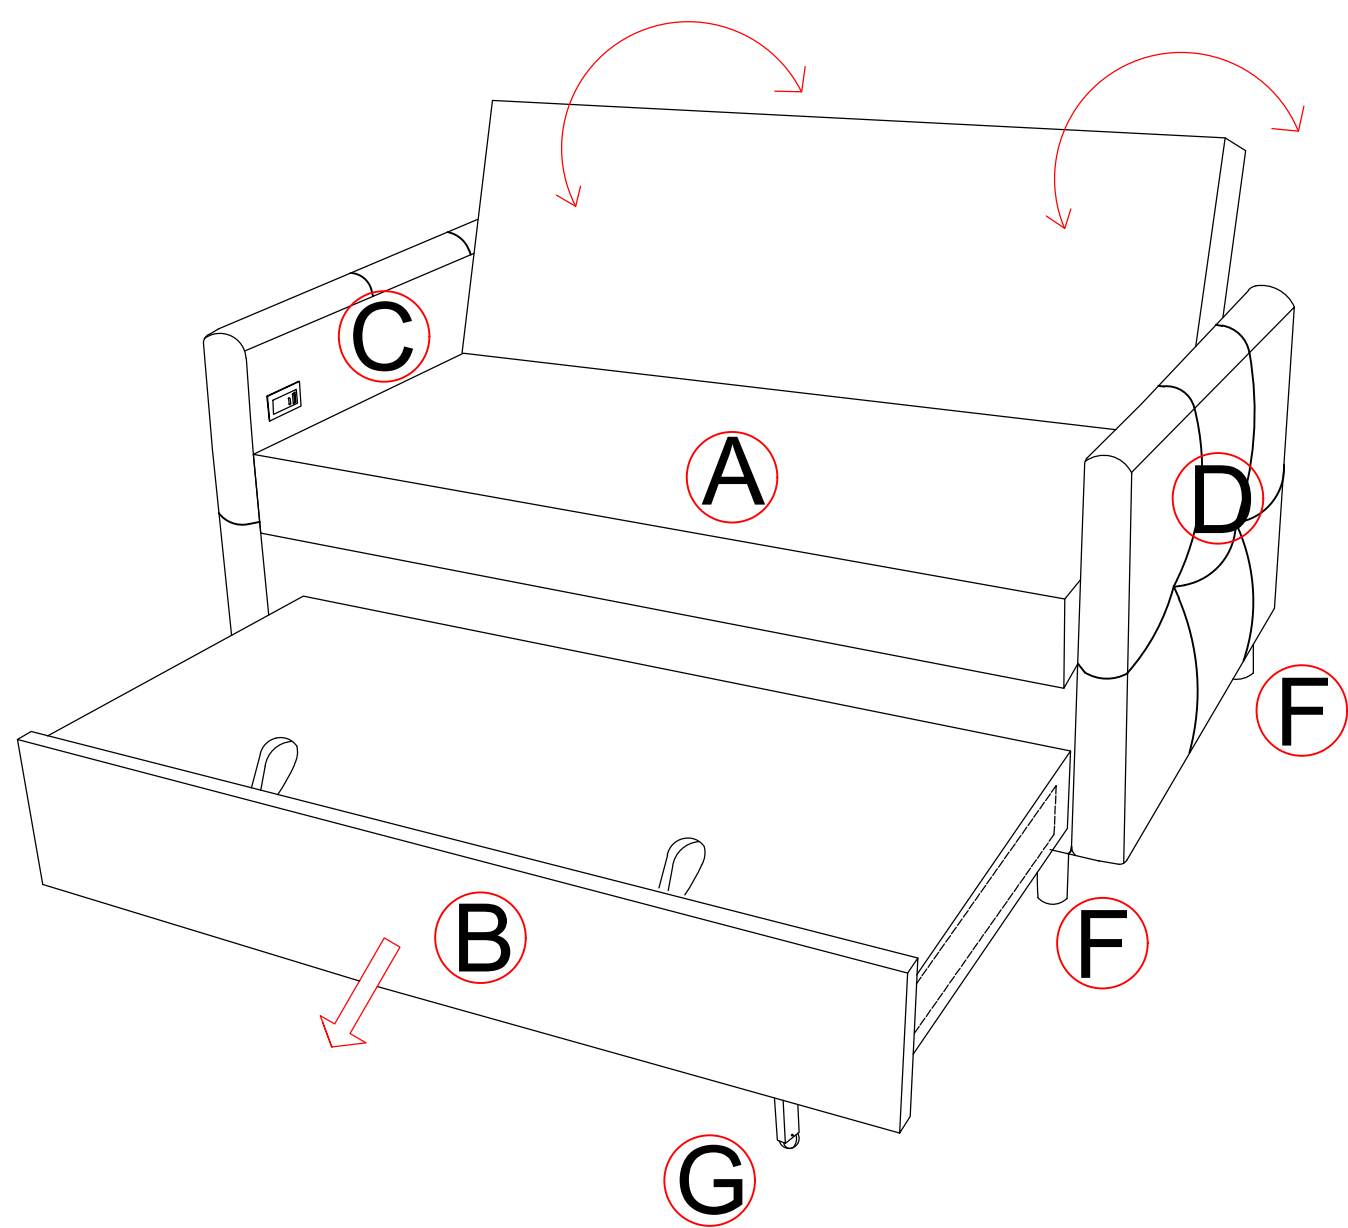STEP 4




The trundle bed can be pulled out.

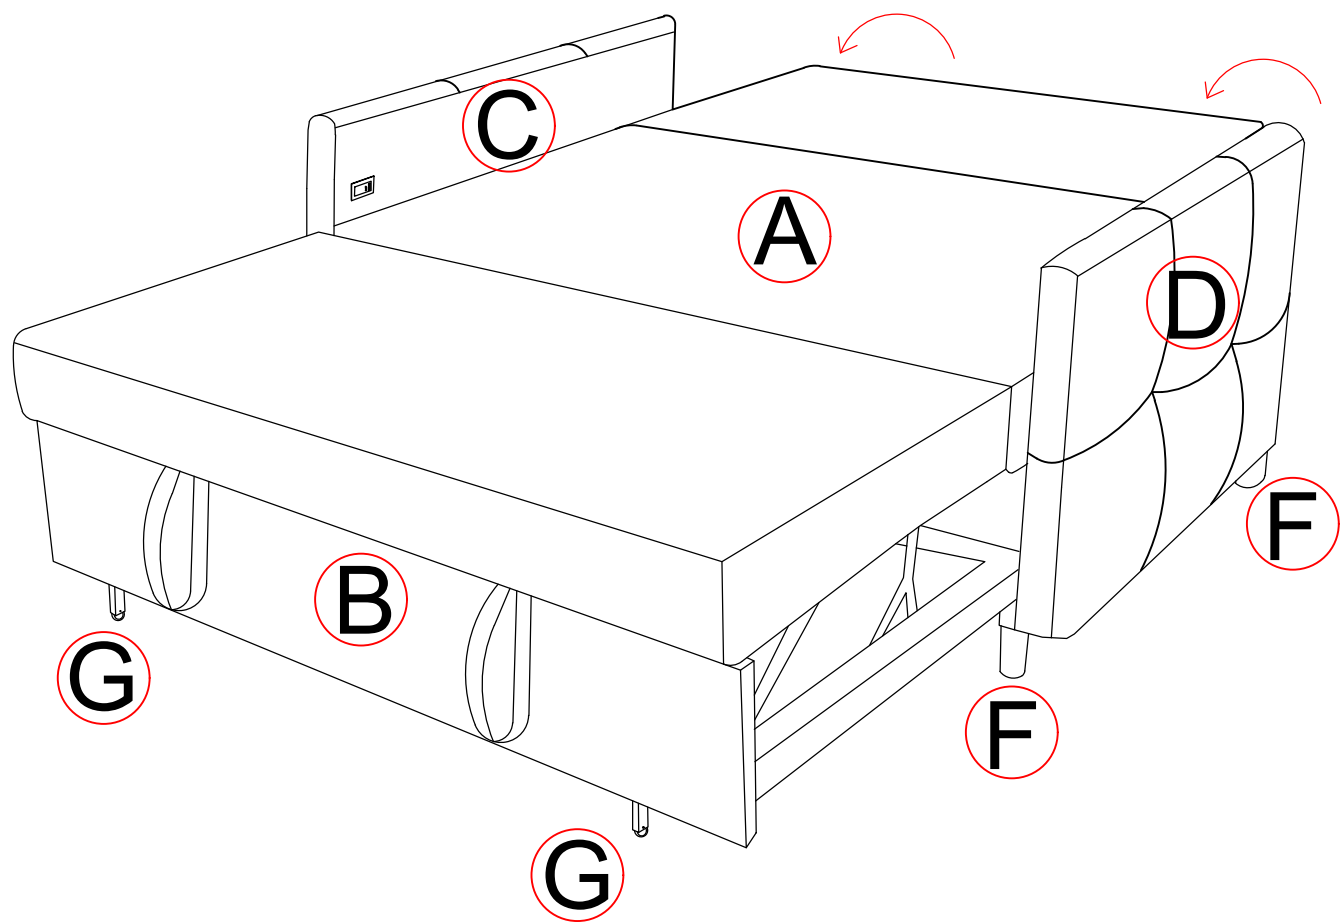STEP 5



The backrest can be flat.

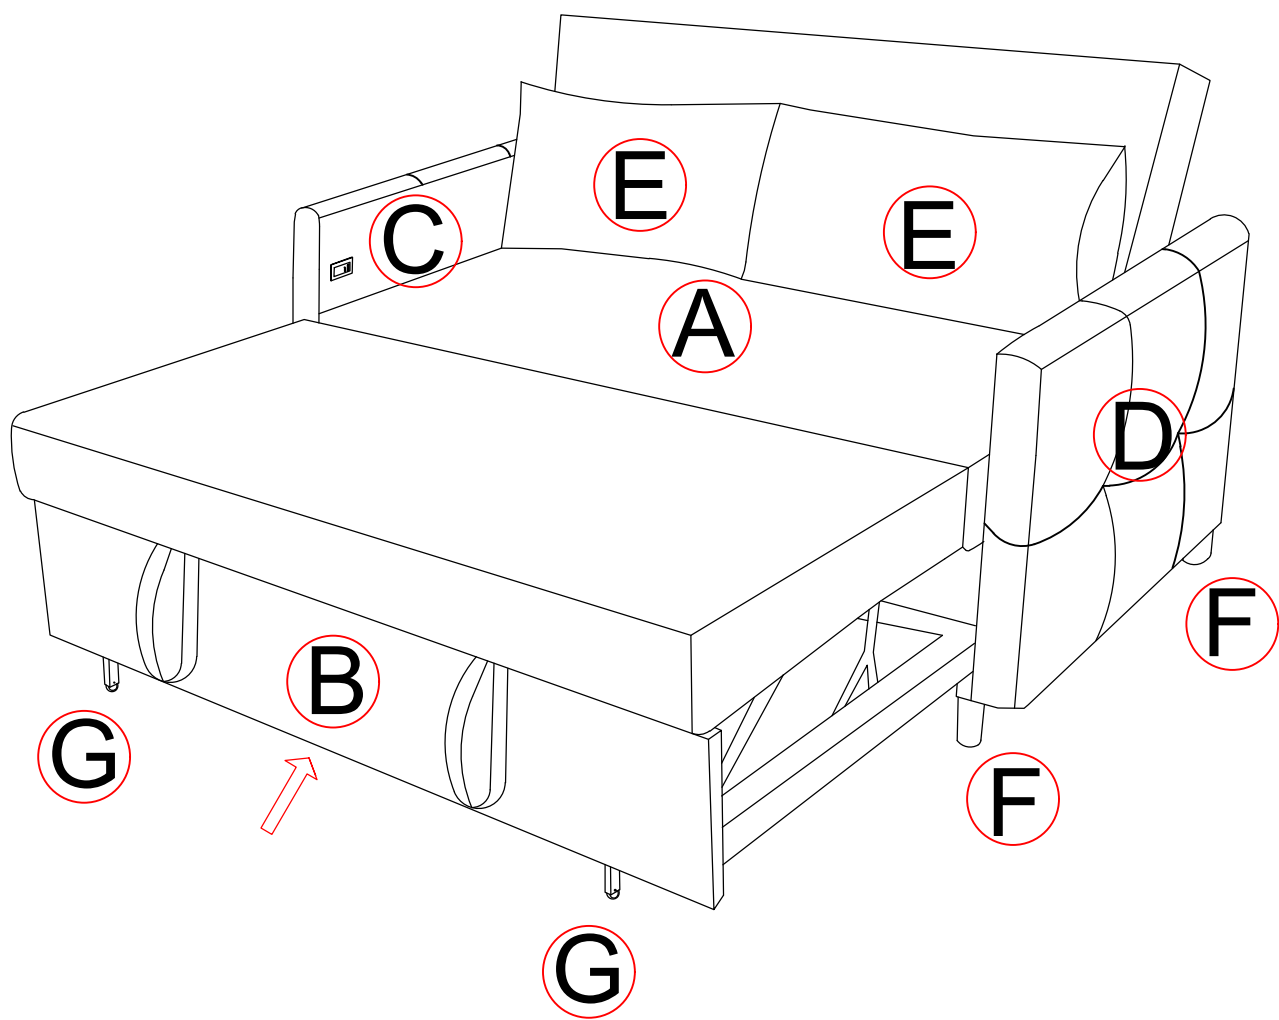

STEP 6

