


CONVENIENCE CONCEPTS

Oxford 3 Tier Corner Bookcase

203070W/203070BL/203070ES/203070GY

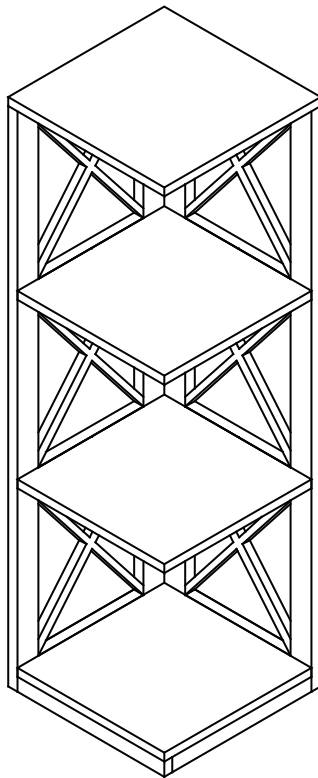

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish.



Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at
parts@convenience-concepts.com


Special Note: We recommend the use of a hand held screwdriver to avoid the stripping of screw heads.

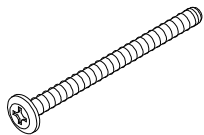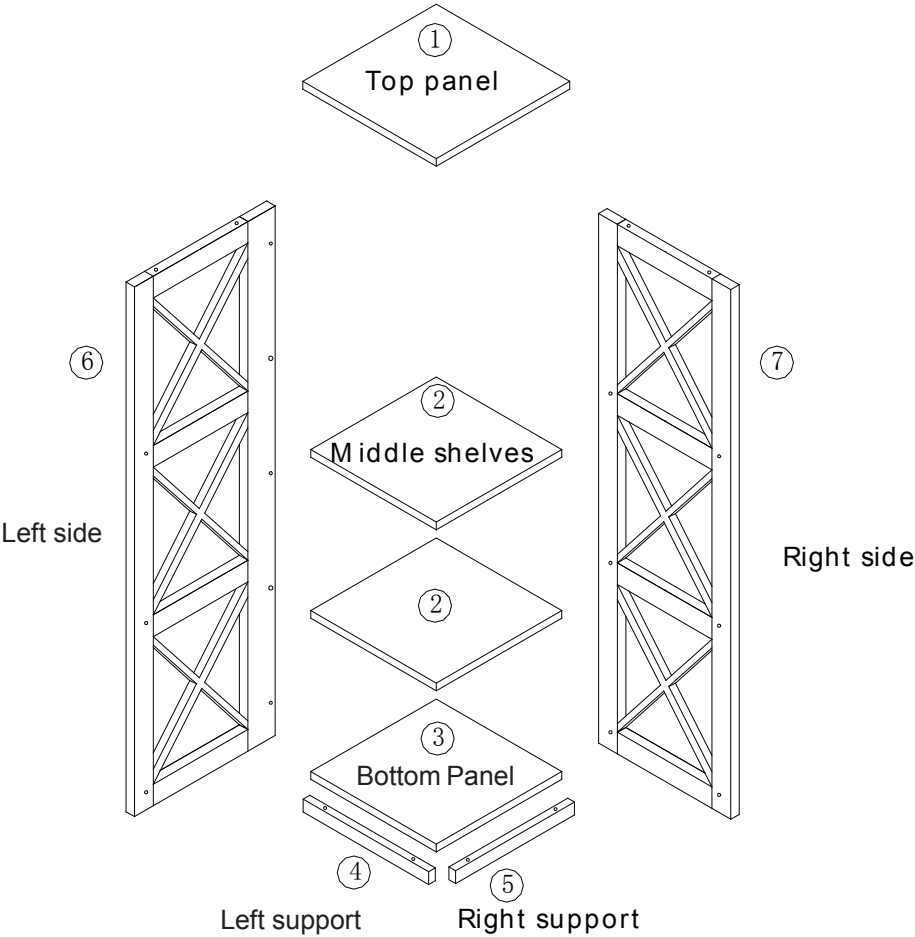

A x9
Bolt



B x9
Lock nut



C x2
Wood dowel



D x4
Cam bolt




E x4
Cam lock



F x9
Screw



G x2
Anchor




H x2
Anti-tip bracket




I x2
Small screw

Assembling the unit with cams.

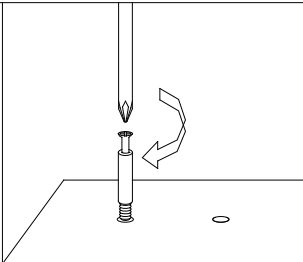

Gently screw cam bolt into the threaded anchor.

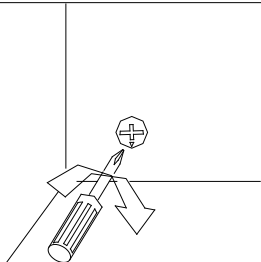






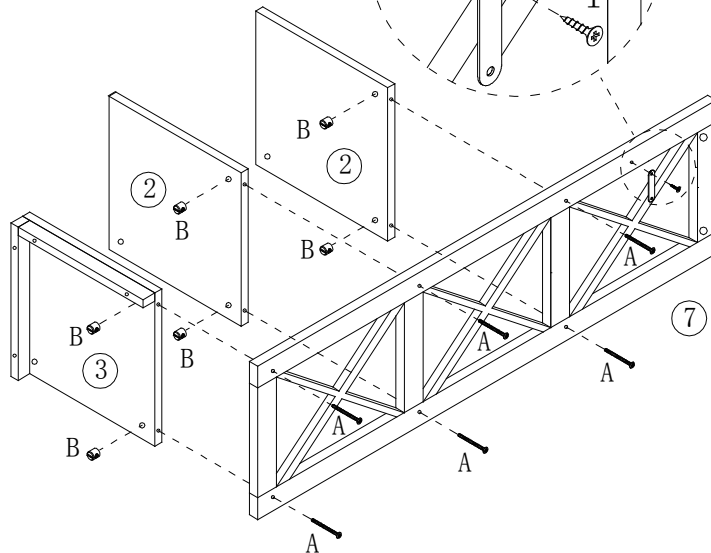
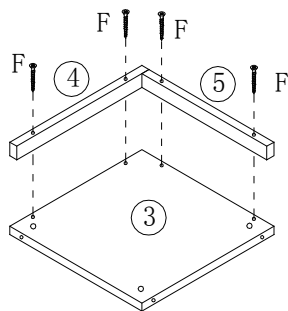
Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.

Step 1

1. Attach Left support ④ and Right support ⑤ to Bottom shelf ③ with Screws (F).
2. Attach Right Side panel ⑦ to Middle ② and Lower ③ shelves using Bolts (A) and Lock Nuts (B).
3. Attach Anti-Tip Bracket (H) to Right Side Panel ⑦ using Small Screw (I).







NOTE: Threads of lock nut must face bolt hole.


6 X (A)	
6 X (B)	
4 X (F)	
1 X (H)	
1 X (I)	



Step 2



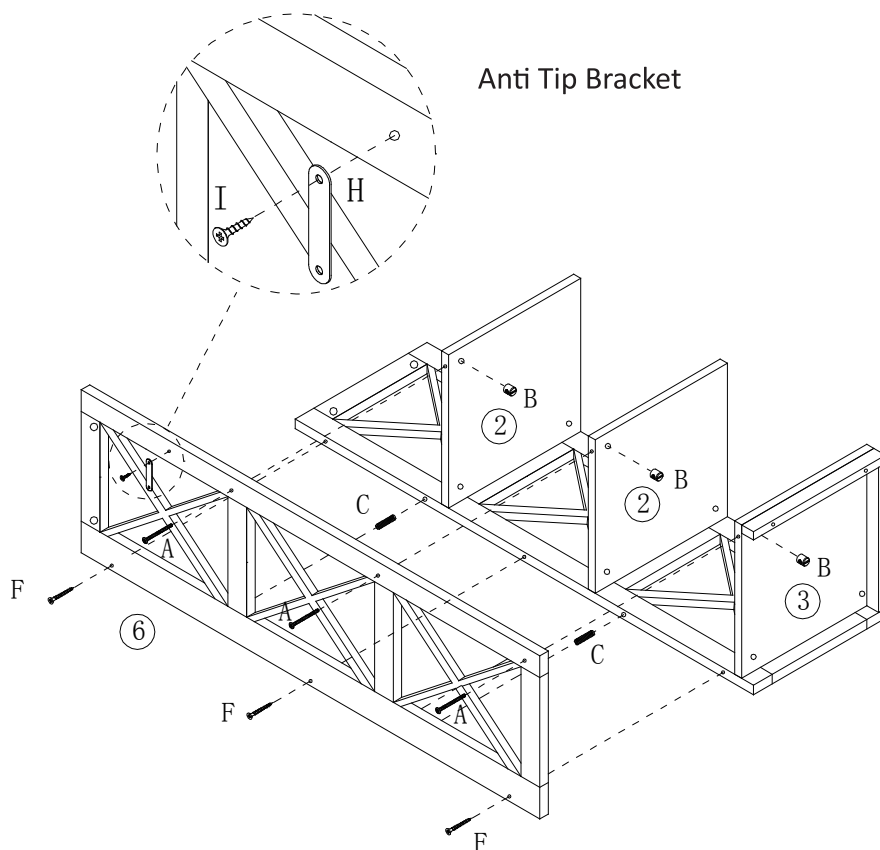

1. Insert Wood Dowels (C) into Left Side Panel ⑥.
2. Attach Left Side Panel ⑥ to assembly using Screws (F) on back part of Left Side Panel ⑥ along with Bolts (A) and Lock Nuts (B) on front part of left side panel ⑥.
3. Attach Anti-Tip Bracket (H) to Left Side Panel ⑥ using Small Screws (I).


3 X (A)	
3 X (B)	
2 X (C)	
3 X (F)	
1 X (H)	
1 X (I)	



Step 3


1. Screw Cam Bolts (D) into Top Panel ①.
2. Attach Top Panel ① to assembly using Cam Locks (E).

4 X (D)	
4 X (E)	
2 X (F)	
2 X (G)	

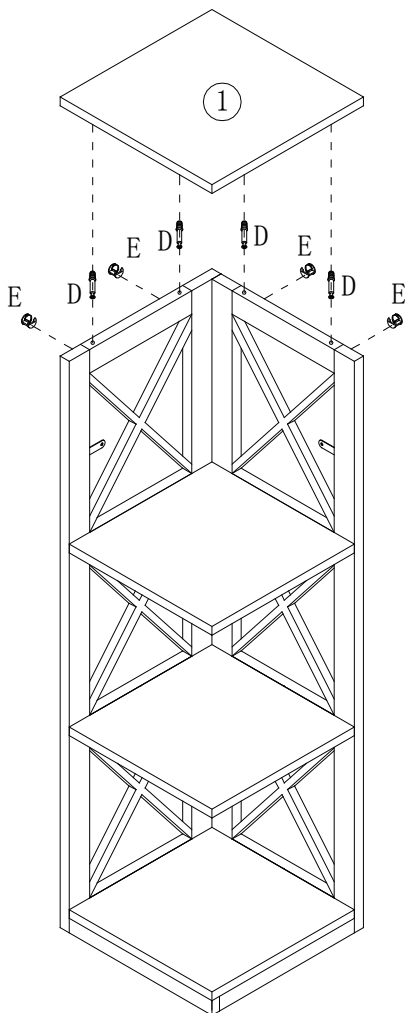

Step 4

1. Place unit into desired location and mark Anti-Tip bracket's (H) holes with pencil and remove unit.
2. Drill holes into wall slightly smaller than Anchors (G) and gently tap Anchors (G) into Wall.
3. Reposition unit and fasten to wall using Screws (F) and Anti-Tip brackets (H).

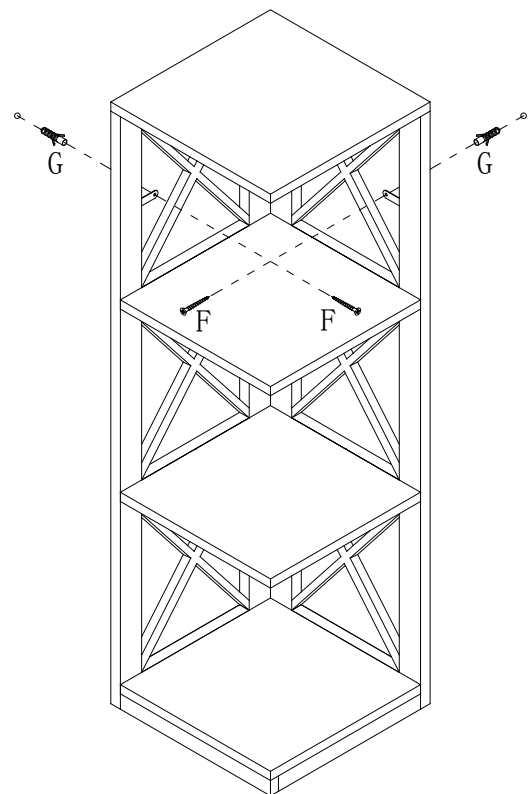

Refer to page 2 for cam lock/bolt instructions.