



ASSEMBLY INSTRUCTIONS (CONTINUED)


STEP 4

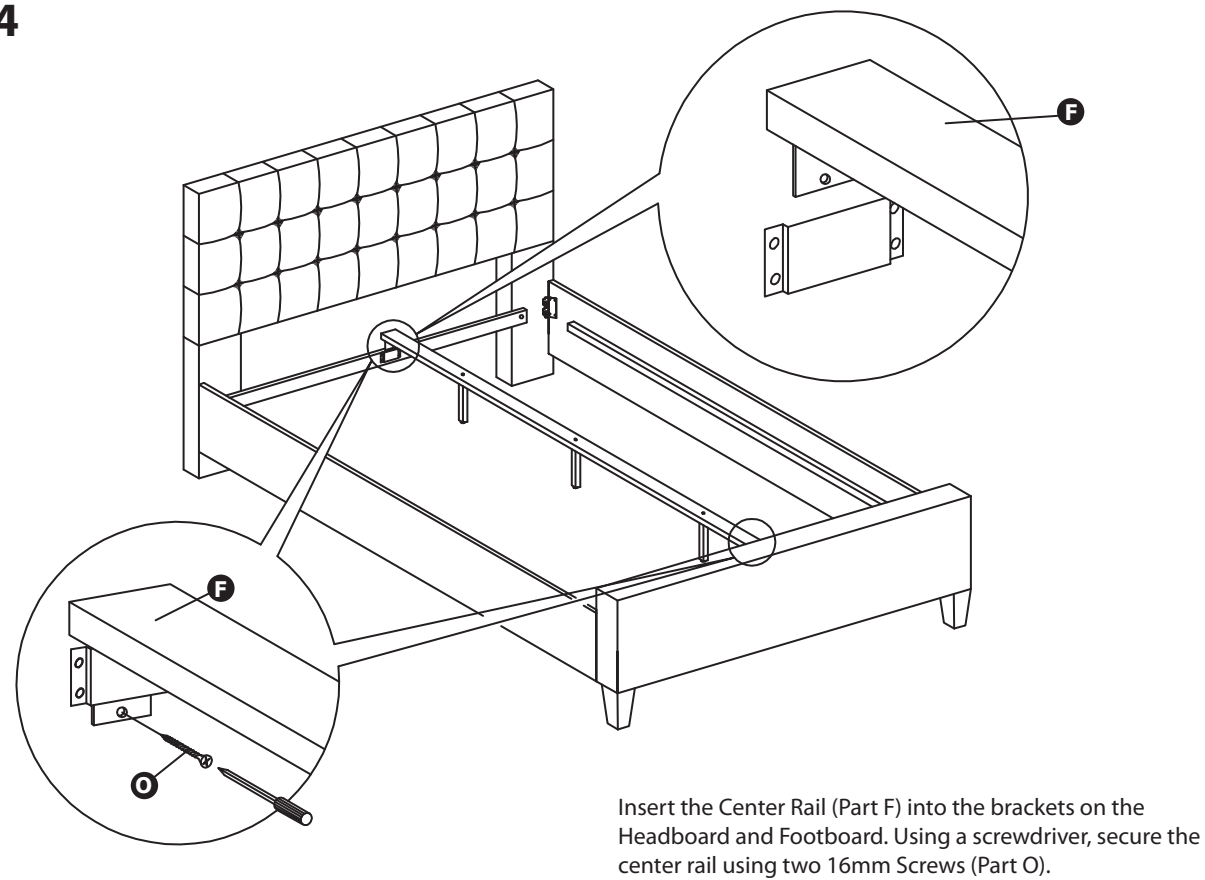

STEP 5

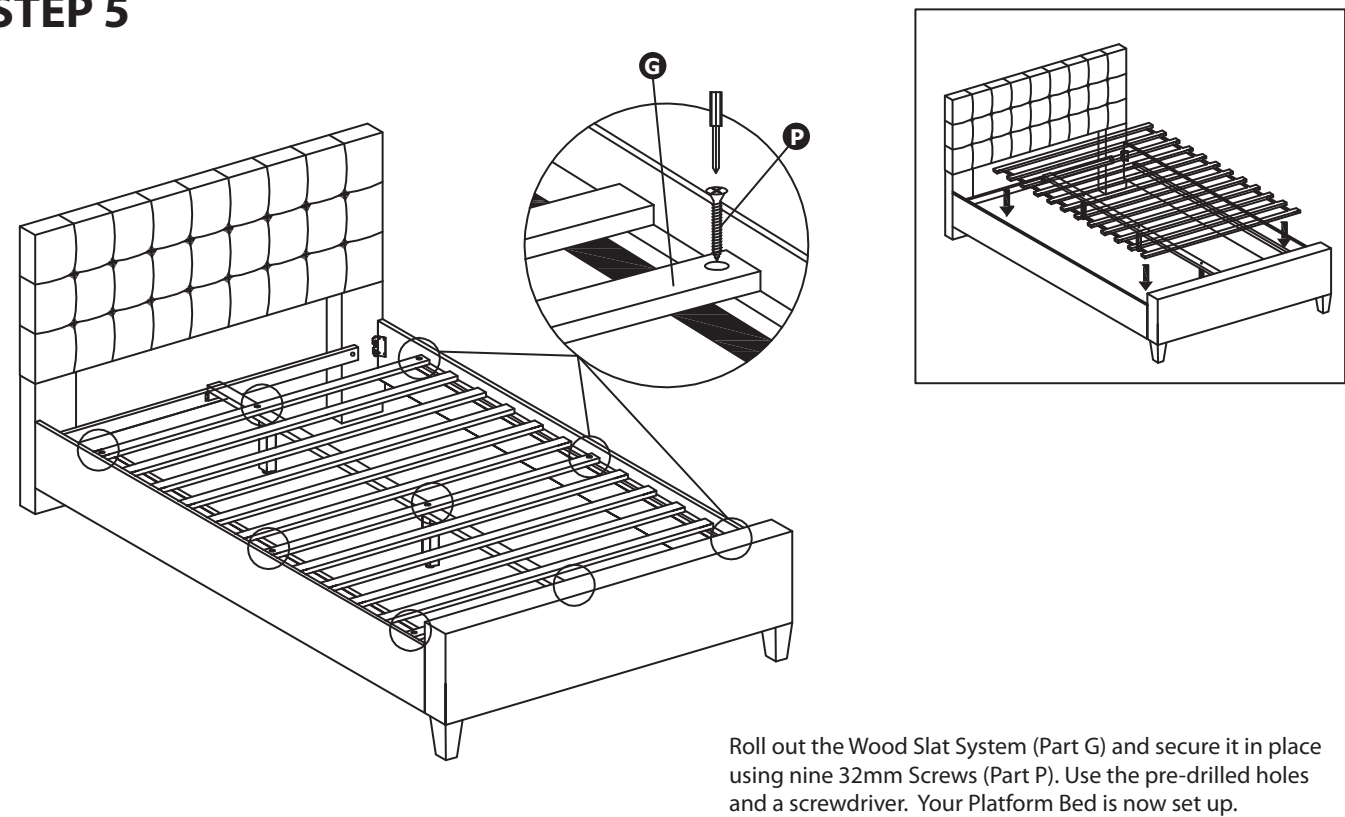

Platform Bed
Assembly Instructions
Contains One Bed and Hardware

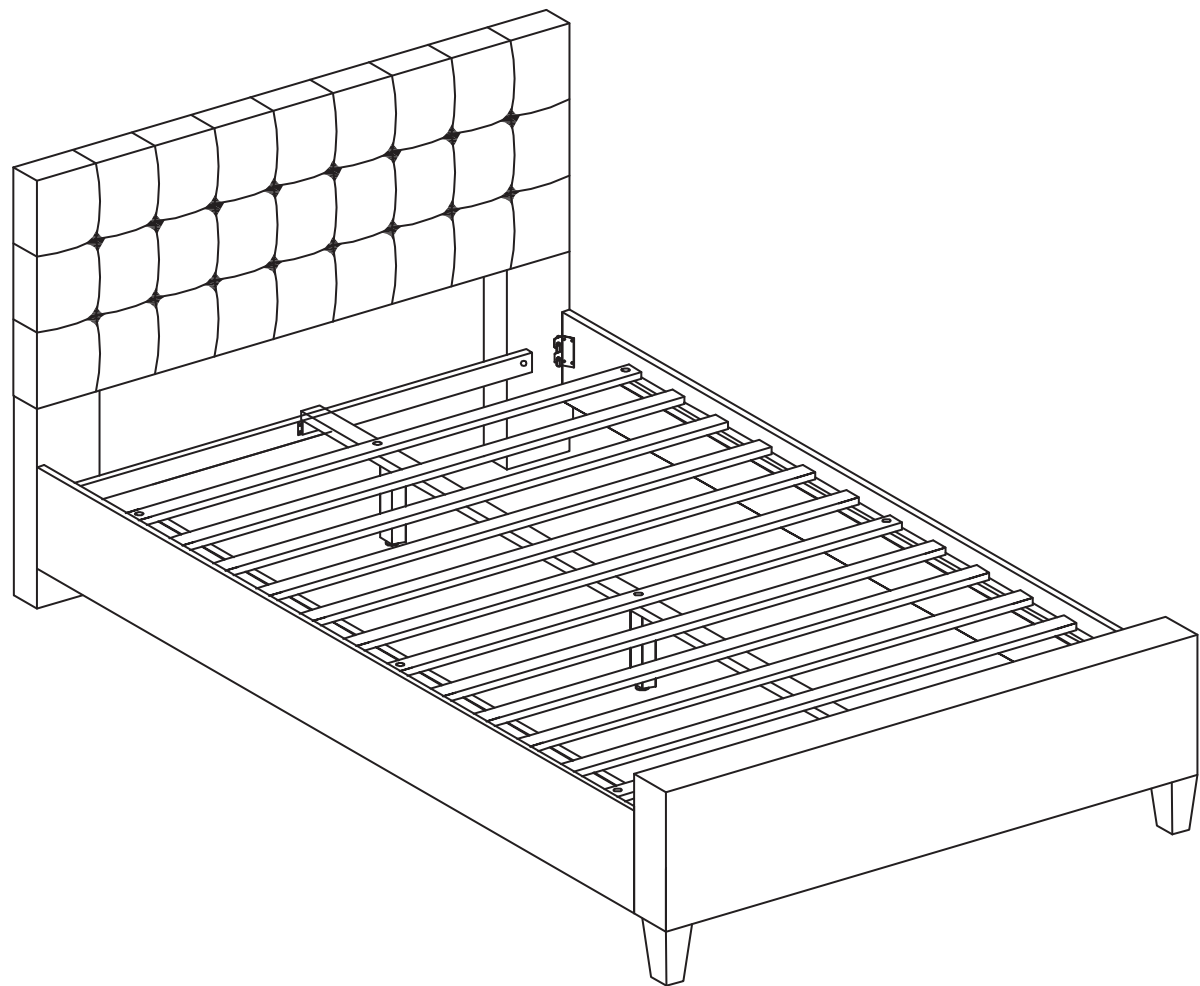

IMPORTANT NOTE:
Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.

TOOLS REQUIRED:
Phillips Screwdriver

PARTS LIST

A. Headboard Top (1 pc)

D. Headboard Leg (2 pcs)

G. Wood Slat System (1 pc)

B. Footboard (1 pc)

E. Footboard Leg (2 pcs)

H. Center Leg (3 pcs)

C. Side Rail (2 pcs)

F. Center Rail (1 pc)

I. Support Bar (1 pc)

D1

D2

R

L

HARDWARE LIST

J. 40mm Bolt (11 pcs)

K. Spring Washer (6 pcs)

L. Flat Washer (6 pcs)

M. Small Hex Key (1 pc)

N. Large Hex Key (1 pc)

O. 16mm Screw (2 pcs)

P. 32mm Screw (9 pcs)

ASSEMBLY INSTRUCTIONS

STEP 1

Match the label!

Assemble the Headboard Legs (Part D1 and D2) to the Headboard (Part A) using six 40mm Bolts (Part J), six Spring Washers (Part K) and six Flat Washers (Part L). Use the Small Hex Key (Part M) to secure the bolts. Be sure to use Part D1 for the right side and Part D2 for the left side of the headboard. Next secure the Support Bar (Part I) to the Headboard Legs (Part D) using two 40mm Bolts (Part J). Use the Small Hex Key (Part M) to secure the bolts.

STEP 2

Secure the Footboard Legs (Part E) into the Footboard (Part B). Screw the Center Legs (Part H) into the Center Rail (Part F) using three 40mm Bolts (Part J). Secure the bolts using Small Hex Key (Part M).

STEP 3

Attach the siderails (Part C) to the Headboard (Part A) and the Footboard (Part B) by hanging the siderails onto the pre-attached bolts on the Headboard and Footboard. Tighten the bolts using Large Hex Key (Part N).