


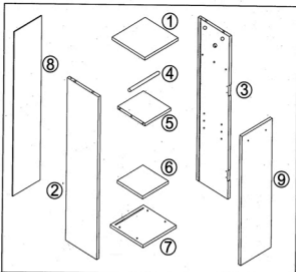














PARISIENNE




9912-626







<b>Ax6</b>  6x35mm	<b>Bx6</b>  15x10mm	<b>Cx4</b>  6x30mm	<b>Dx1</b> 	<b>Ex6</b>  3x14mm
<b>Fx2</b> 	<b>Gx9</b>  3x12mm	<b>Hx1</b> 	<b>Ix4</b> 	<b>Jx4</b>  4x35mm
<b>Kx4</b> 	<b>Lx4</b> 	<b>Mx4</b> 	<b>Nx1</b> 	<b>Ox2</b> 


1

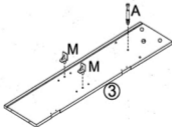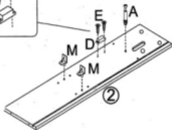


2

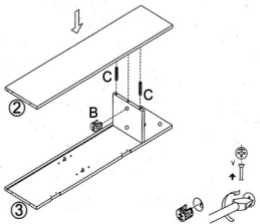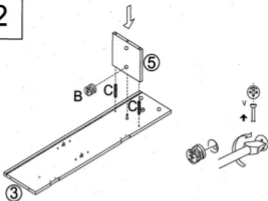

3

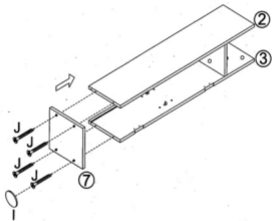



4

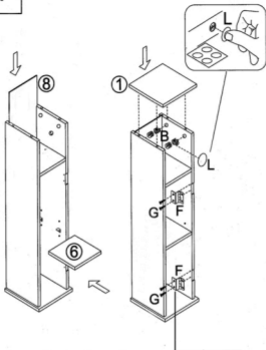

S'assurer de fixer les charnières sur la structure dans un premier temps, ensuite fixer les portes.

Please make sure to fix hinges on frame first, then to fix on door.


5

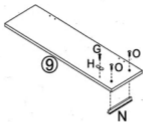

6

Avant de fixer "K",  
s'assurer que la dimension "XX=YY".

Before fix "K",  
please make sure size "XX=YY".

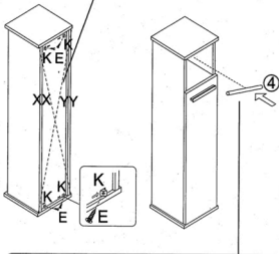

1



2



3



4

