

JONATHAN ADLER

FURNITURE

Delphine Desk


Assembly Instruction

For easy assembly two people are recommended.


Parts Included:

Hardware Included:


Desk Top (A) —1pc

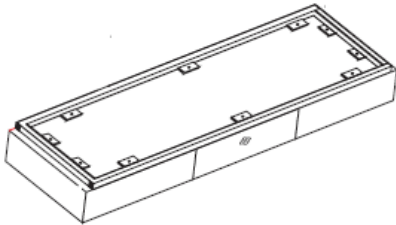


Left Frame (B1)—1pc Right Frame (B2)—1pc

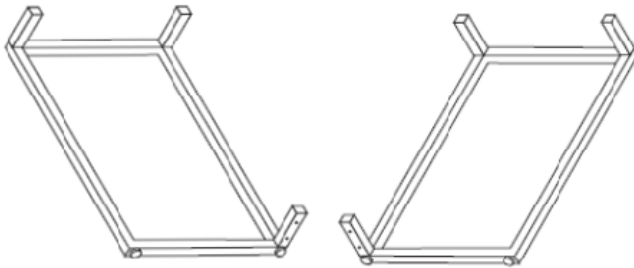


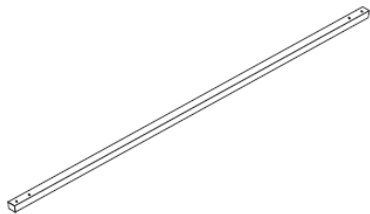



Cross Bar (C)—1pc

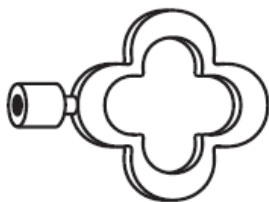

Metal Handle (D)—1pc



E	 Φ3*35MM	1PC
F	 Φ6*18MM	12PCS
G	 Φ6*38MM	6PCS
H		1PC
I	 Φ16MM	18PCS

JONATHAN ADLER


FURNITURE

Step 1

Remove all components from the box, and place the Desk Top (A) upside down on a carpeted or scratch-free surface. Insert the left side frame (B1) to the holes of Desk Top (A). Then insert the cross bar(C) to the left side frame and fully tighten with bolt (F) and Washer (I).

Step 2

Insert the right side frame (B2) to the Right holes on Desk Top (A) and Cross Bar(C), and fully tighten with Bolt (F) and Washer (I).

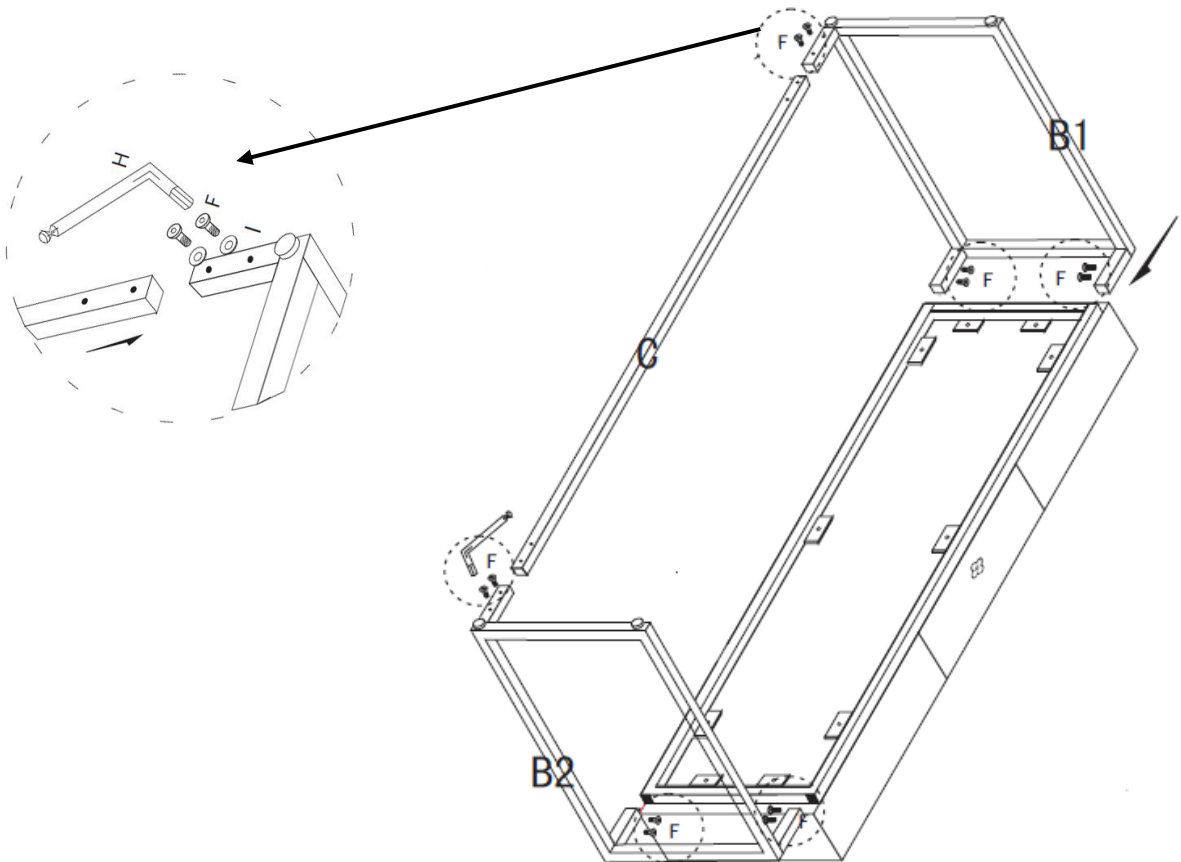


JONATHAN ADLER

FURNITURE


Step 3

Fix the top of side frame (B) to the both sides of Desk Top (A) with Bolts (G) and Washer (I).

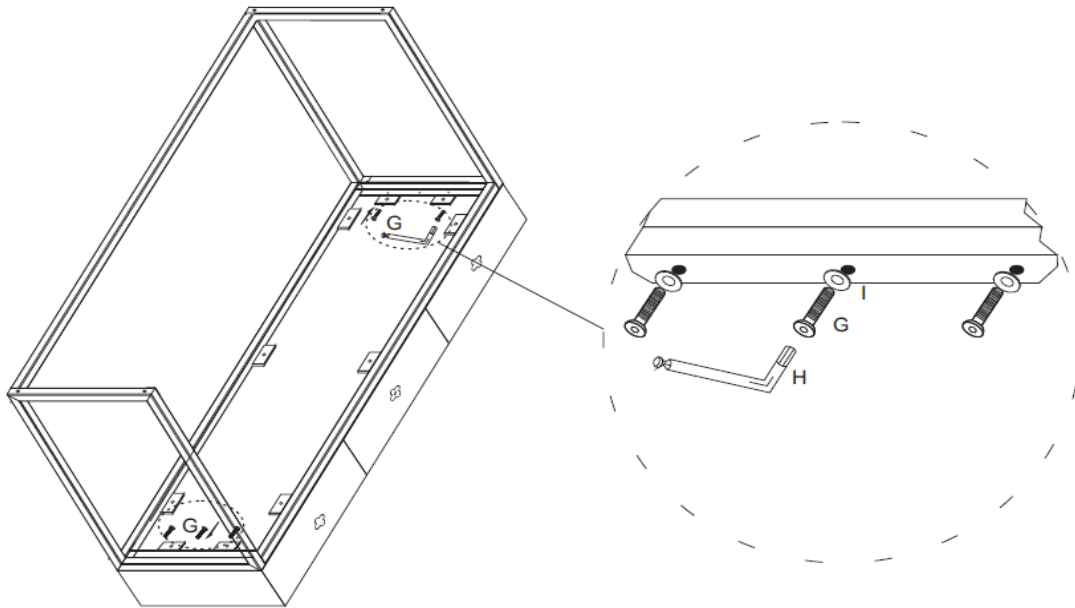

Step 4

Stand the Desk upright to level the four levelers.

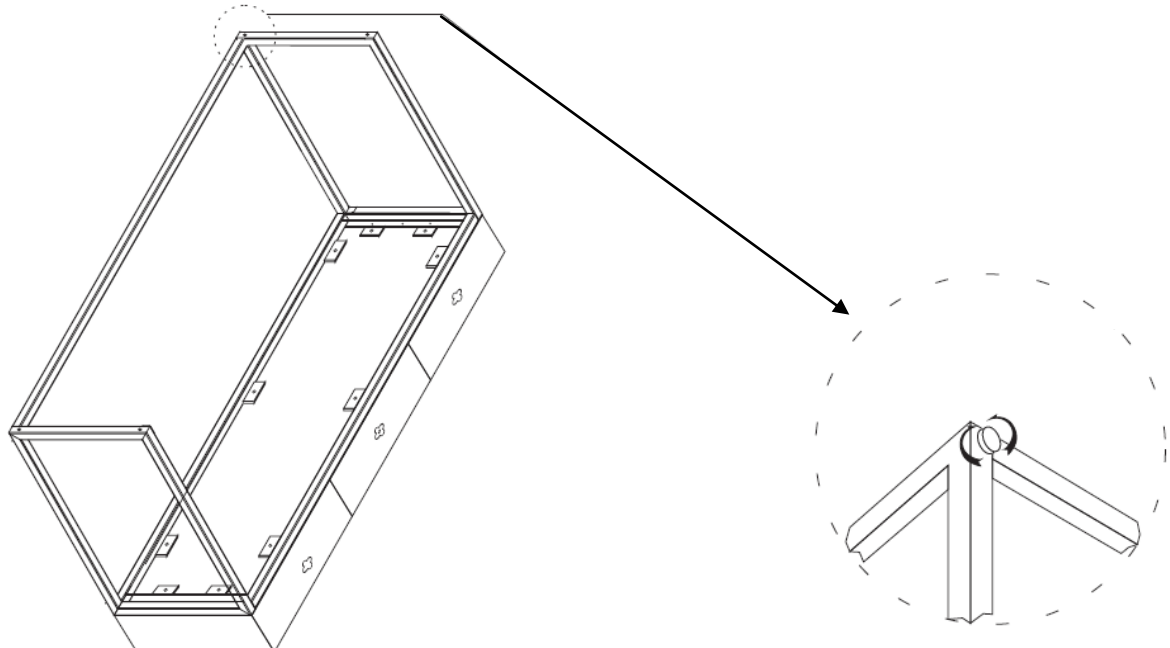


JONATHAN ADLER

FURNITURE

Step 5

Place the Metal Handle (D) in correct position in the front of the drawer, then use the screw driver(not included) to tighten the screw(E) through the metal flower center point and fix the handle(E).

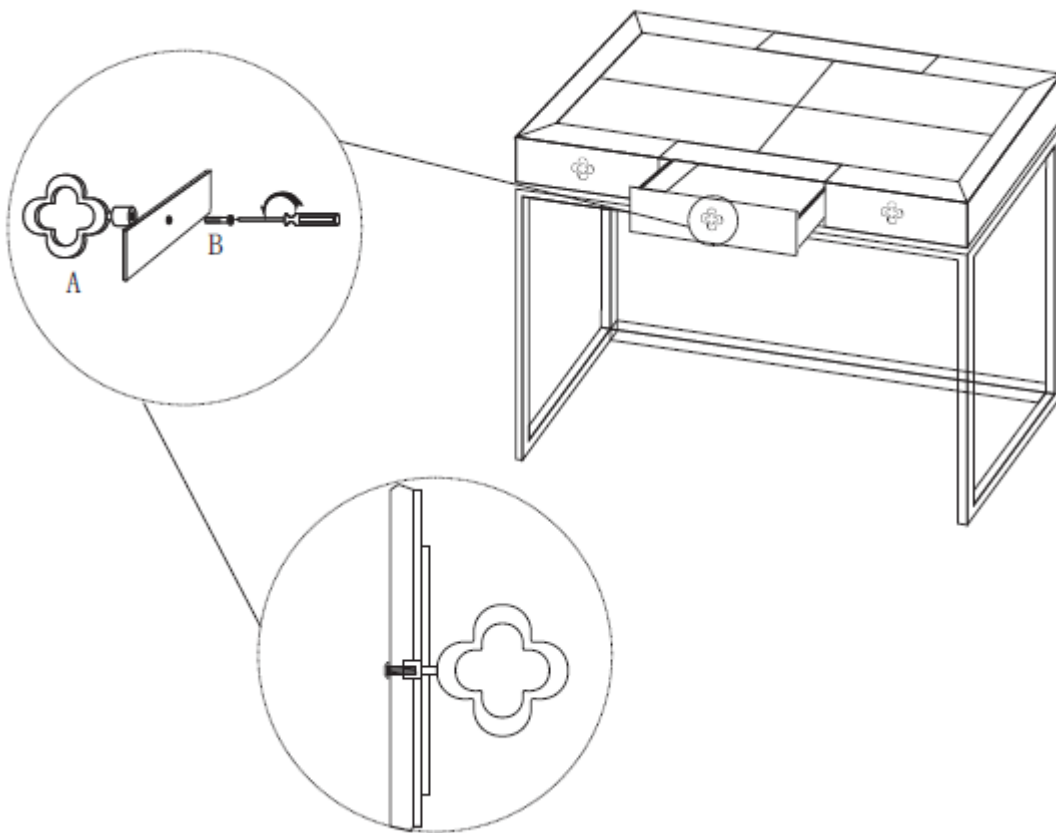

Ensure all bolts are fully tightened every three months to ensure stability.