



INSTALLATION

PIONEER INDUSTRIES, INC.
3325 S. Garfield Ave.
Commerce, CA 90040
(800) 338-9468
www.pioneerind.com

Tools:



Adjustable Wrench



Plumbers Putty



Teflon Tape



Rags

Model Number: 3AM400

Warnings and Notes:

Check with local plumbing code requirements before installation.


This product should be installed by a local listed plumber.

Do not use plumbers putty on threads.




Installation Steps:


Two Handle Lavatory Widespread Faucet

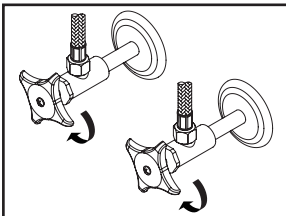


(1) Shut off the water supply. Remove old faucet. Clean mounting surface in preparation for new faucet.

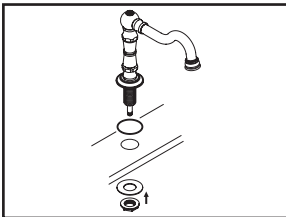


(2) Ensure O-ring is under spout escutcheon, place spout escutcheon under the spout. Place spout in position on the sink, slide mounting bracket through spout shank from underneath the sink, thread mounting nut onto spout shank and tighten the mounting nut.

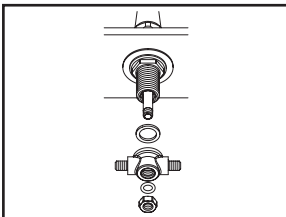


(3) Ensure washer is inside the cross connector, slide cross connector onto spout shank and tighten locknut to the thread end of copper tubing inside the spout shank from underneath the sink. Do not overtighten locknut to prevent damaging copper tubing and causing a leak.

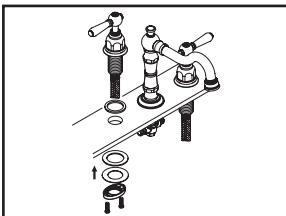

(4) Place cold and hot side valves in position on the sink, ensure handles operate in correct direction. From underneath the sink, hand-tighten locknut to the side valve. Position side valve to desired location from top. Tighten screws on locknut with the help of Phillips head screwdriver to secure side valve.

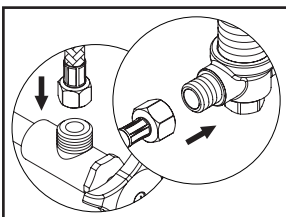


(5) Connect outlet hose to Y connector and inlet hose to inlet supply valve on both side valves.

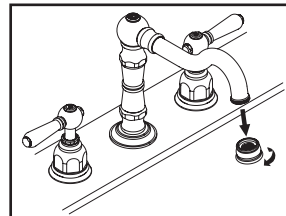


(6) Important: After installation is complete, remove the aerator. Turn on the water and allow both hot and cold water to run for at least one minute each. While water is running, check for leaks. Turn off the water and replace the aerator when finished.


Pop-up Drain Installation:

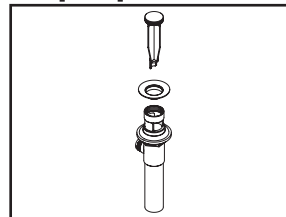


(1) Remove pop-up flange from body

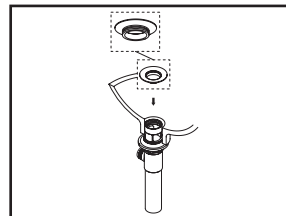


(2) Place a ring of plumbers putty on the bottom of flange.

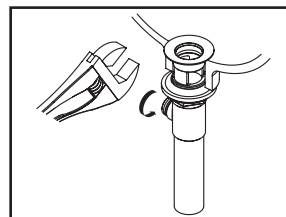


(3) Insert pop-up flange through drain hole and attach flange to the pop-up drain body. Apply Teflon tape on the threaded end of the tail piece and attach tail piece to the pop-up drain body. Ensure the pivot rod hole of the pop-up drain body faces towards the back of the sink. Tighten the locknut with the help of a wrench to secure the pop-up drain body.

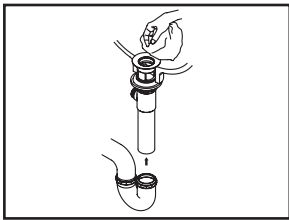


(4) Remove the excess plumber's putty. Connect the trap (check manufacturer's instructions for installation).

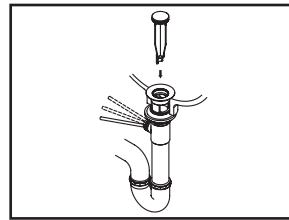

(6) Push pivot rod down, insert drain plug carefully. Test to ensure drain plug works properly.

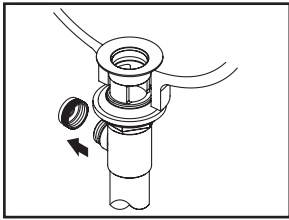

(5) Remove pivot rod nut from pop-up body, ensure the washers is in place, insert pivot rod, tighten pivot rod nut back to pop-up body.

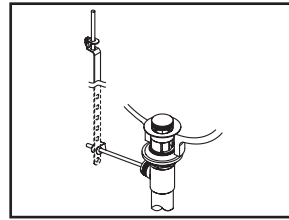


(7) Connect lift rod strap to pivot rod by using clip. Tighten the thumbscrew to connect lift rod strap to pop-up lift rod.

Exploded Drawing :

* Note: Please specify finish/color when ordering.

	ITEM #	DESCRIPTION
A	X-1900007C,H*	Lever Handle-C, H
B	X-4900034*	Valve Escutcheon and Gasket
C	OP-530006	Valve Mounting Kit
D	X-4900022	Bonnet Nut
E	X-3900004C,H	Ceramic Stem-Cold, Hot
F	X-4300099	Cross Connector
G	X-5300005	Spout Mounting Kit
H	X-2300003*	Spout
I	X-6300020*	Brass Pop-Up Drain Assembly
1	X-4900042C, H*	Button-C, H
2	X-4900035	Handle Screw
3	X-4900122*	1.2 GPM Aerator
4	X-4900032*	Spout Escutcheon and O-ring

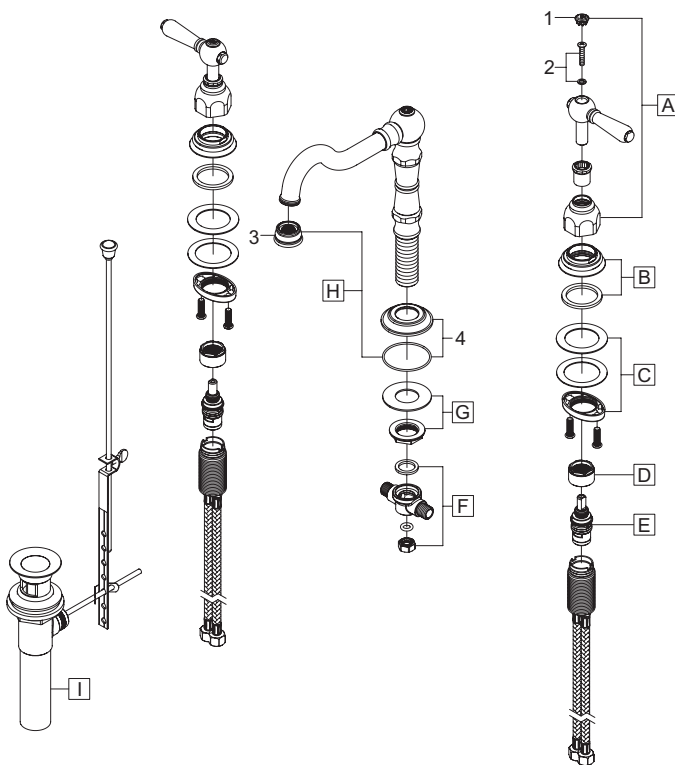

For more care information or trouble shooting inquiries about your Pioneer product, please call:
Pioneer Industries, Inc. (800) 338-9468
 Monday-Friday 8 AM to 8 PM EST (5 AM to 5 PM PST)
www.pioneerind.com