



ASSEMBLY INSTRUCTION


ITEM:5770-90267-GRY 6/0-6/6 Wood Panel Headboard

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Hexagonal Bolt	M13*Ø5/16"*1-3/4"L	6PCS	1		Headboard Panel	1PC
B		Spring Washer	5/16"*12*2mm	6PCS				
C		Flat Washer	5/16"*19*2mm	6PCS				
D		Hexagonal Bolt	M13*Ø1/4"*1-1/2"L	2PCS	2		Headboard Leg (Left & Right)	2PCS
E		Spring Washer	1/4"*10*2mm	2PCS				
G		Flat Washer	1/4"*19*2mm	2PCS	3		Stretchers	1PC
H		Open Wrench	M13*89*2mm	1PC				

STEP1. Attach stretchers (3) to Headboard leg (2) using Bolt (D) Spring washer(E), Flat washer (G) and tighten them by using Phillips head screwdriver

STEP2. Attach Headboard panel (1) to the Headboard leg (2) with Flat washer (C) Spring washer(B), and Bolt (A) Three pieces per leg. Tighten the bolts by using the Phillips head screwdriver

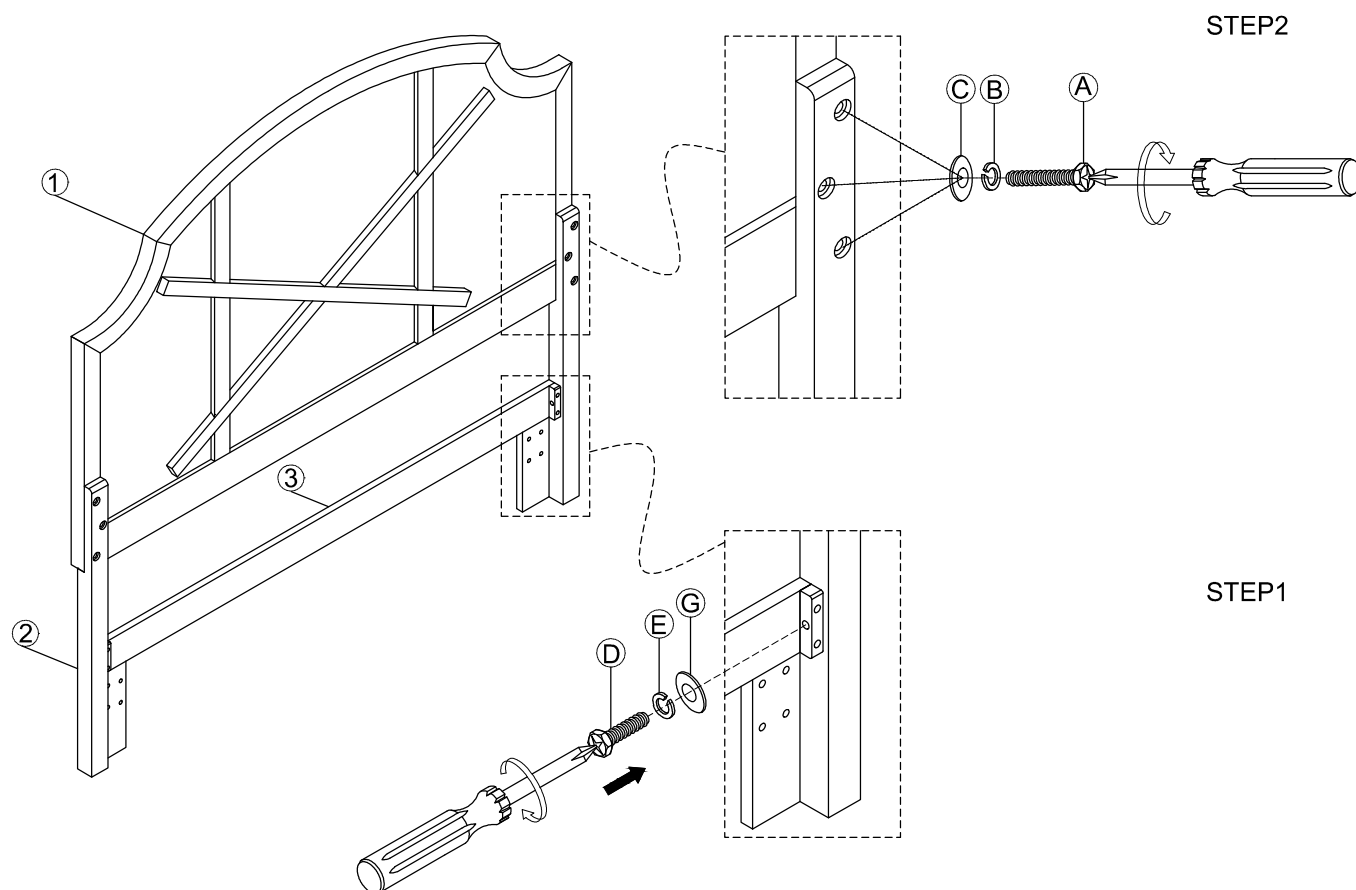

ASSEMBLY INSTRUCTION

ITEM:5770-90267-GRY 6/0-6/6 Wood Panel Headboard

ITEM:5770-90268-GRY 6/0-6/6 Wood Panel Footboard

ITEM:5770-90253-GRY 5/0-6/6 Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE LIST					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A1		Threaded rod	Ø5/16"*3"L	8PCS	4		Headboard Panel+Legs	1PC
B1		Curved washer	Ø5/16"*37*3mm	8PCS	5		Footboard Panel	1PC
C1		Nut	Ø5/16"*M13	8PCS	6		Rails	2PCS
D1		Open Wrench	M13*89*2mm	1PC	7		Slats	5PCS
E1		Screw	#8*30mm	10PCS	8		Long support leg	10PCS
					9		Short support leg	10PCS

STEP3. Attach Rails (6) to the Headboard Panel +legs (4) using Threaded rod(A1),Curved washer(B1),Nut (C1) and tighten them by Open wrench (D1)

STEP4. Attach Short support legs (9) to Slats(7)

STEP5. Attach the Slats (7) to the Rails (6) using Screw (E1) by the Phillips head screwdriver

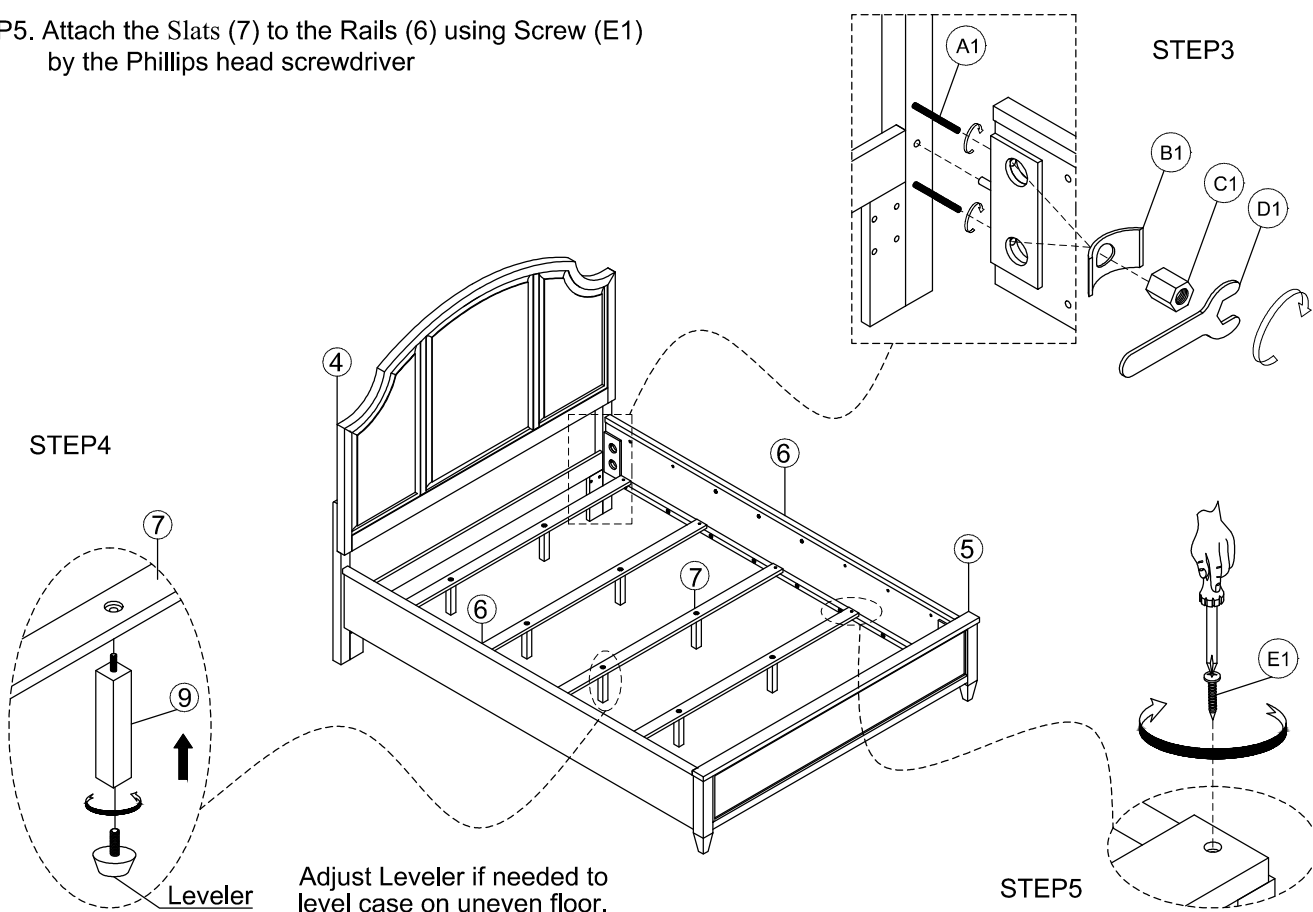

ASSEMBLY INSTRUCTION

ITEM:5770-90267-GRY 6/0-6/6 Wood Panel Headboard

ITEM:5770-90268-GRY 6/0-6/6 Wood Panel Footboard

ITEM:5770-90253-GRY 5/0-6/6 Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

STEP6. Use a Phillips head Screwdriver to take rail supports out of rails(6)

STEP7. Place the rails supports at higher position, then attach them to the rails(6) again using Screws (E1) and the Phillips head Screwdriver

STEP8. Attach long support legs (8) and Short support leg (9) to Slats (7) then adjust leveler if need it.

STEP9. Attach the Slats (7) to the Rails (6) using Screw (E1) by the Phillips head screwdriver.

