




ASSEMBLY INSRTRUCTION BAUANLEITUNG


WF318755

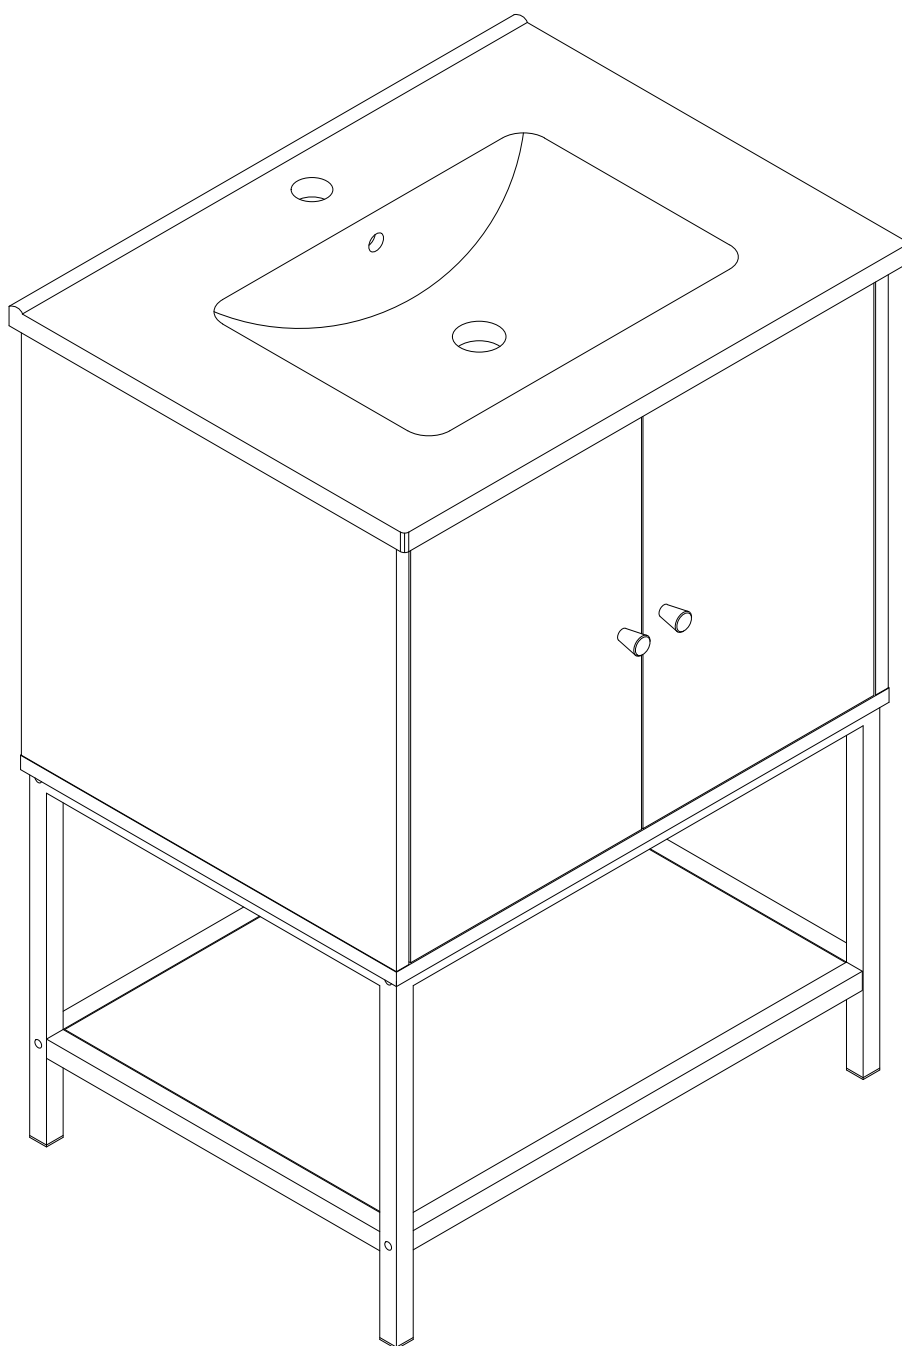

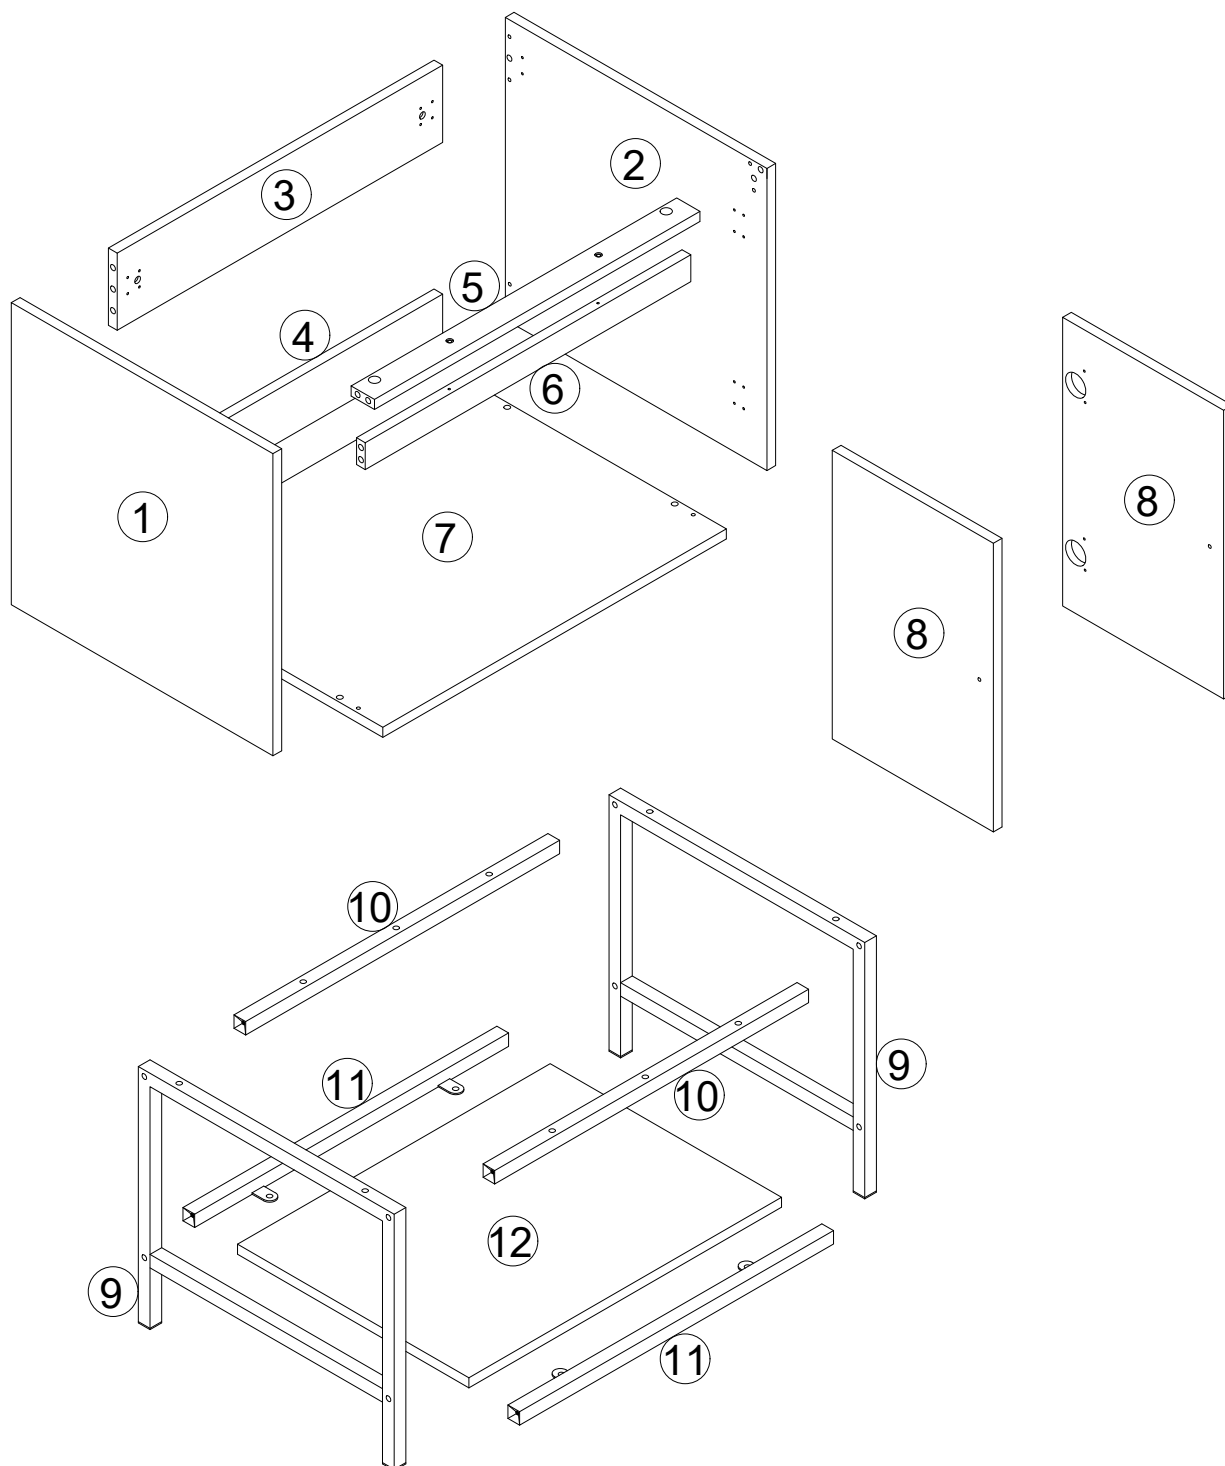


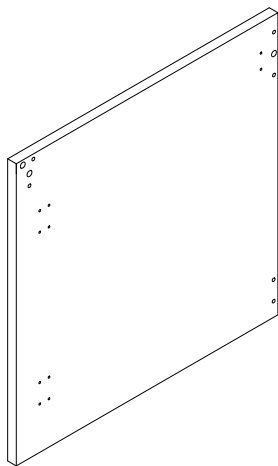


① x 1

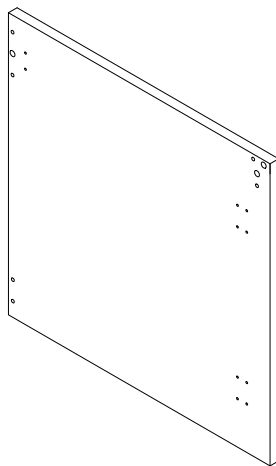


② x 1

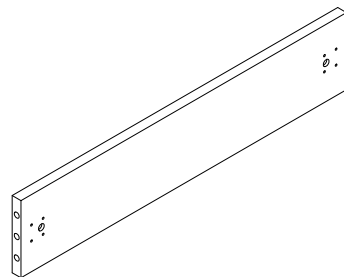


③ x 1

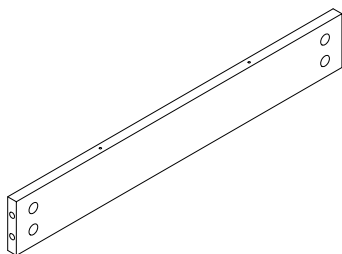


④ x 1

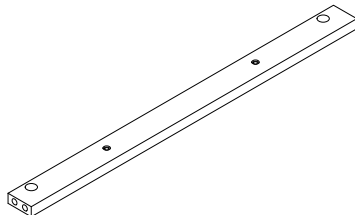


⑤ x 1

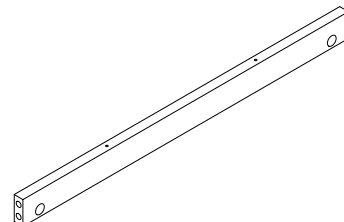


⑥ x 1

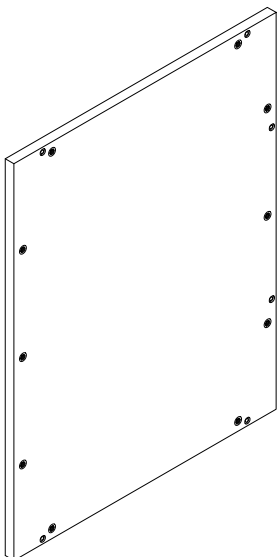




⑦ x 1






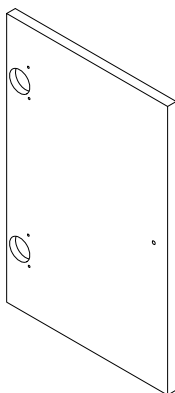


⑧ x 2


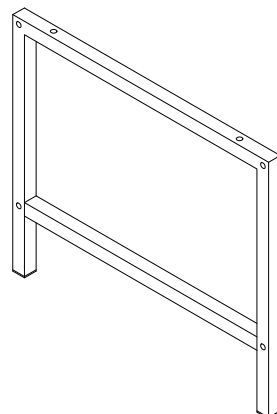


⑨ x 2

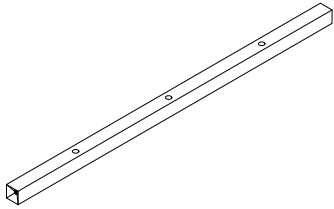
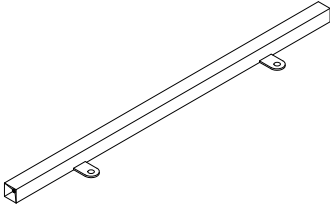
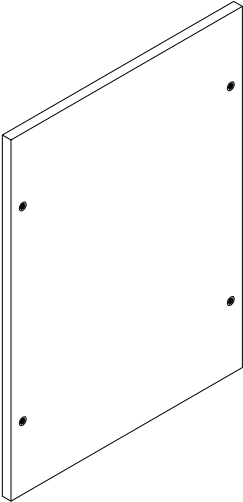
		
⑩ x 2	⑪ x 2	⑫ x 1

 Φ6x35mm A x 12+1	 Φ15x12mm B x 12+1	 Φ8x30mm C x 10+1	 M4x20mm D x 2	 E x 2	 M4x14mm F x 24+2
 G x 4	 M6x12mm H x 4	 M6x30mm I x 10+1	 M6x45mm J x 8	 M4 K x 1	 M4x35mm L x 2
 M5x40mm M x 6	 M4x12mm N x 12+1	 O x 2	 Φ8x40mm P x 2	 M6x60mm Q x 2	




Step 1

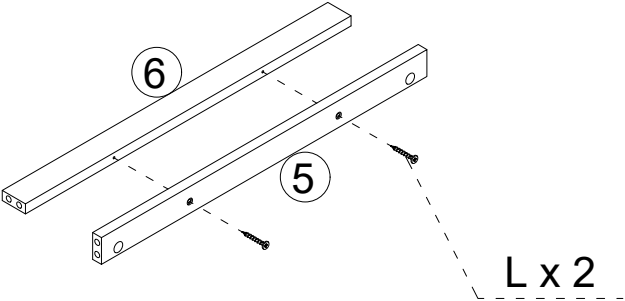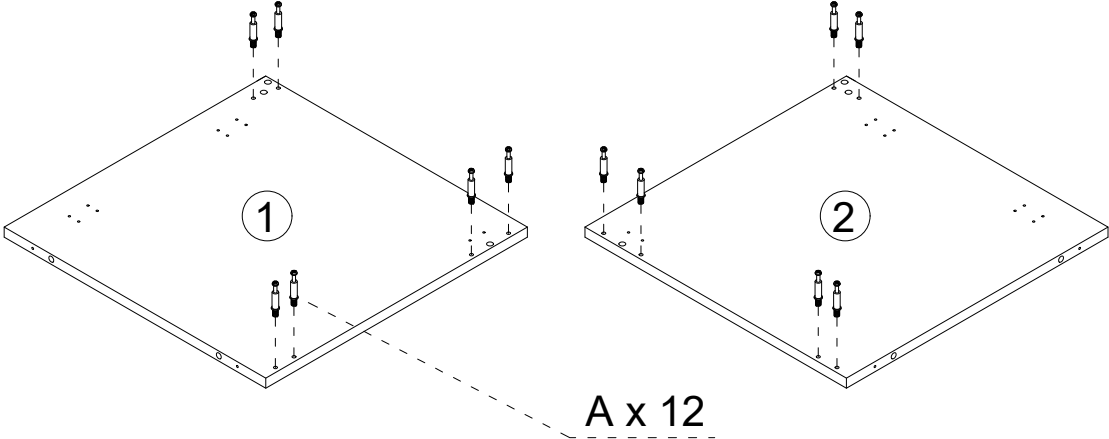




Step 2

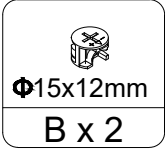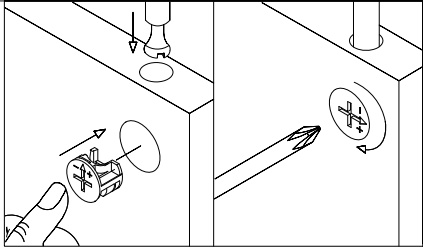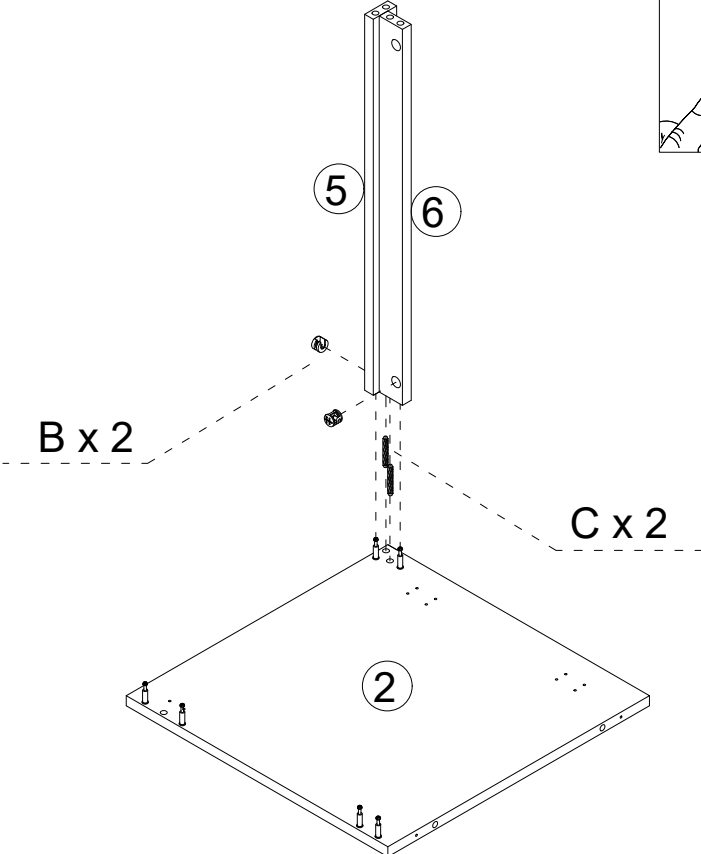


Step 3

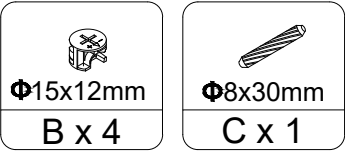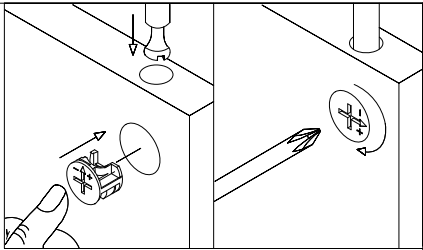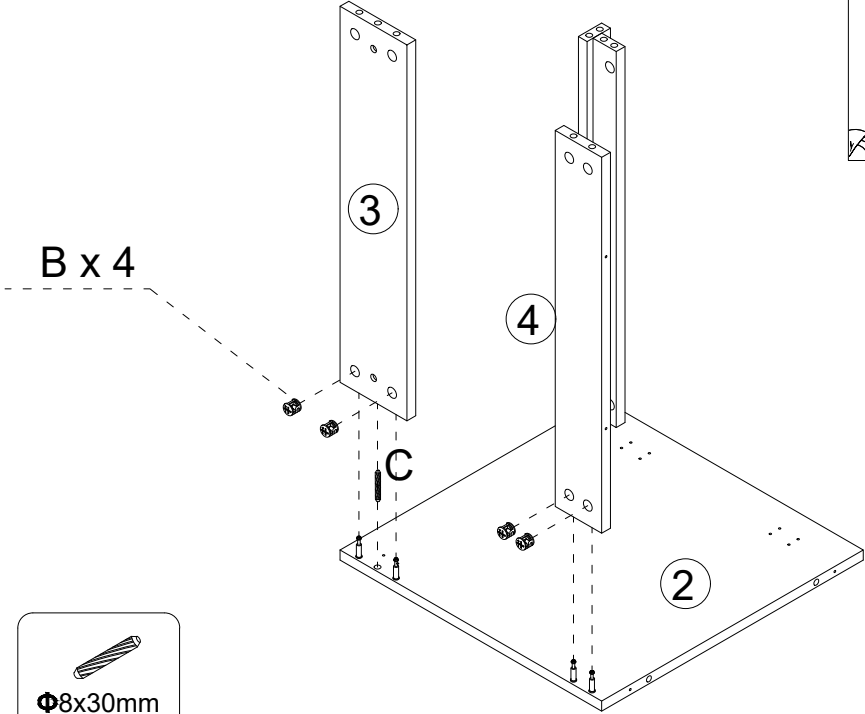




Step 4

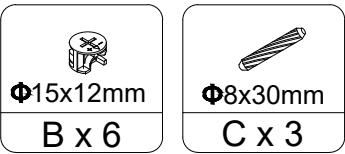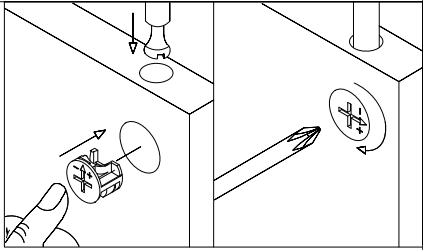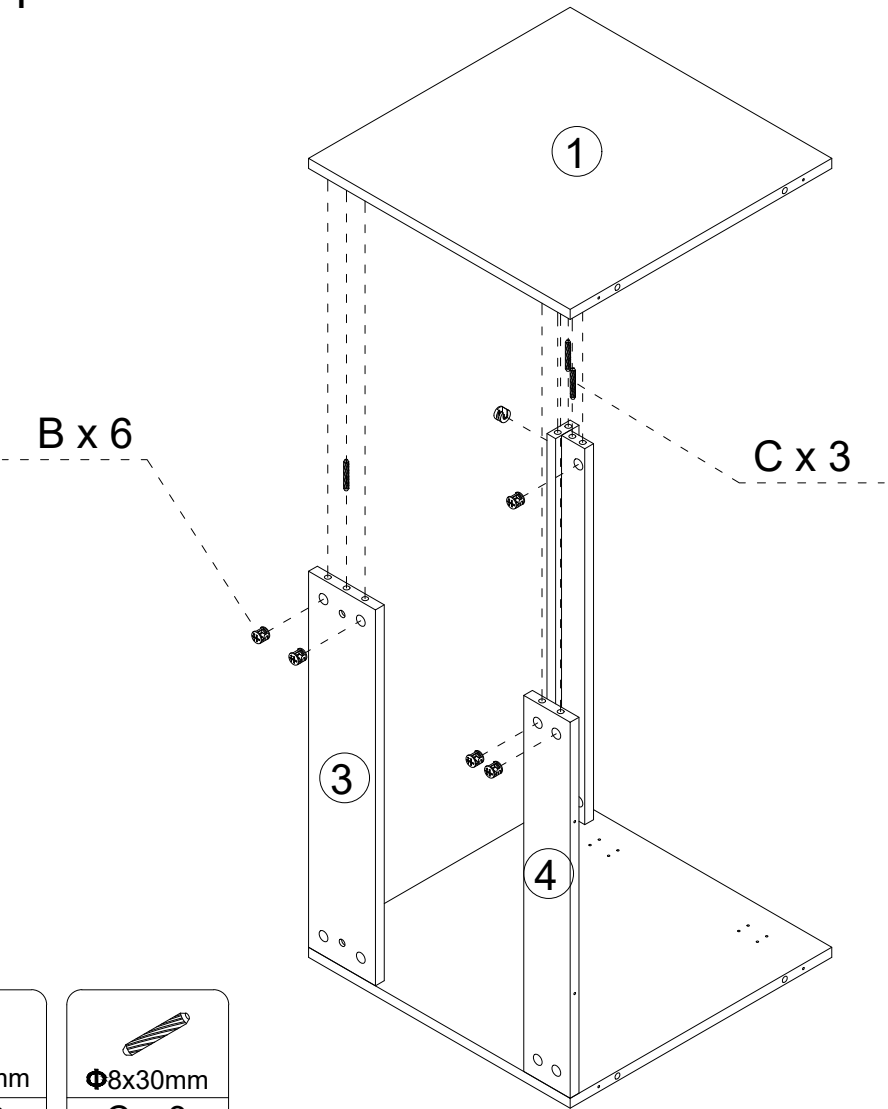


Step 5

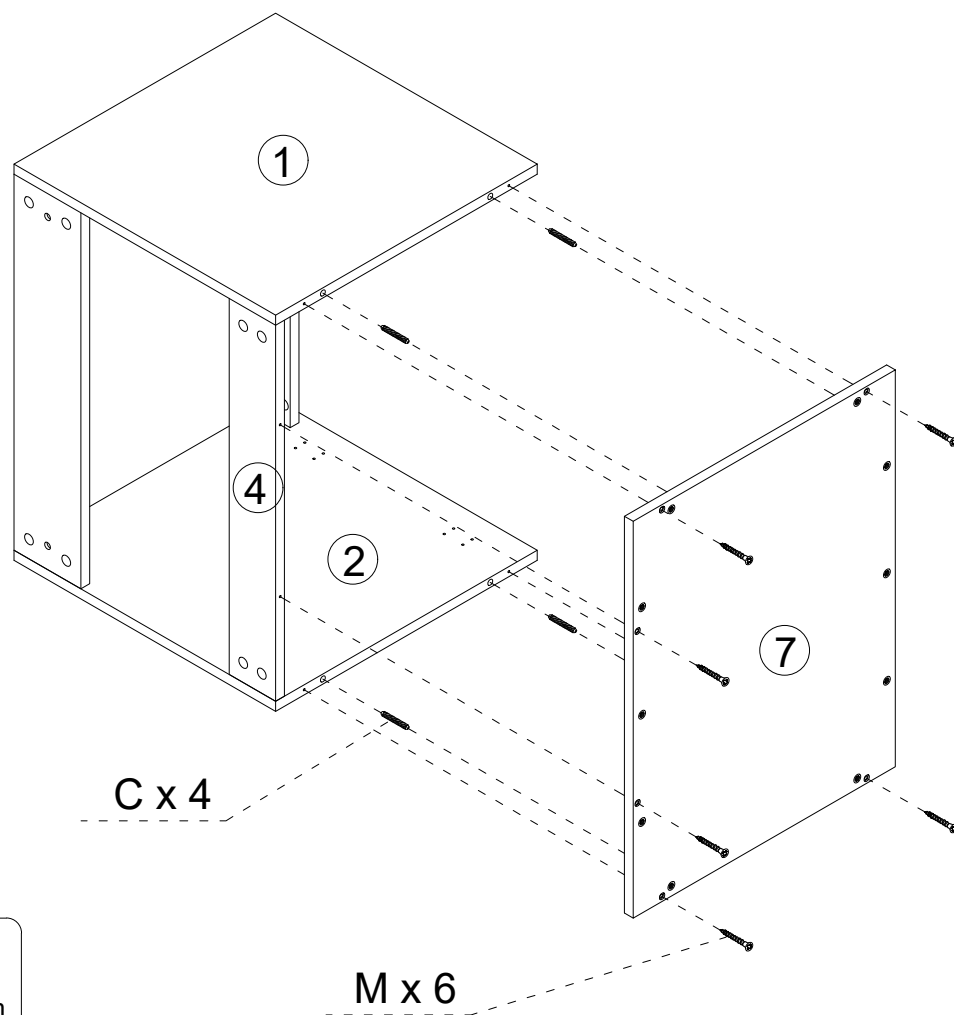


Step 6

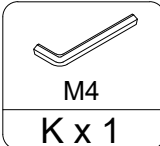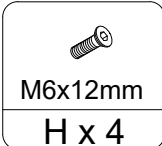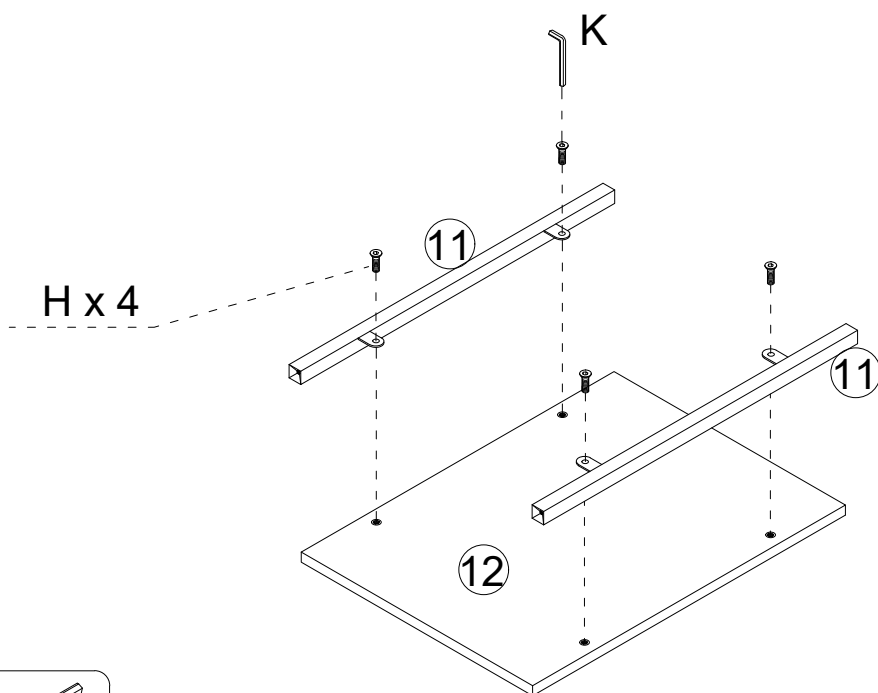




Step 7

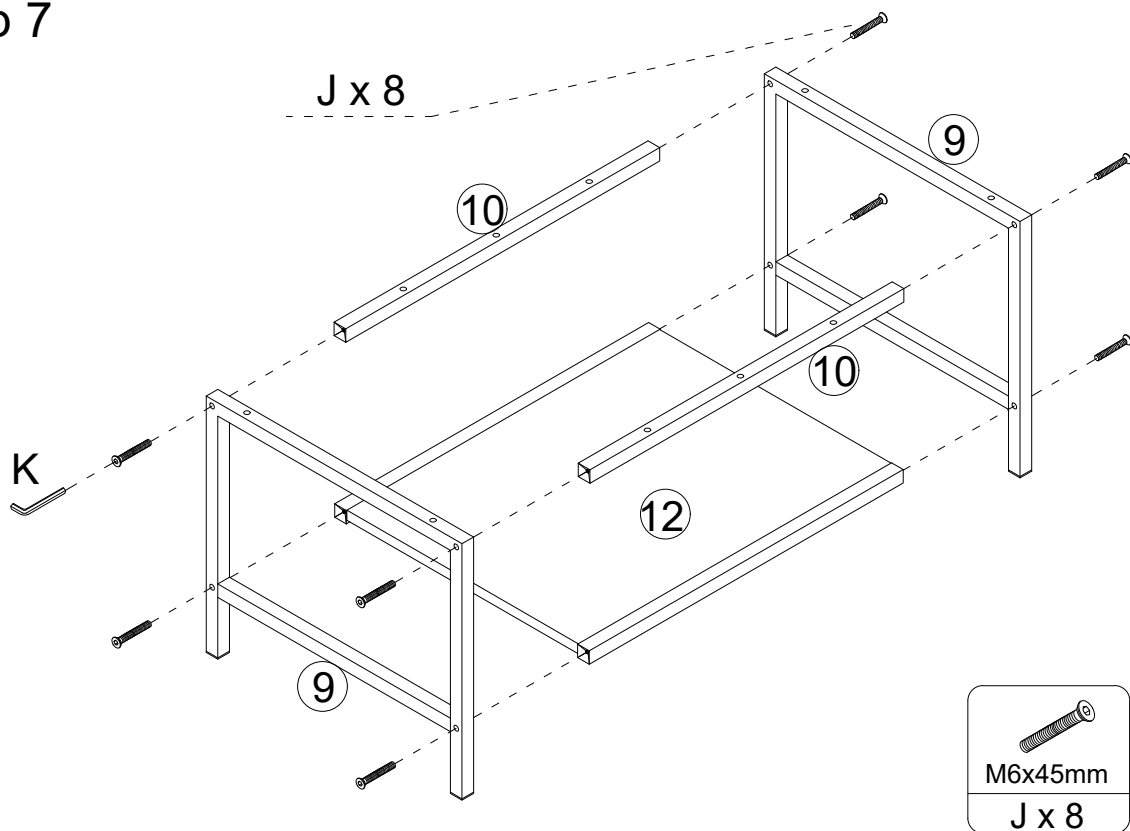




Step 8

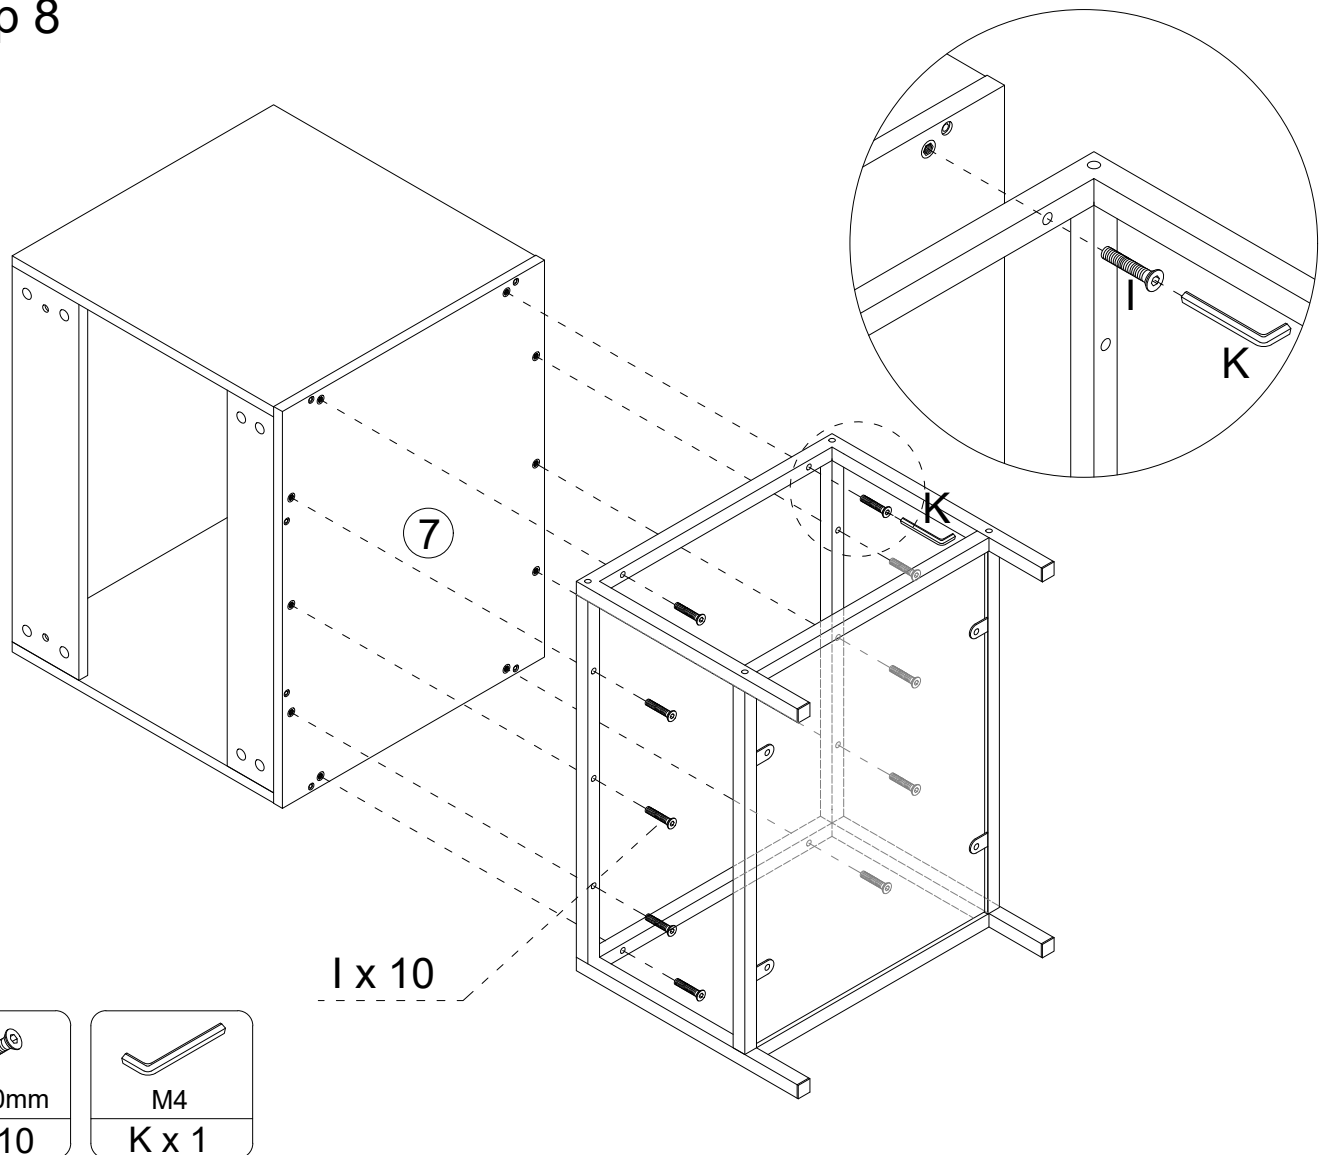


Step 9

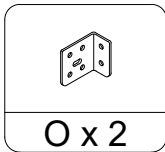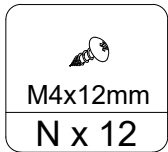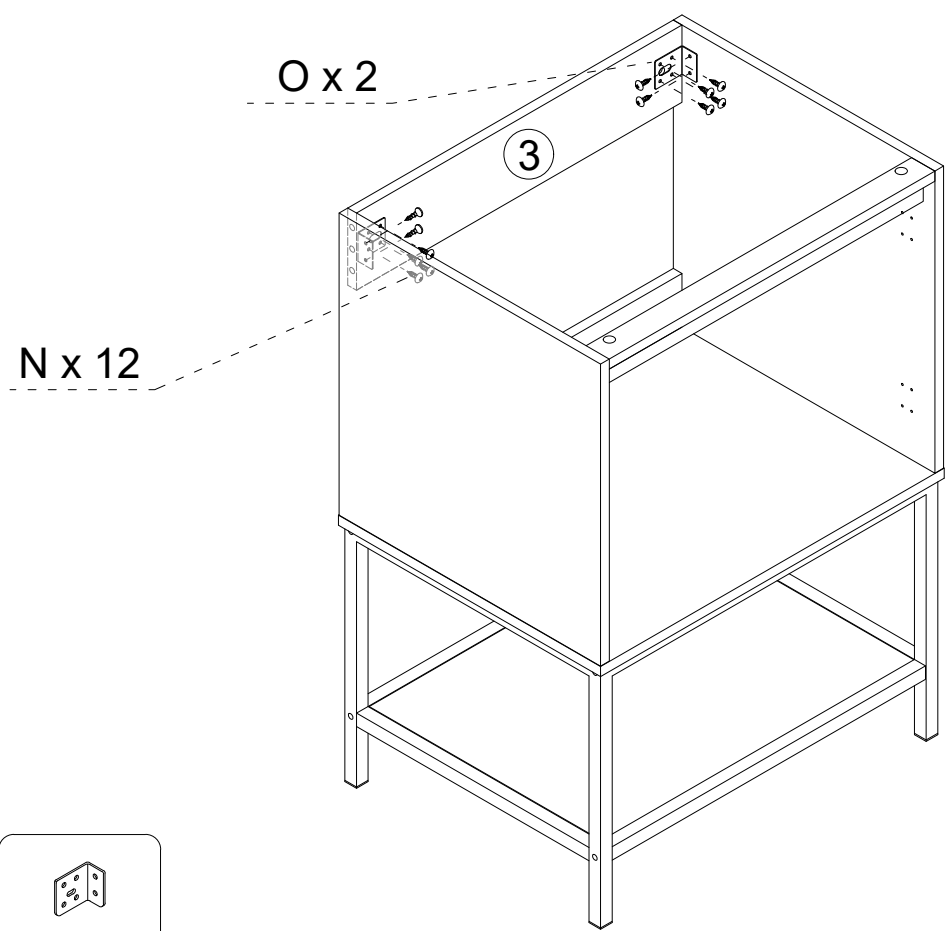


Step 10

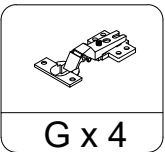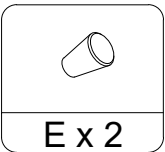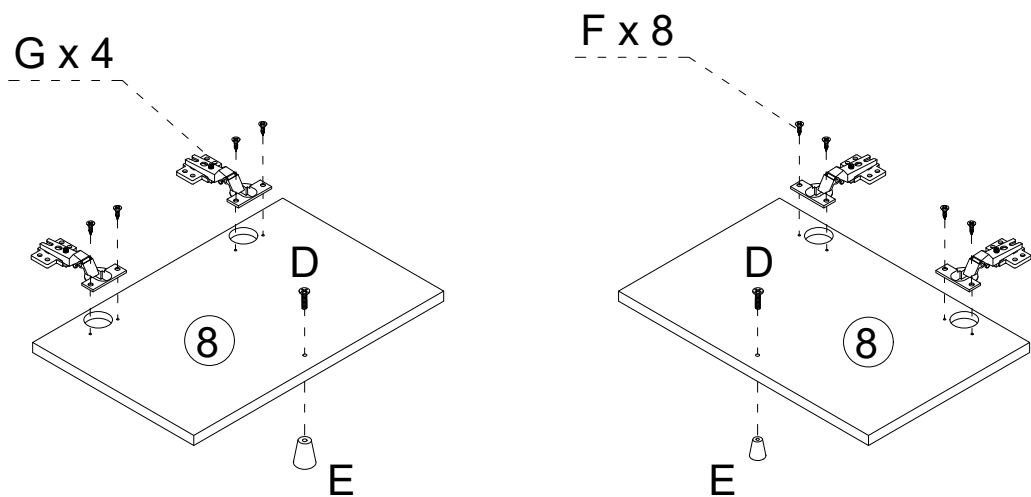



Step 11

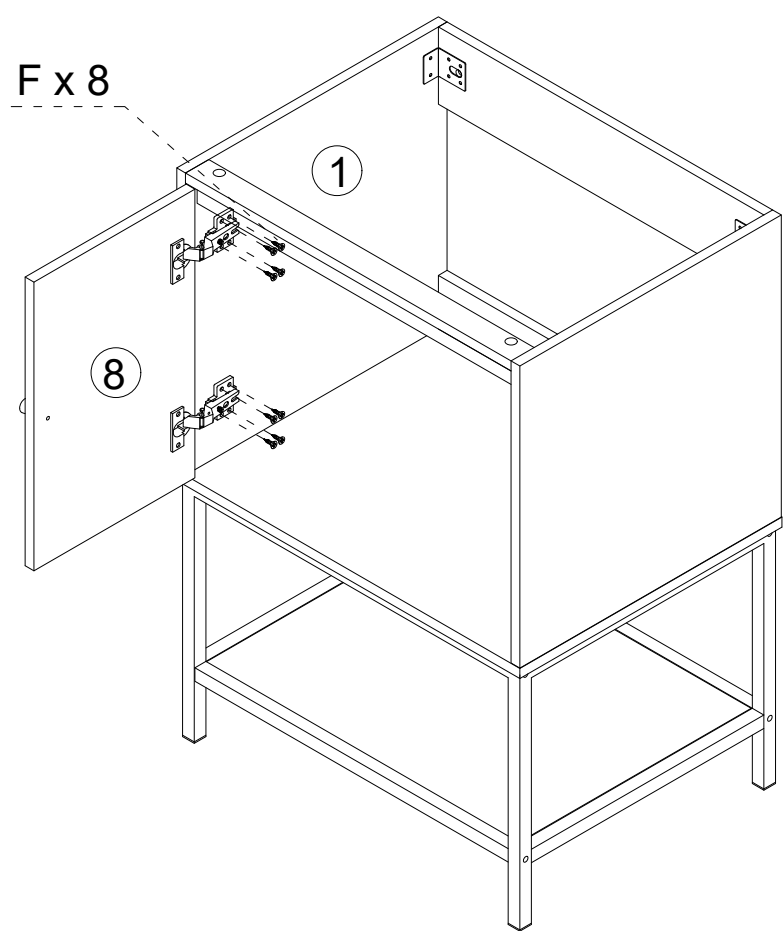




Step 12

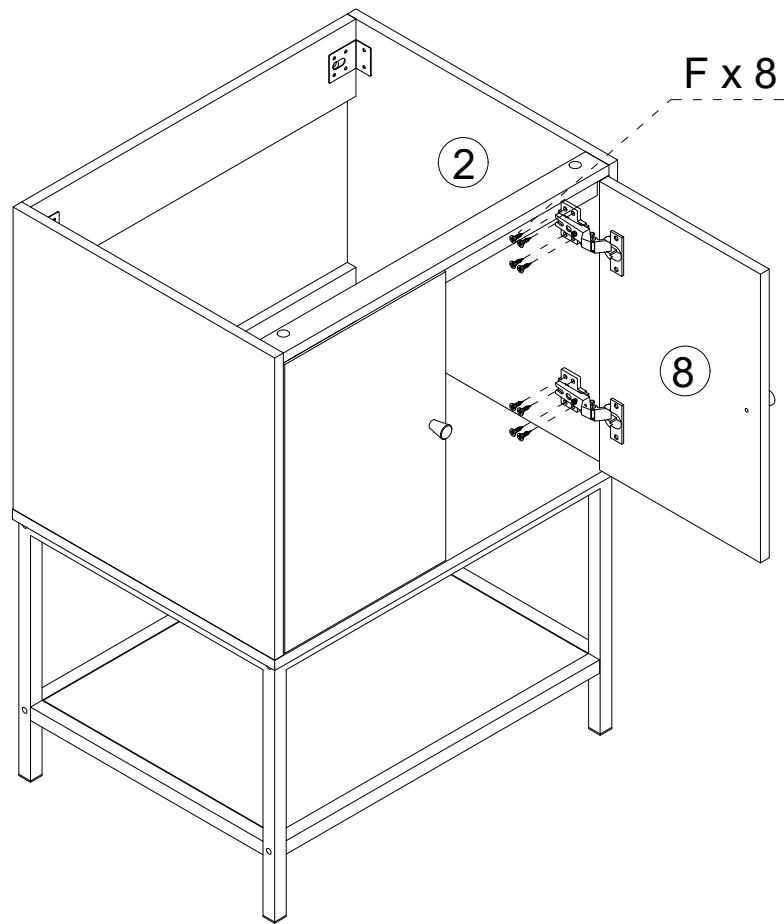


Step 13

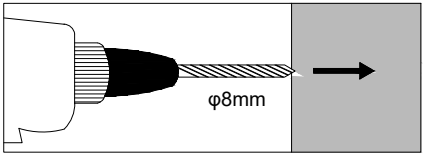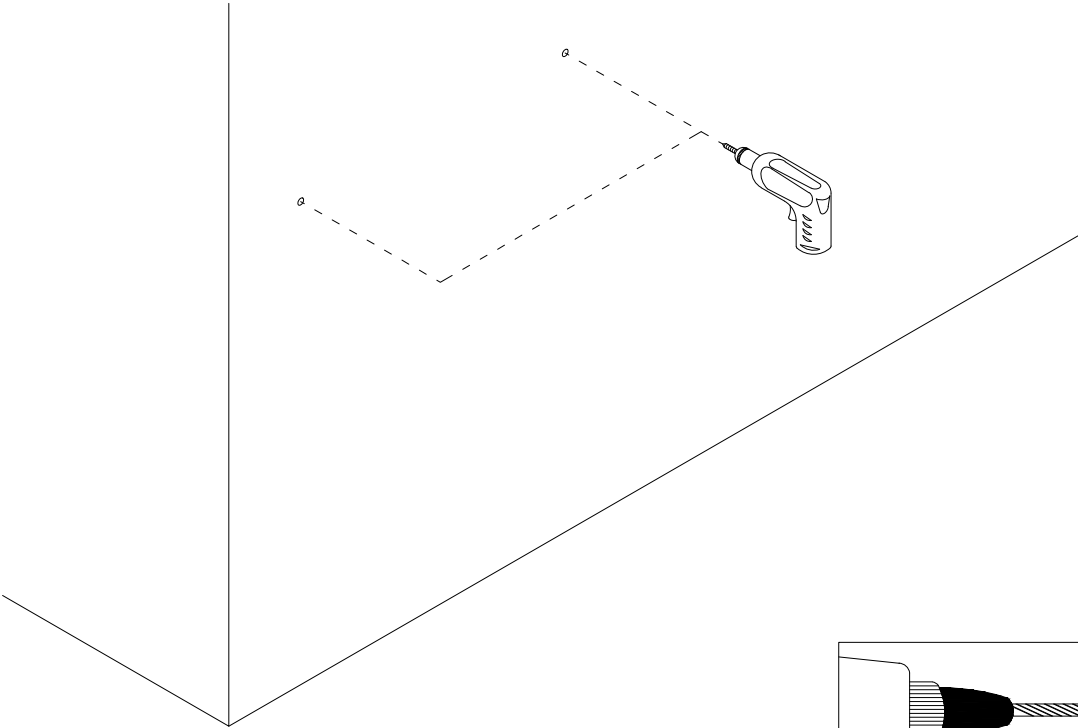


Step 14

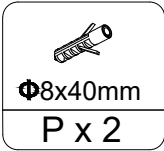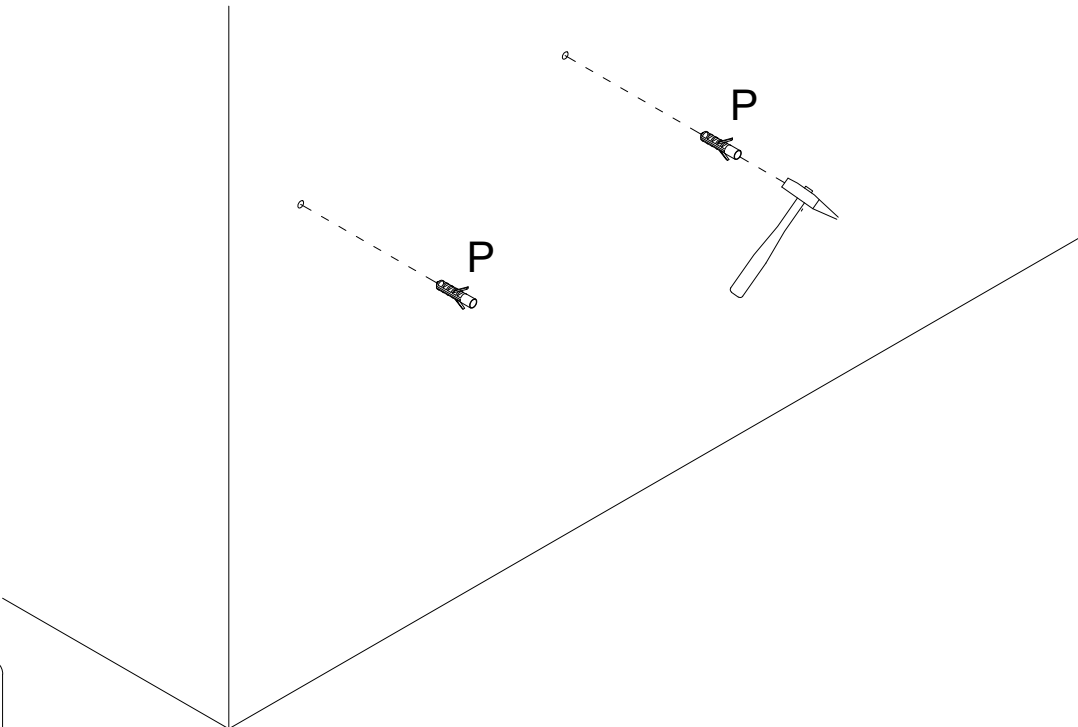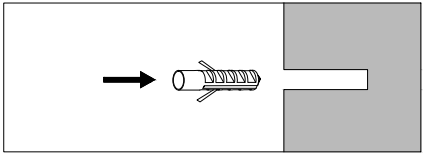

Step 15

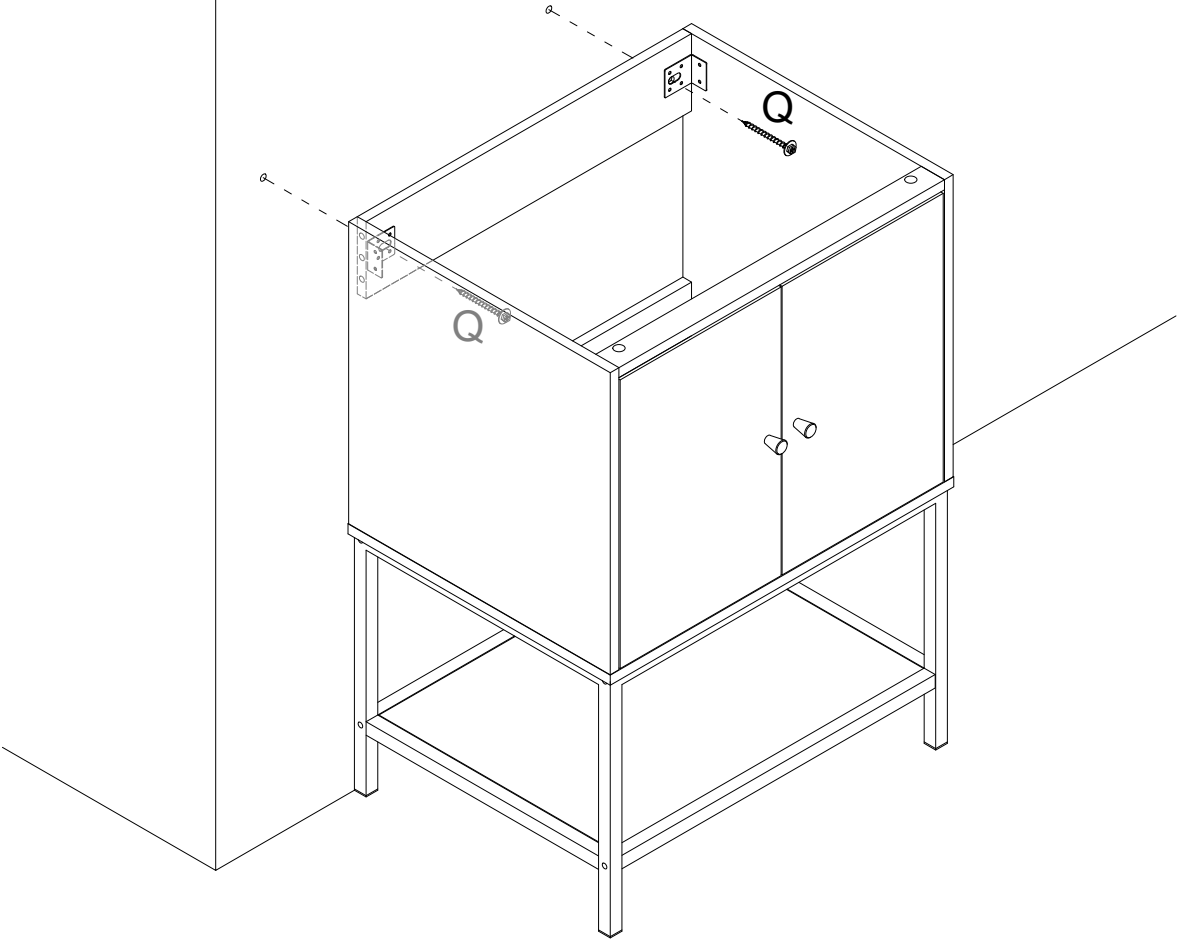

Step 16

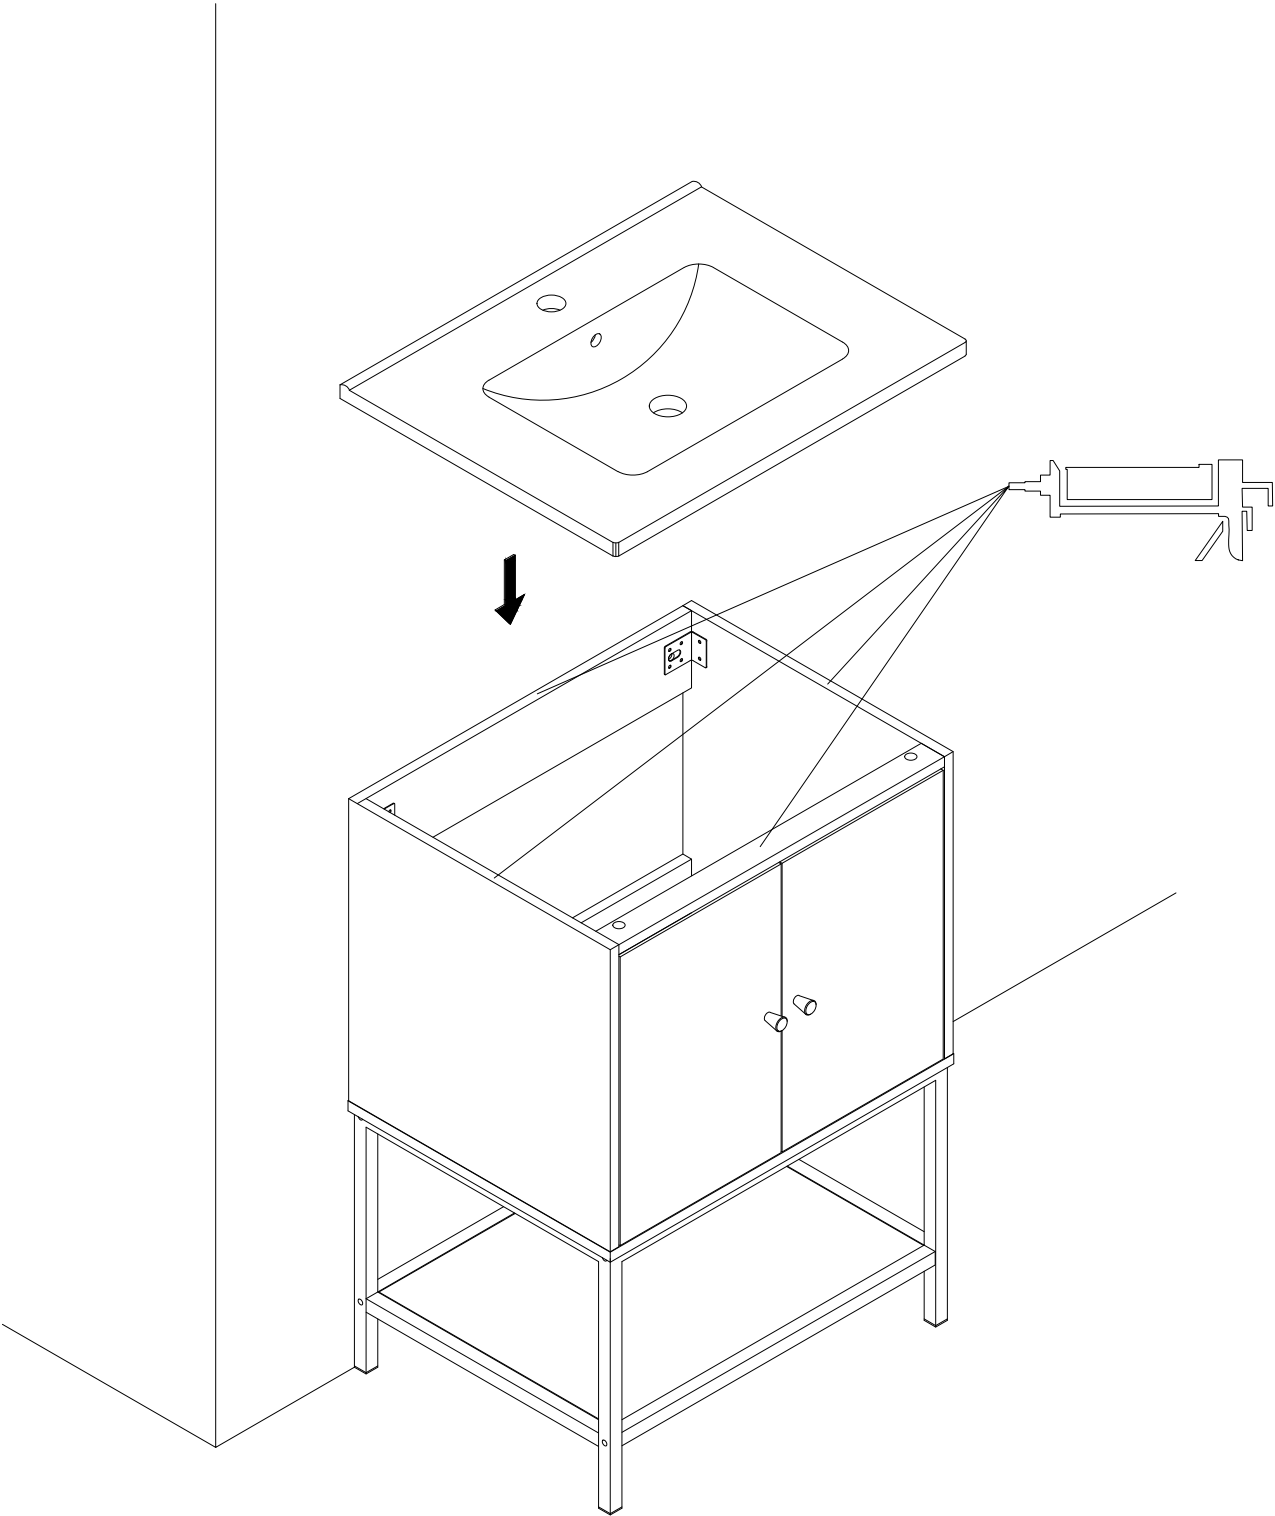

Step 17

