





Assembly Intruction


1

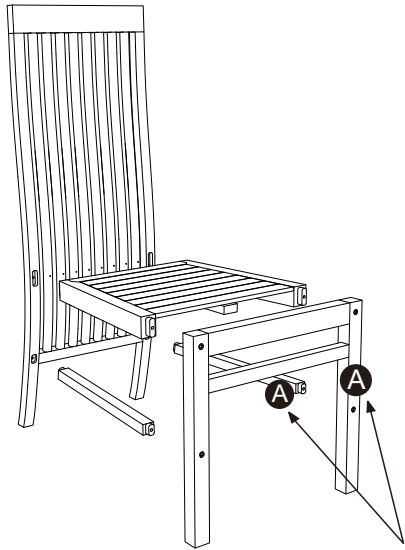


2

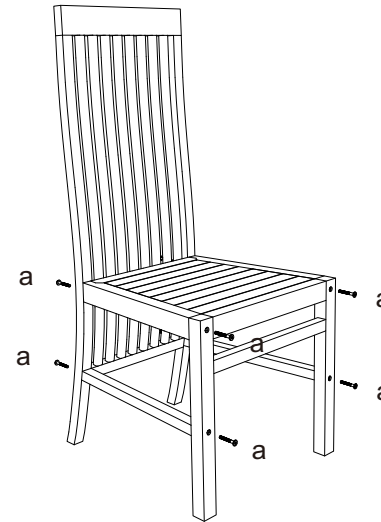

3

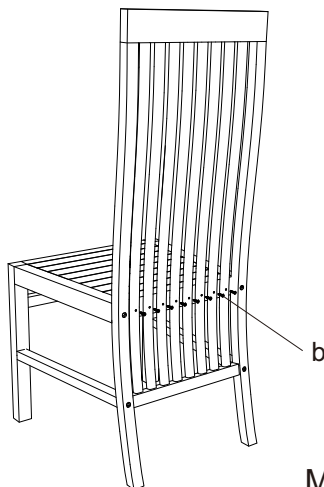

4

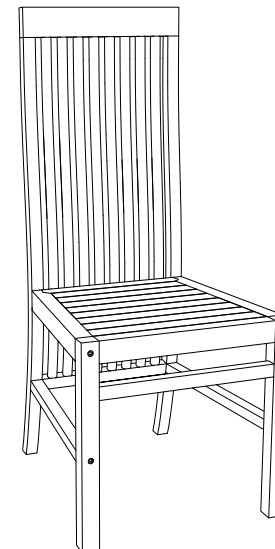

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**


Make sure to use Gorilla Glue (Included)
on all wood joints before assembly

Code

KBA3DC

Hardware

a



Bolt 2' (8 pcs)

b



Screw 0,78' (8 pcs)

Tool



Socket Wrench 4mm

Total Section

5 Section