






ASSEMBLY INSTRUCTION

ITEM# 1620-90367-LTBR 6/0-6/6 Panel Headboard
1620-90368-LTBR 6/0-6/6 Panel Footboard
1620-90353-LTBR 5/0-6/6 Panel Rails
1620-90363-LTBR 6/0 Panel Rails

Caution: Please make sure you have all parts indicated below prior to assembly.
This bed is heavy and can best be assembled with the help of two or more people.

NO.	PHOTO	HARDWARE LIST	QTY
S		5/16*25mm Bolt	6
O		Lock Washer	6
J		Flat Washer	6
M		Allen Wrench	1

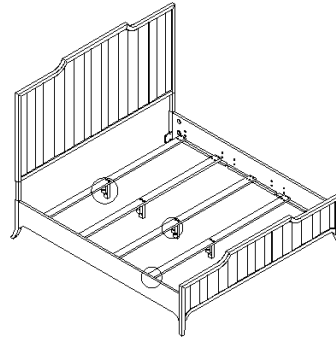

Assembly instruction for Headboard :

Please note the height of the HB is adjustable. It can be adjusted to either 59" or 67" high.

1. Place the headboard panel face down on a soft surface to prevent it from scratching.
2. If you desire the overall height to be 59"H, stick the bottom headboard post (Y) into the headboard panel(X) to the very end and measure the open space from bottom of post to bottom of headboard panel to be 17" high. Then, align holes at back between each other and secure by using bolts(S), lock washers (O), flat washers (J) and tighten them securely with Allen Wrench (M).
see DIAGRAM 1

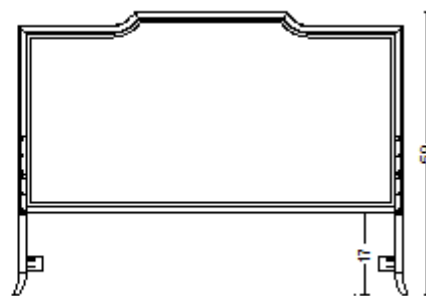
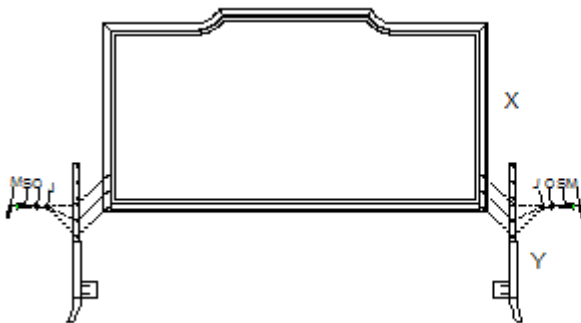


DIAGRAM 1

3. If you want 67"H, please adjust the bottom post (Y) and make sure the open space to be 25"high.
Repeat the steps of securing bolts as above . see DIAGRAM 2.

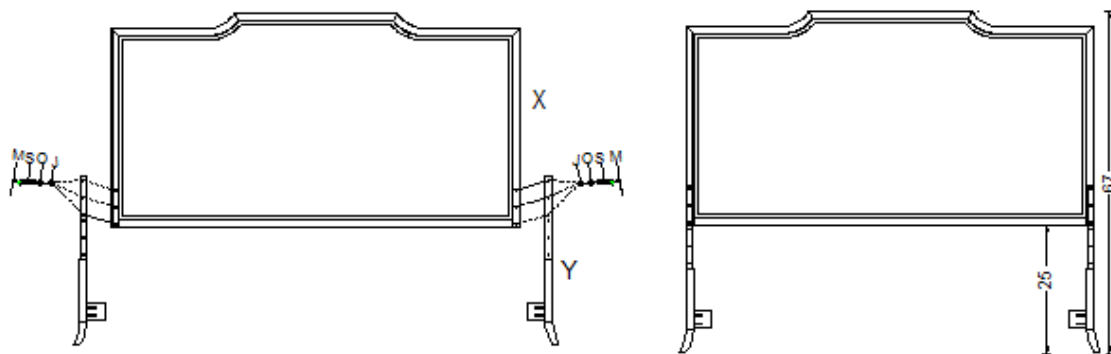


DIAGRAM 2

Assembly instruction for whole bed :

NO.	HARDWARE LIST		Q'TY
E		NUT	8
F		SPANNER WRENCH	1
G		CURVED WASHER	8
H		FULL THREADED BOLT	8
K		SCREW	20
R		4MM ALLEN WRENCH	1
Q		BOLT	10
V		LOCK WASHER	10
U		FLAT WASHER	10
M		5MM ALLEN WRENCH	1

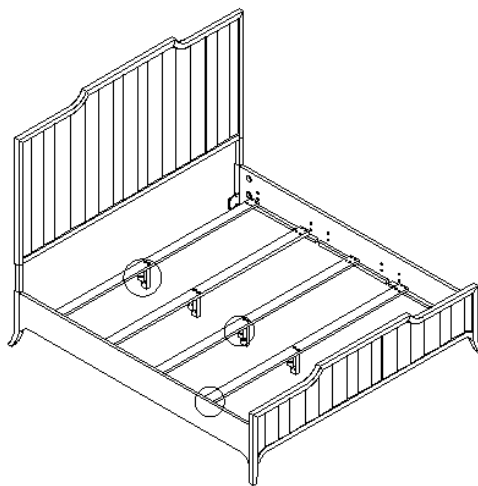


Diagram 6

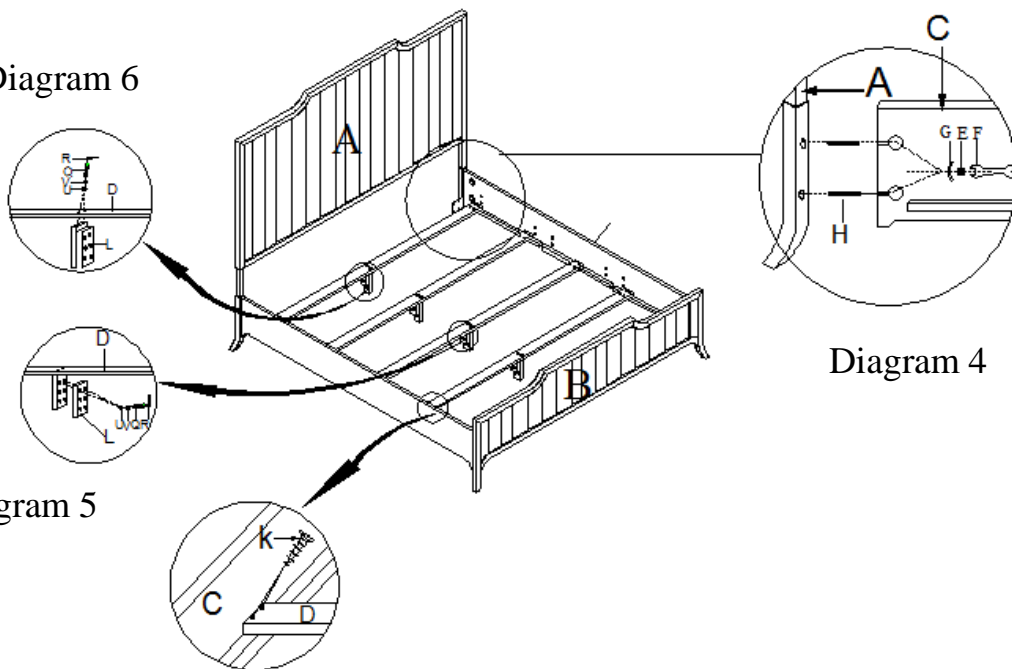


Diagram 4

Diagram 5

Diagram 3

1. Please note the hardware bag to assemble side rail to HB&FB is in the box of side rails.

1. Insert 2 bolts (H) into holes of each side post on Headboard (A) and Footboard (B), attach the ends of side rails (C) to bolts (H) on posts by using 2 curved washers (G) and 2 nuts (E), tighten nuts (E) securely with spanner wrench (F). (See diagram 4)

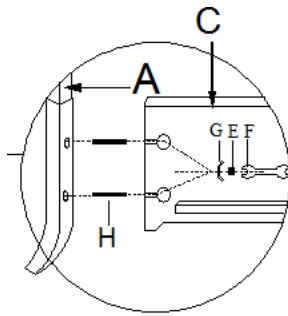


Diagram 4

2. Take out center supports (L) from the rail box, attach center supports (L) to slats (D) by using 2 bolts (Q), 2 lock washers (V) and 2 flat washers (U). Secure bolts (Q) by using allen wrench (R). (See diagram 6)

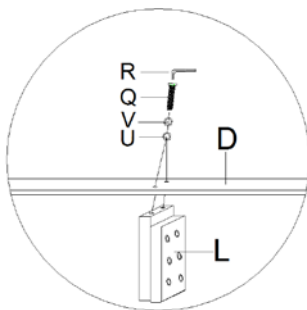


Diagram 6

3. Attach slats (D) to side rails (C), align pre-drilled holes on the slats to holes on the cleats of side rails (C), using screws (K) to tighten both. (See diagram 3)


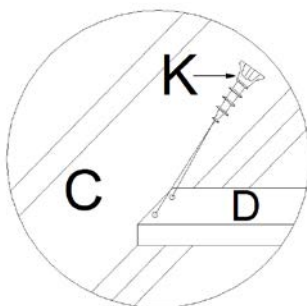


Diagram 3

Note: You can change the height of slats by adjusting the height of cleats on side rail as shown in diagram 4. Remove bolts (I), lock washers (O) and flat washers (J) from the cleats by turning the bolts (I) with allen wrench (M) in anti-clockwise direction. Adjust the cleats to a desired position, and then secure lock washers, flat washers, bolts in clockwise direction by turning with allen wrench.

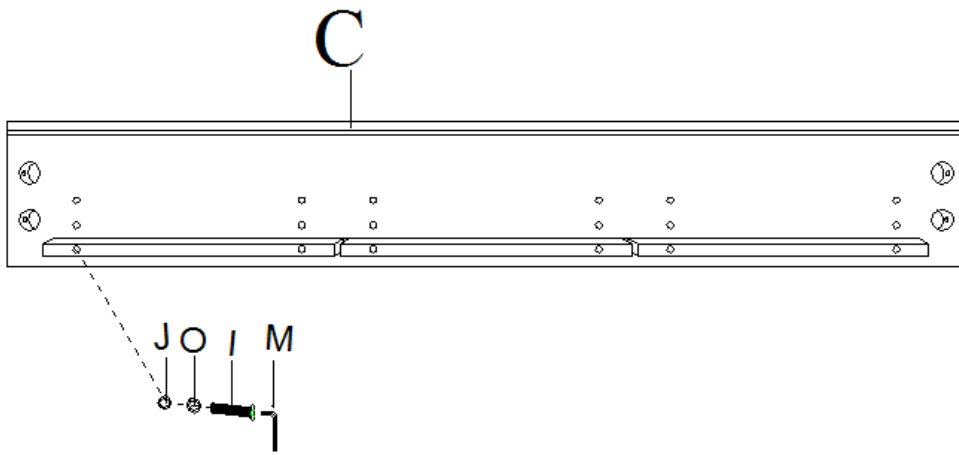

You can adjust the height of center supports (L) as shown in diagram 5 to meet your need by the following steps.

1. Unscrew bolts on center supports (L) with allen wrench (R).
2. Adjust the height of center supports, align holes on 2pcs of woods and tighten them together with 2 bolts (Q), 2 lock washers (V) and 2 flat washer (U) by turning with wrench (R) in clockwise direction.

See diagram 5

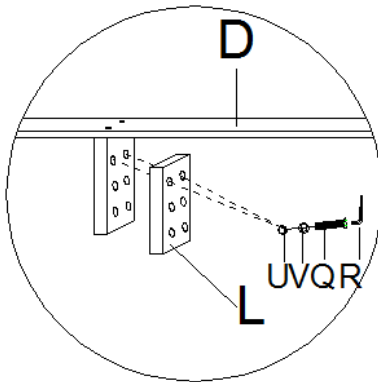


Diagram 5

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.