




Assembly Instruction



SCAN THIS QR CODE WITH YOUR
SMARTPHONE CAMERA FOR
ADDITIONAL INSTRUCTIONS

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

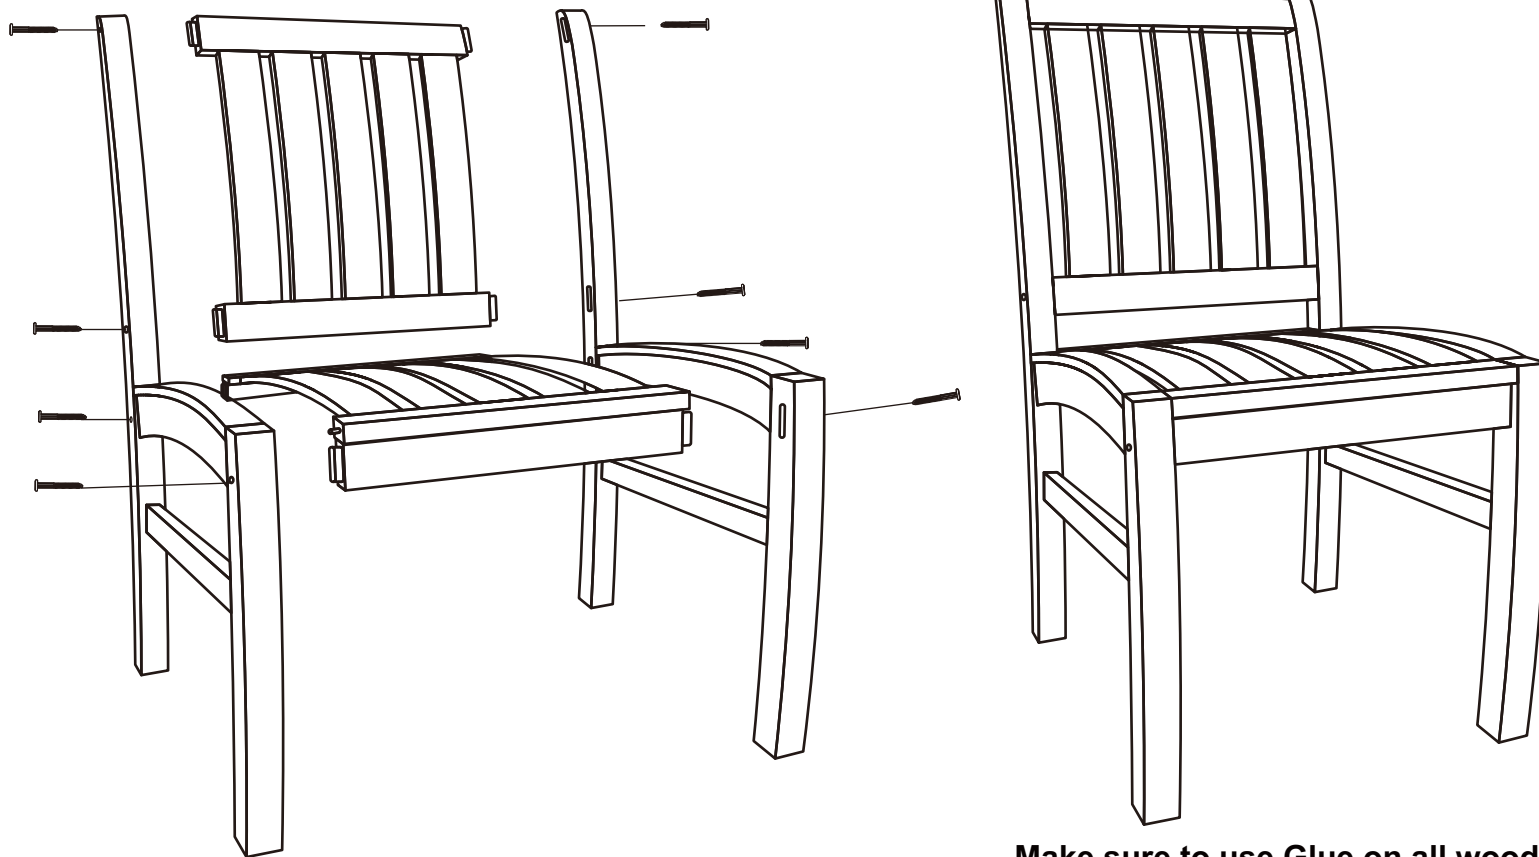

**Make sure to use Glue on all wood
joints before assembly
(Included in package)**

Code

AM200DC

Hardware



1. F. Bolt 50 mm (8 Pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section