


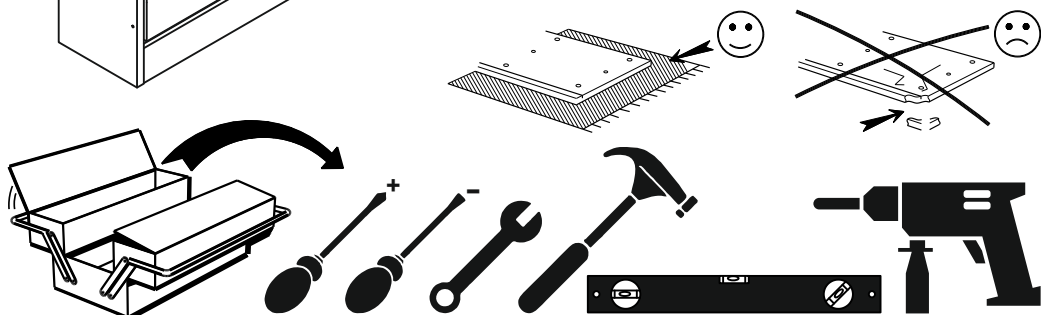


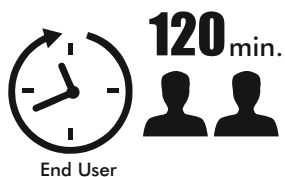

# MULTIMO

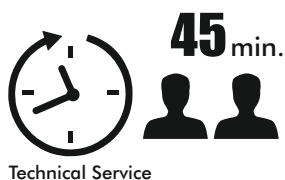







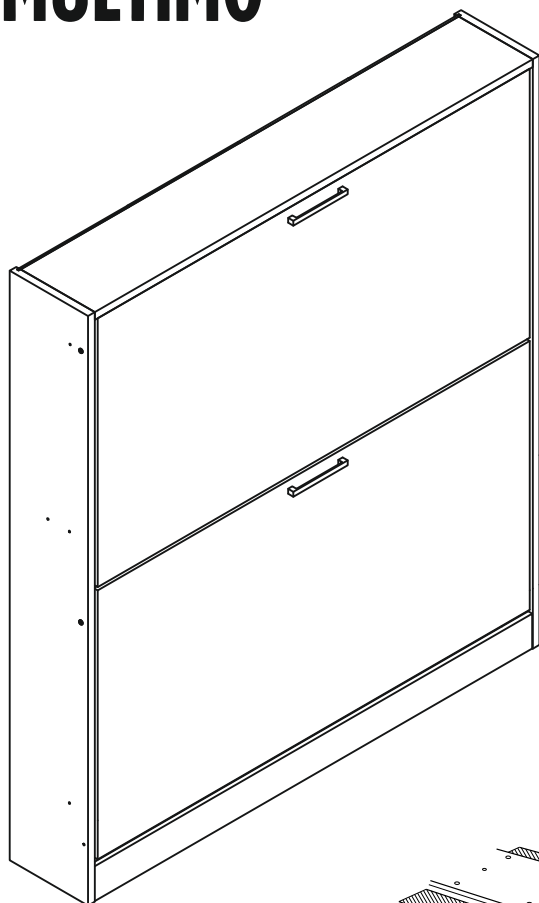














## A 205 PENSIERO










Assembly Instructions

Track Title	Piece	(inch)				(mm)			
		Thickness	Length	Width		Piece	Thick	Height	Most
<b>A</b>	1	1,18	77,01	12,99		1	30	1956	330
<b>B</b>	1	0,71	77,01	12,99		1	18	1956	330
<b>C</b>	1	0,71	77,01	5,31		1	18	1956	135
<b>D</b>	2	1,18	89,76	13,78		2	30	2280	350
<b>E</b>	1	0,71	77,01	10,24		1	18	1956	260
<b>F</b>	4	0,31	89,41	19,37		4	8	2271	492
<b>H</b>	2	0,71	77,01	7,87		2	18	1956	200
<b>I</b>	1	0,71	77,01	10,24		1	18	1956	260
<b>GT</b>	1	0,71	40,94	75,98		1	18	1040	1930
<b>GB</b>	1	0,71	40,94	75,98		1	18	1040	1930

### Accessories List

<b>MNX 02</b>  <b>32 / piece</b> <b>IM - 01 (6x30) mm</b>	<b>MNG - 01</b>  <b>32 / piece</b> <b>CT - 02 ( 6x30 ) mm</b>	<b>OT-054</b>  <b>4 / piece</b> <b>VKP - 01 (22) mm</b>	<b>CT - 01 ( 6x40 ) mm</b>  <b>4/ piece</b> <b>BU - 01</b>
 <b>8 / piece</b> <b>DD - 01 ( R10 )</b>	 <b>2/ piece</b> <b>VD - 01(6X70) mm</b>	 <b>4 / piece</b> <b>PL - 01 (6x19x2) mm</b>	 <b>2/ piece</b> <b>DSE - 01 (40x90x32) mm</b>
 <b>3 / piece</b> <b>VTB - 01 (4,8x16) mm</b>	 <b>3 / piece</b> <b>KP - 01 ( 224 ) mm</b>	 <b>3 / piece</b> <b>KVL 01</b>	 <b>3 / piece</b> <b>VD - 02 (3,5x25) mm</b>
 <b>12 / piece</b> <b>SC-61</b>	 <b>2 / piece</b> <b>AL - 01</b>	 <b>36 / piece</b> <b>AL - 02</b>	 <b>16 / piece</b> <b>TTC 01</b>
 <b>2 / piece</b> <b>KLF 01 (fabric cover)</b>	 <b>4</b> <b>MKZ - 02</b>  <b>4 / piece</b>	 <b>5</b> <b>KOR 01</b>  <b>5 / piece</b>	 <b>8 / piece</b> <b>AKR 01</b>  <b>2 / piece</b>


<b>LED - 01</b>  <b>1 / piece</b>	<b>H 01</b>  <b>3 / piece</b>	<b>TAP - 01</b>  <b>32 / piece</b>
<b>MRD 01</b>  <b>1 / piece</b>	<b>ADP - 01</b>  <b>1 / piece</b>	<b>PORT - 01</b>  <b>1 / piece</b>

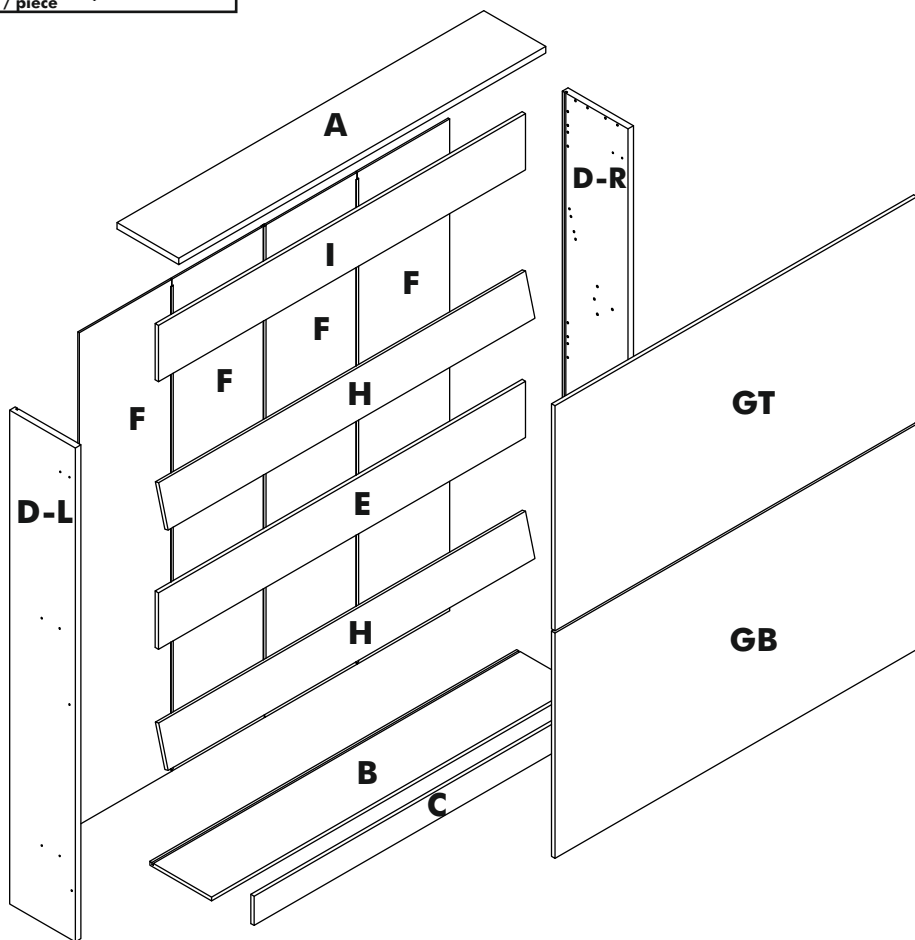



## STEP 1



MNX - 02




KVL 01

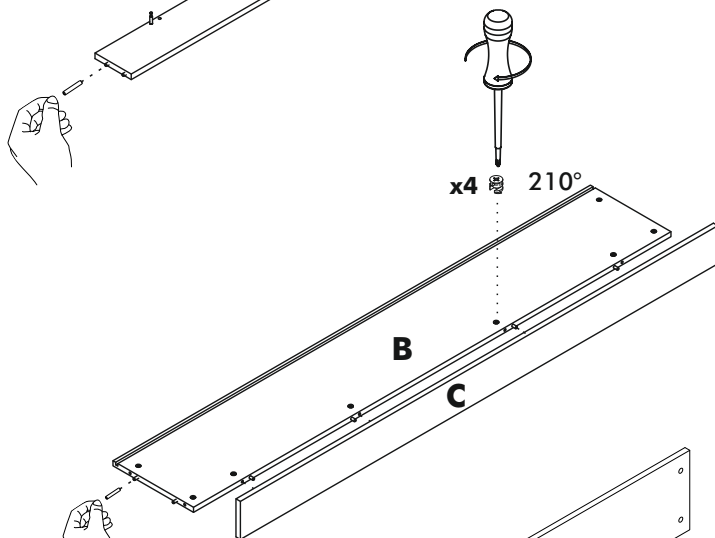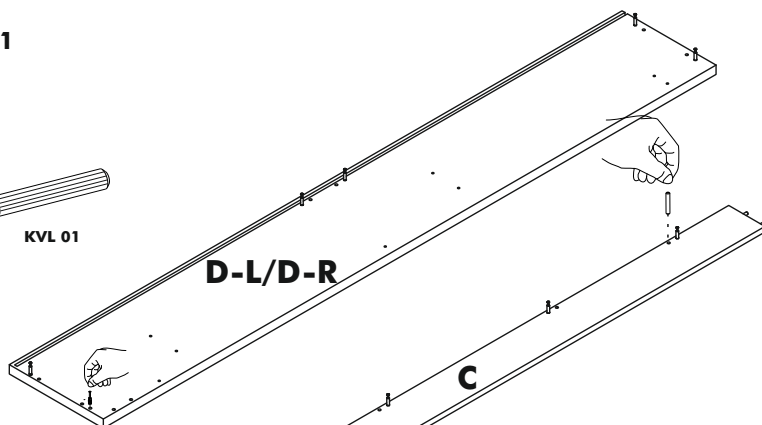


## STEP 2




MNG - 01


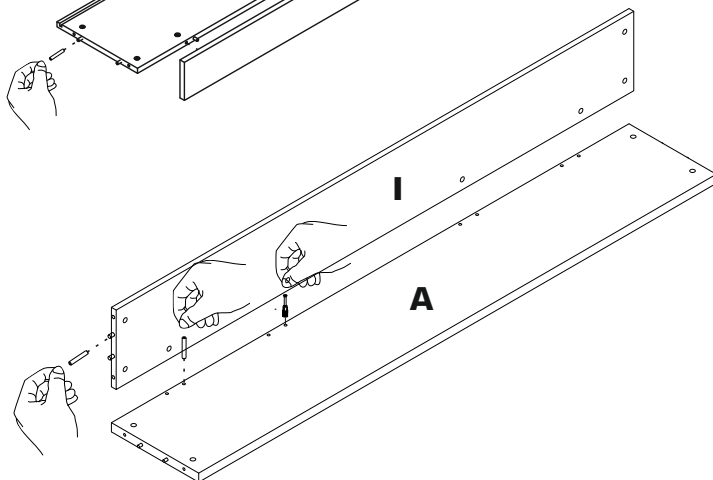


### STEP 3


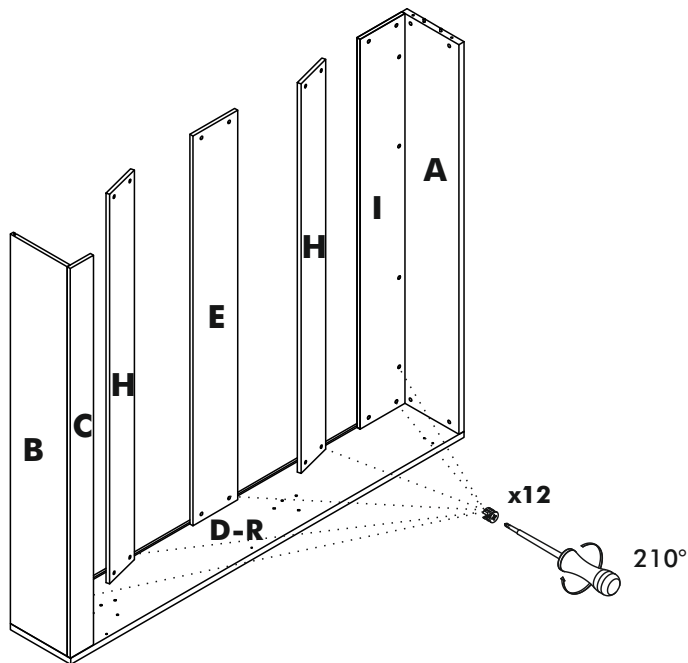


### STEP 4

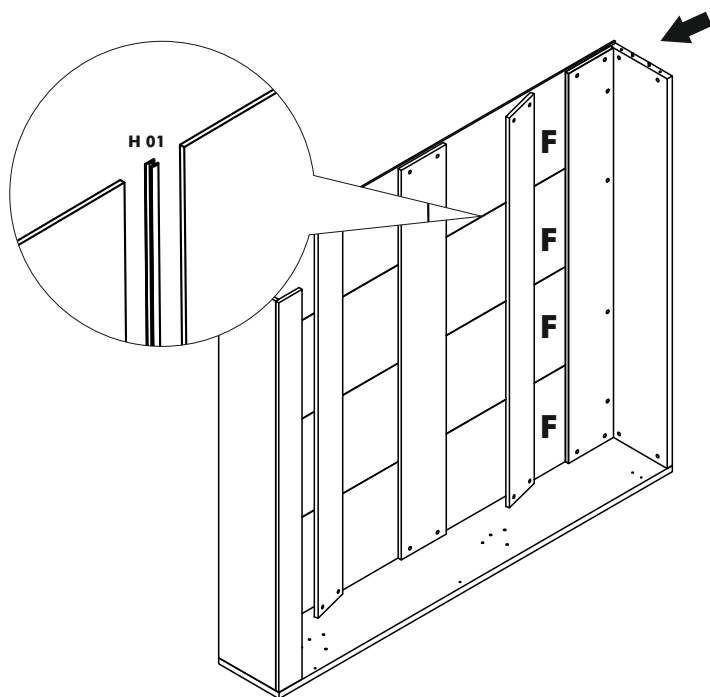


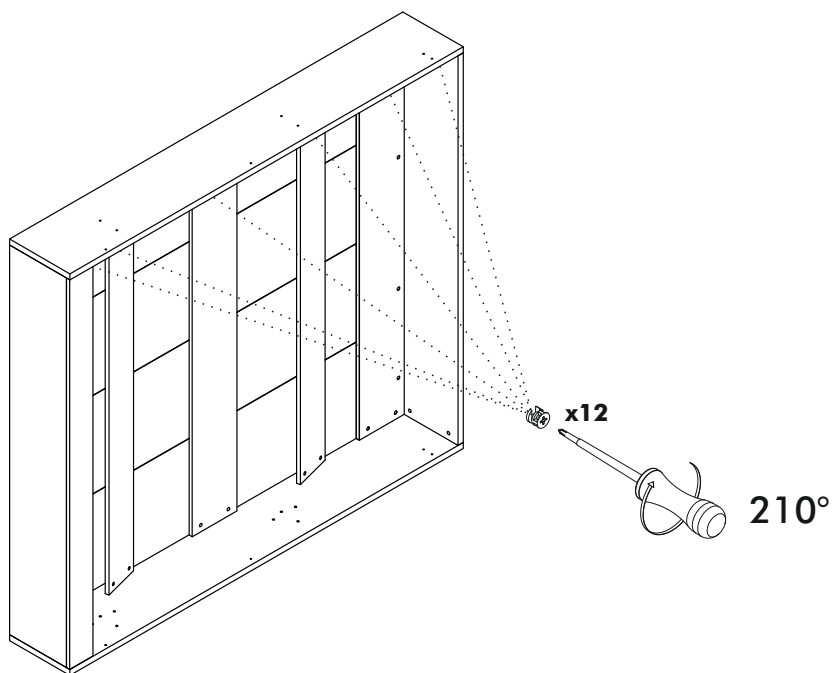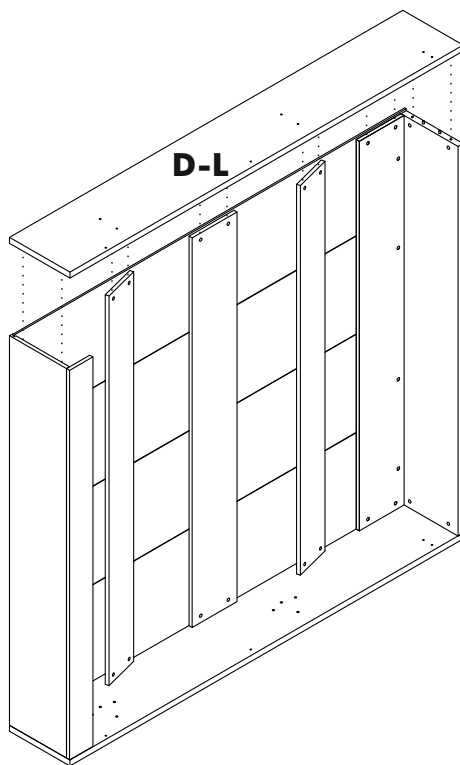


# STEP 6

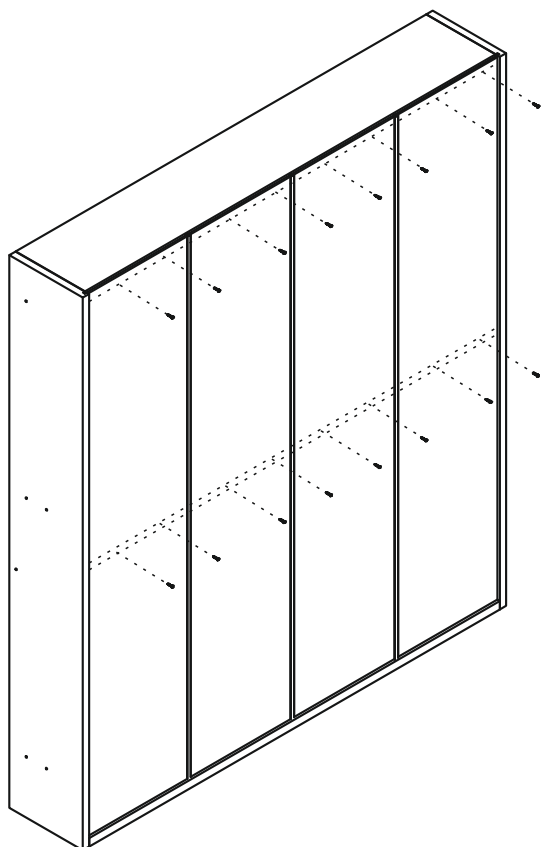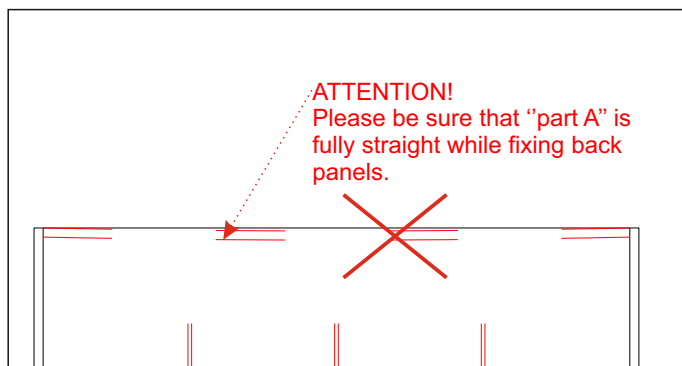


x16

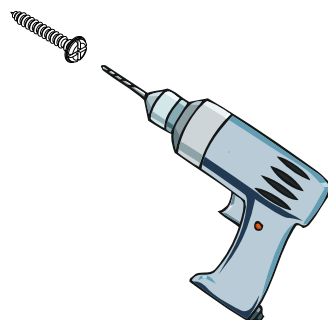

# STEP 7

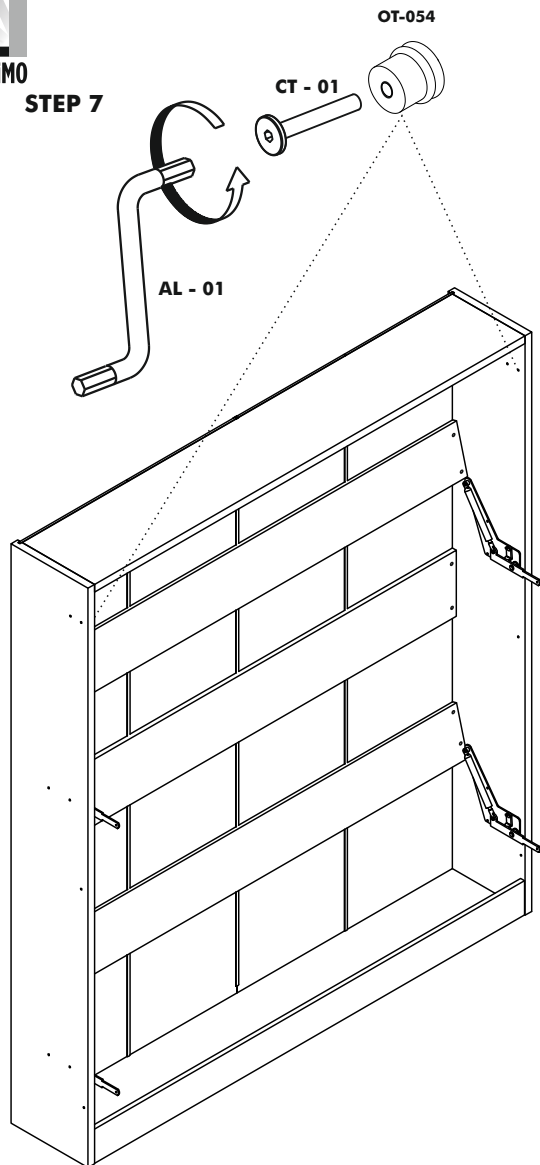


**CAUTION**  
DO NOT UNLOCK  
BEFORE INSTALL

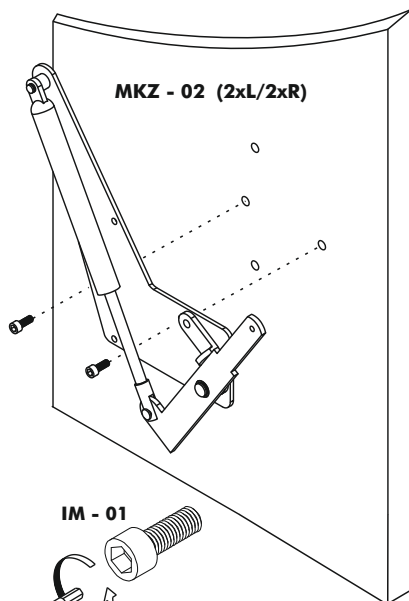



# STEP 8

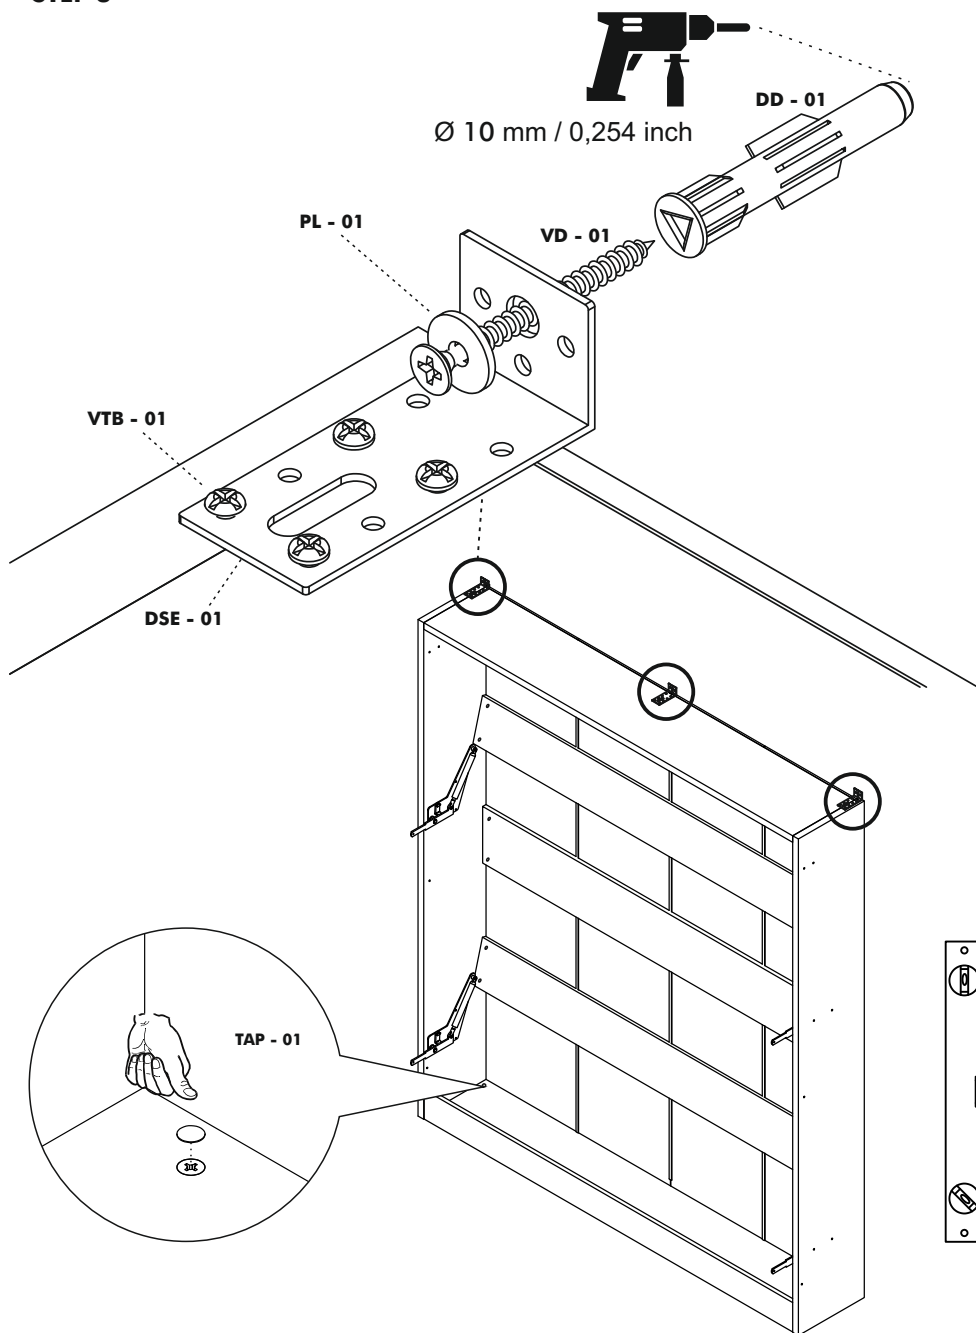

## STEP 8-2



Ø 10 mm / 0,254 inch

SUPPLY DRYWALL FASTENERS APPROPRIATE  
TO YOUR WALL TYPE. WE RECOMMEND  
USING STEEL TOGGLE BOLT ANCHOR THAT  
SHOWN BELOW



PL - 01

VD - 01

VTB - 01


DSE - 01



FIRST LOCATE THE STUDS BY USING "STUD  
FINDER" IN THE WALL AND DRILL IT  
ACCORDING TO THE HEIGHT MEASUREMENTS  
GIVEN ON THE SIDE.

UPPER HOLES SHOULD BE DRILLED  
FOR ATTACHING BED AT NEXT STEP.

TAP - 01



## STEP 9


45-50°

### CAUTION


MAKE SURE THE FRONT PANEL IS ALL THE WAY INSIDE THE TONNELS

45-50°

PULL DOWN GENTLY TO RELISE THE HOLDING TRIGGER LOCK

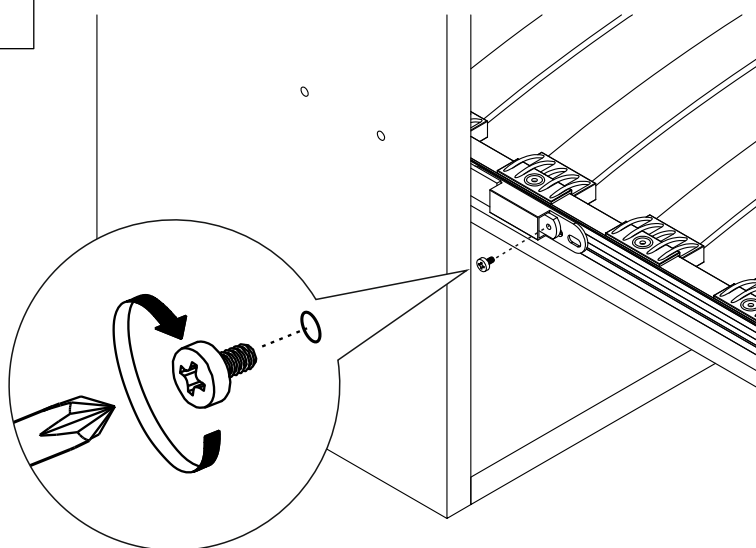




## STEP 10

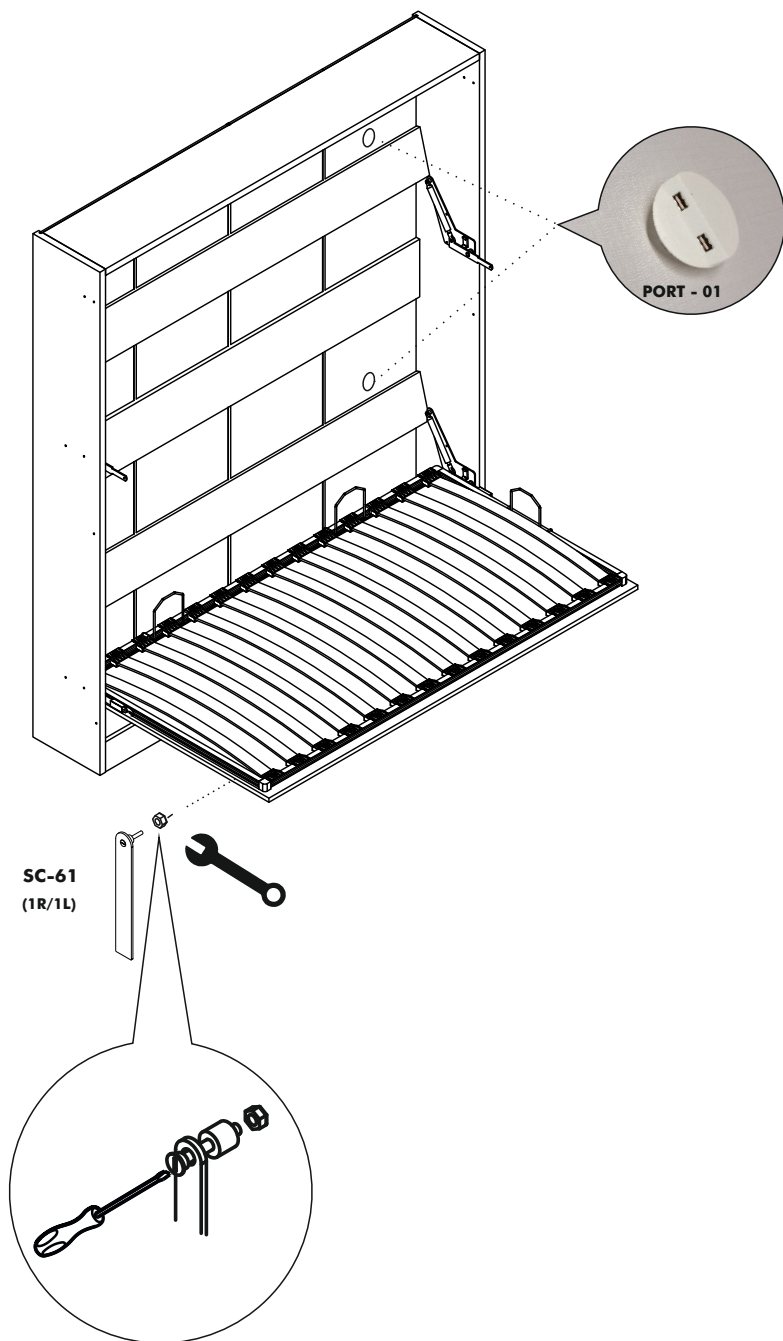


## STEP 11

### CAUTION !




Please make sure  
that leg ladder supports  
the center of the top  
bed and use all time  
when the bed is opened

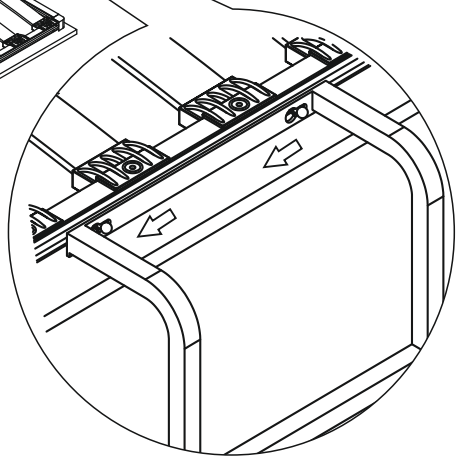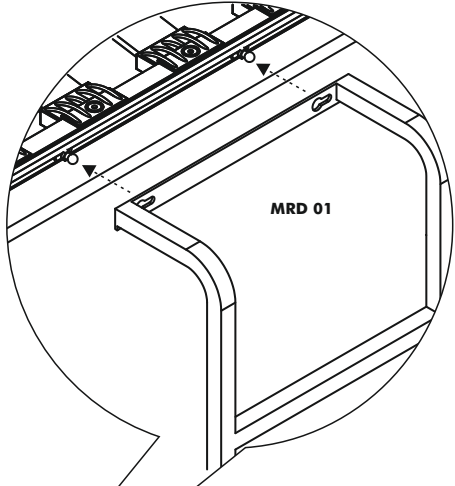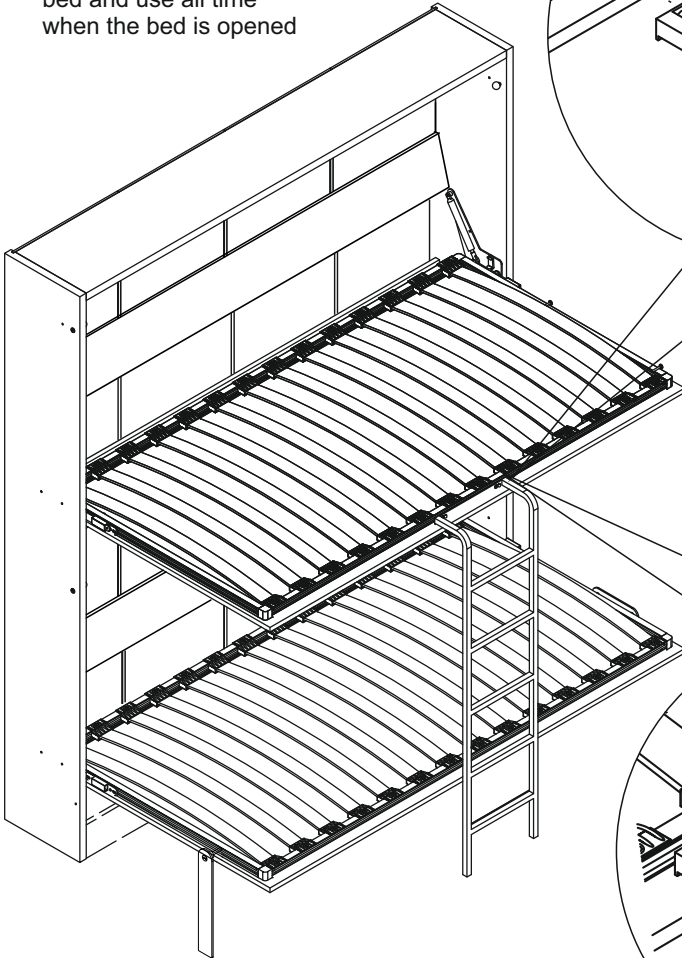



## STEP 12

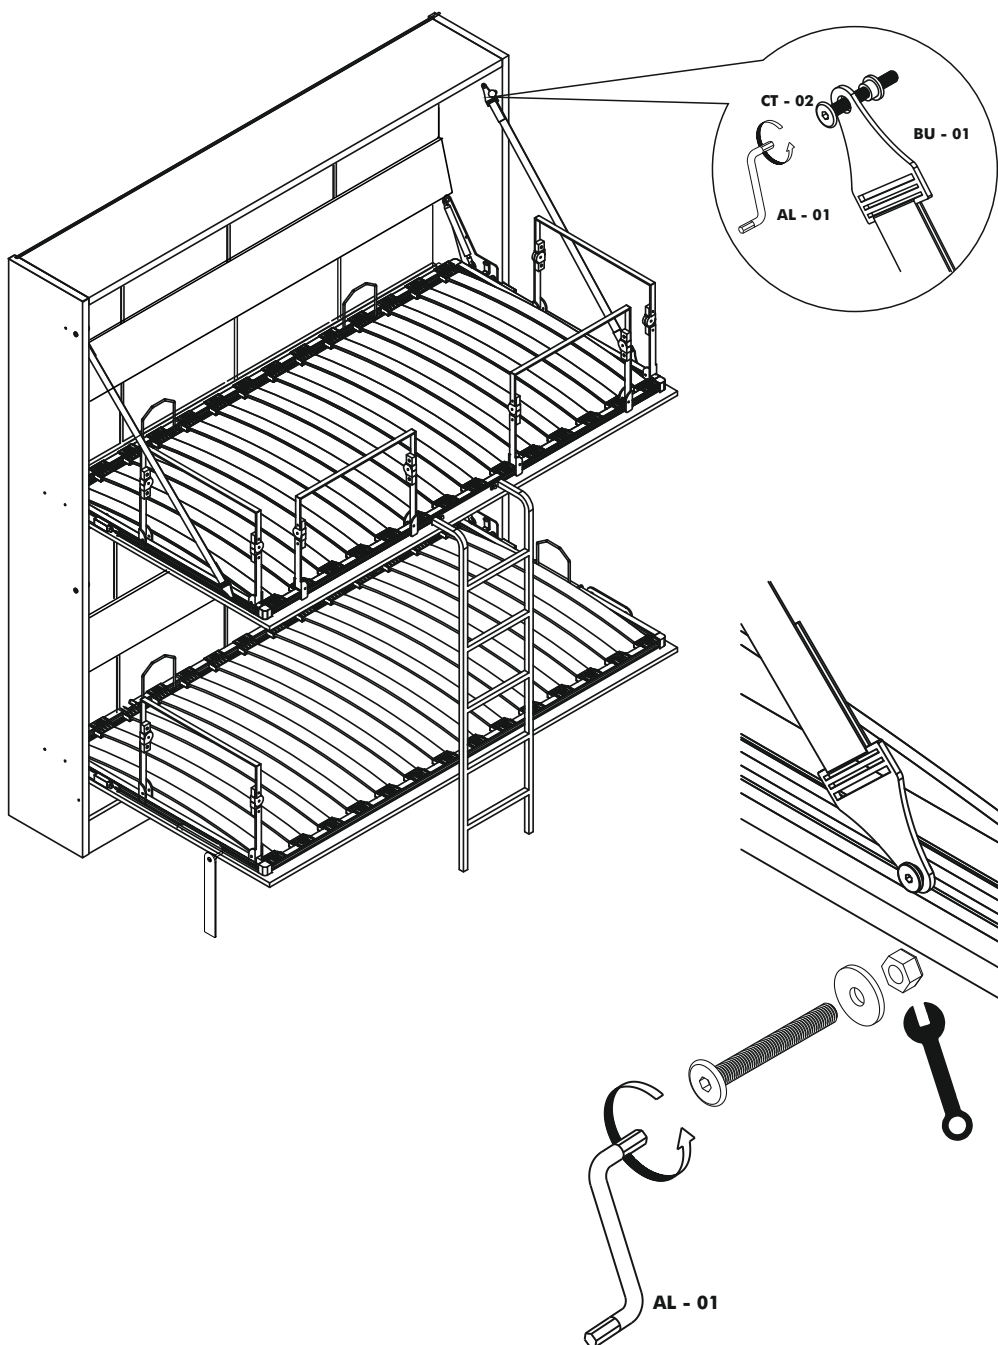


## STEP 13

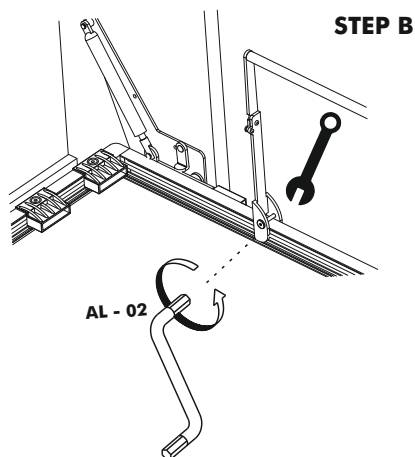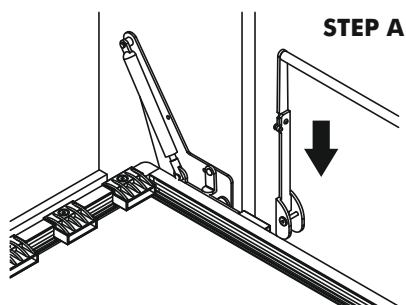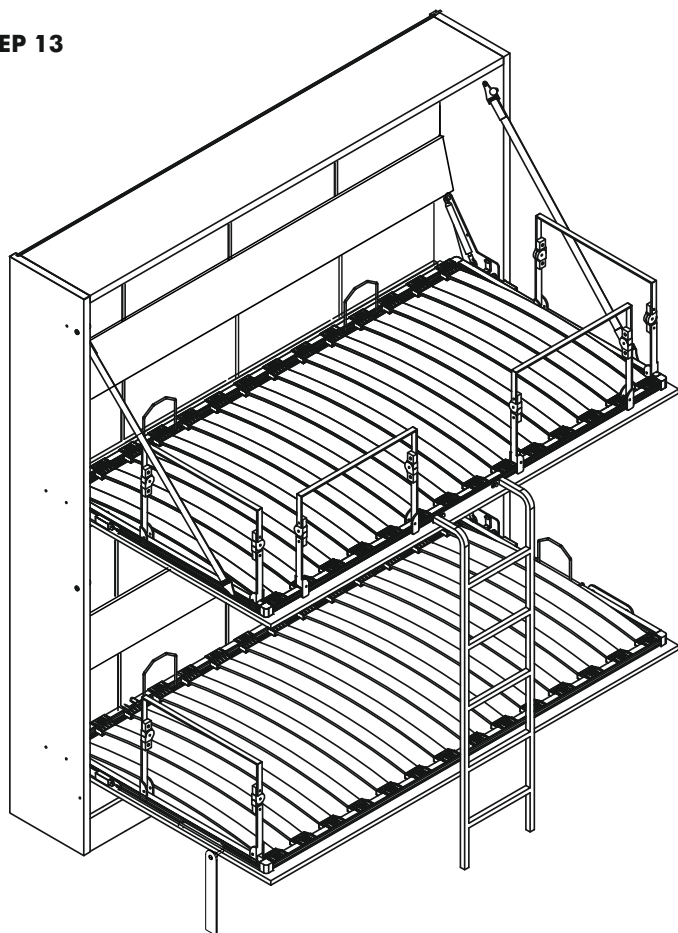

## STEP 14

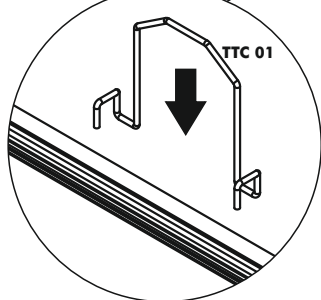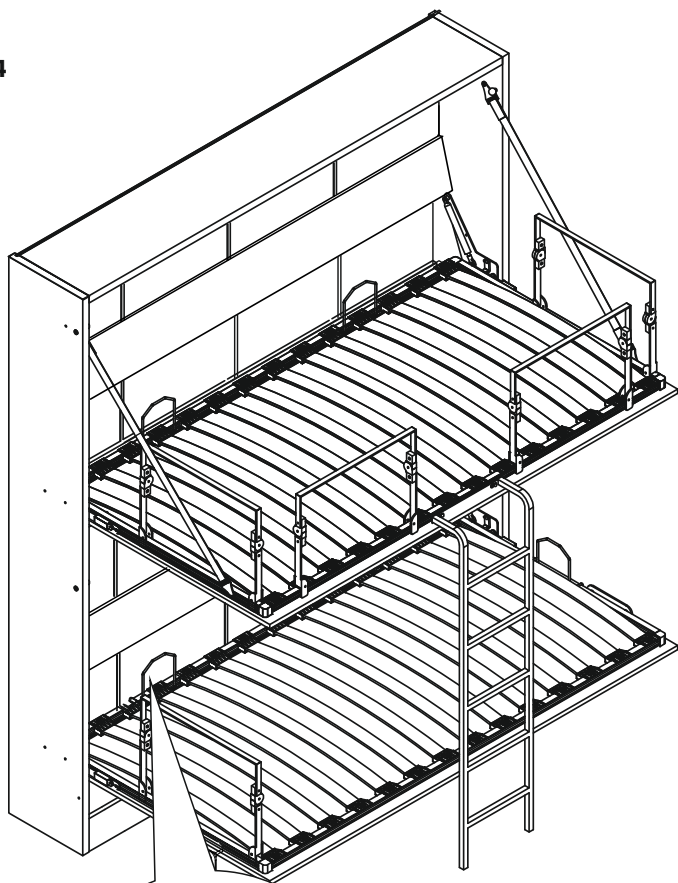


**CAUTION !**  
BE SURE THE HEADBOARD  
IS IN CLOSED POSITION  
WHEN BED BOX IS CLOSED

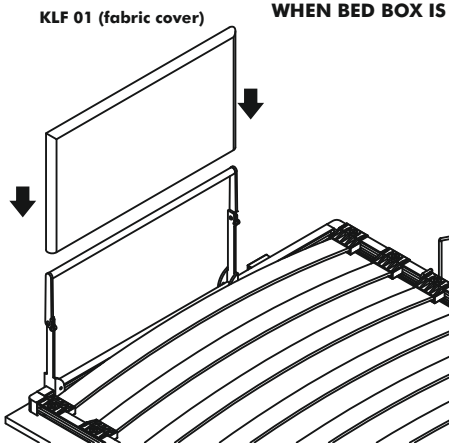



STEP 15

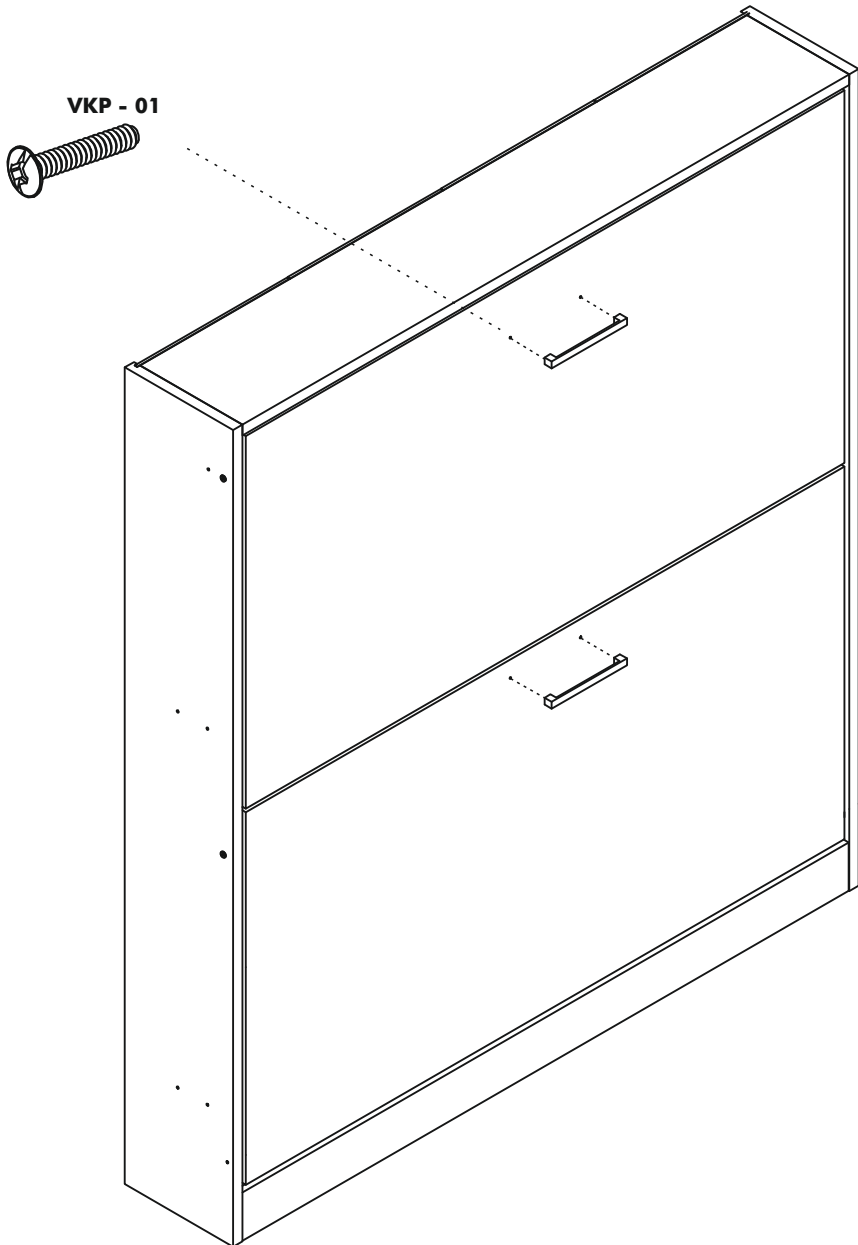

1. Unless an item is free standing, when mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar materials are also acceptable. Do not mount furniture on to paper-mache or sheetrock like material without properly affixing it to stud.
2. For safety and longevity of the product you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm that hardware remains properly affixed and connections are snug.
3. Unless noted otherwise on the product page, Wall Bed mattress thickness may not exceed 8 inch. Make sure to remove pillows and excess blankets before closing. This keeps mechanism free of obstructions and unnecessary stress.
4. Do not lean or rest heavy objects on sides or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use beds, desks and shelving as intended. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change you must inspect interior and exterior of furniture.
7. Single, Twin, Twin XL beds accommodate the weight of one person, up to 250 lb. Exceeding recommended weight restrictions may lead to personal injury and property damage.
8. Before any un-mounting or disassembly please contact Multimo for technical support and instructions. Failure to properly detach wall bed may result in personal injury and property damage.
9. Some wall beds have legs that fully extend when open - be aware of where the leg is and will be.



## WARNING

### IMPORTANT! HAZARD WARNING!

All Wall Beds contain sophisticated and powerful lifting mechanism.  
Failure to follow assembly and installation instructions may result in **severe personal injury and damage of the product.**

### SECURE RIGIDLY TO A WALL!

Improper attaching wall bed to a wall will create a tip-over hazard and may result in severe personal injury or even death.

**ONLY qualified installers should install or remove a wall bed.**

10. For Bunk Beds:

- a. Always use provided ladder when accessing top bunk.
- b. Be slow, careful and aware of surroundings when opening top bunk.
- c. Do not horseplay. Beds are to be slept on only.



## WARNING

**To help prevent serious or fatal injuries due to entrapment or falls**

- Never allow a child under 6 on upper bunk.
- Use only Twin/Twin XL size mattress on upper bunk.
- Ensure mattress thickness doesn't exceed 6", and that mattress surface at least 5" below upper edge of guard rails



## WARRANTY

### RETAIL RESIDENTIAL TERM

Lifetime guarantee on hardware.

**5 year** structural guarantee on cabinetry.

---

### COMMERCIAL TERM

Lifetime guarantee on hardware.

**2 year** structural guarantee on cabinetry.



[www.multimobeds.com](http://www.multimobeds.com)