


# **Assembly Instruction**

INSTRUCTION DE MONTÂGE MONTÂGEÂNLEITUNG SÂNLEVEJIEDNING

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING NEED ASSEMBLY ASSISTANCE? CALL US AT 866-814-8325

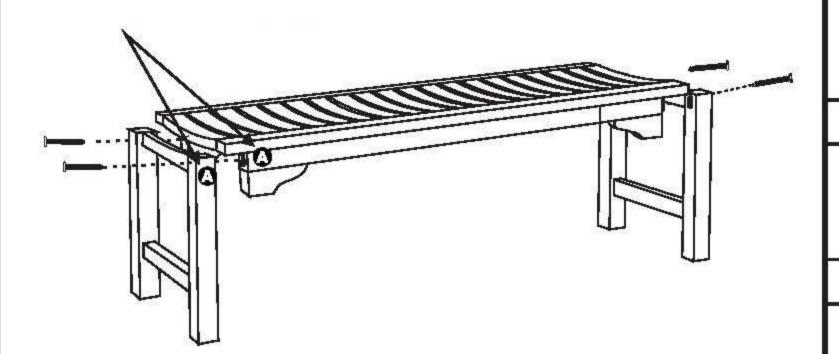

Make sure to use Gorilla Glue (Not included) on all wood joints before assembly

### Code

**HJ164** 

#### **Hardware**



F. Bolt (4 Pcs)

#### Tool



Socket Wrench 4m/m Ht

## **Total Section**

3 Section