




# Assembly Instruction

INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEVEJLEDNING

MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING  
NEED ASSEMBLY ASSISTANCE?  
CALL US AT 866-814-8325

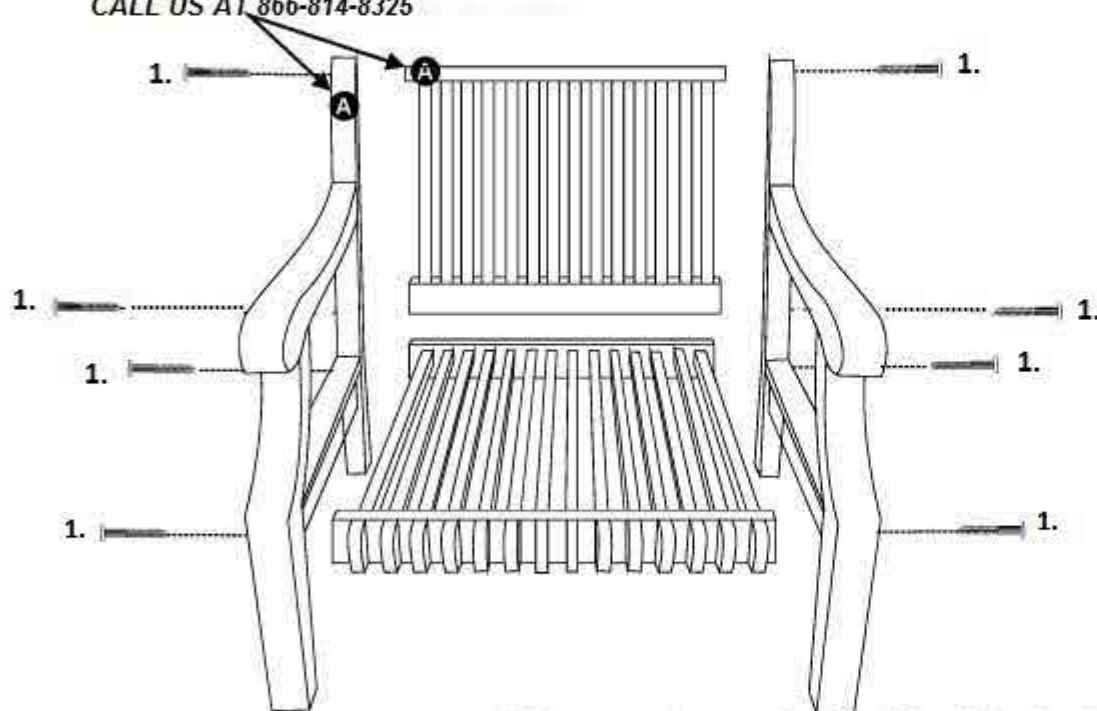

**Make sure to use Gorilla Glue (Not Included)  
on all wood joints before assembly**

Code

**HJ 364**

Hardware



1. F. BOLT 60mm ( 8 pcs )

Tool



Socket Wrench 4m/n Ht

Total Section

**4 Section**