



ASSEMBLY INSTRUCTION

Panel Full Bed


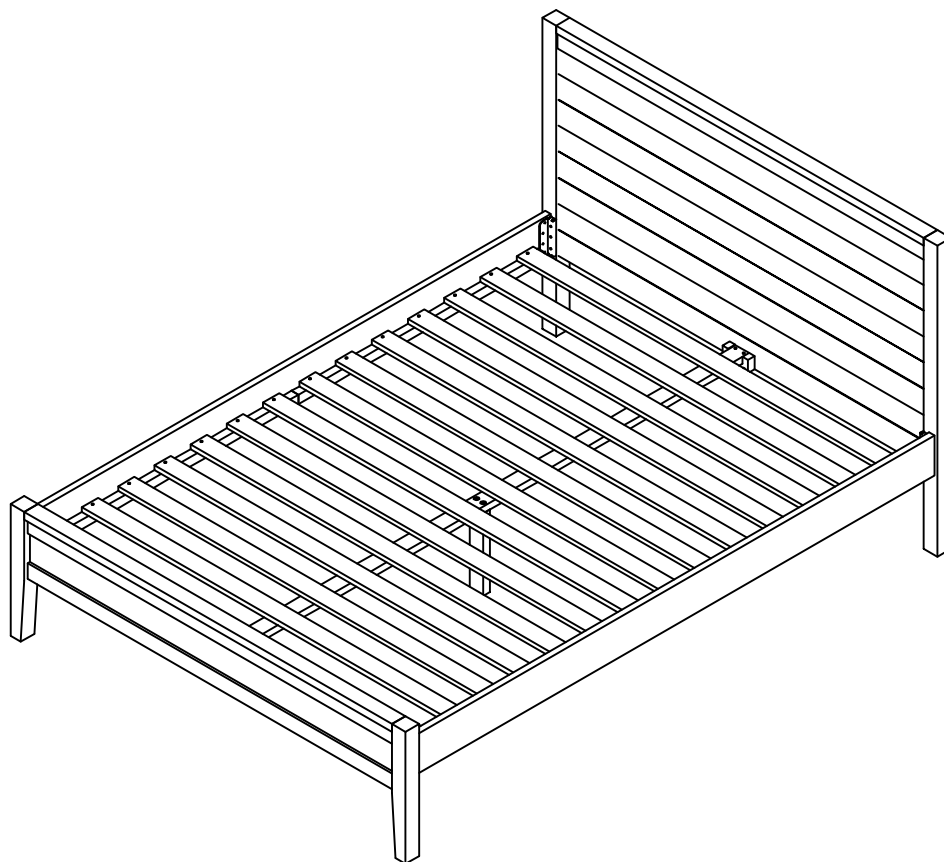


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "


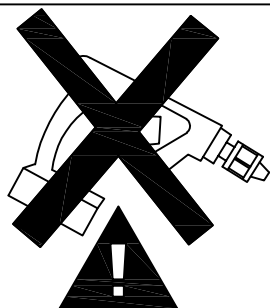


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

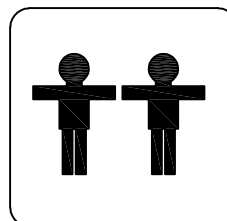

50 minutes


Tools Required

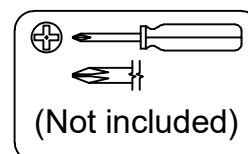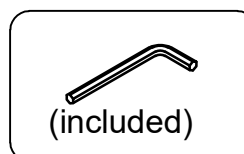

www.boltonfurniture.com


Part List :

01	1 pcs
02	1 pcs
03	1 pcs
04	1 pcs
05	1 pcs
06	1 pcs
07	2 pcs
08	14 pcs
09	1 pcs
10	1 pcs

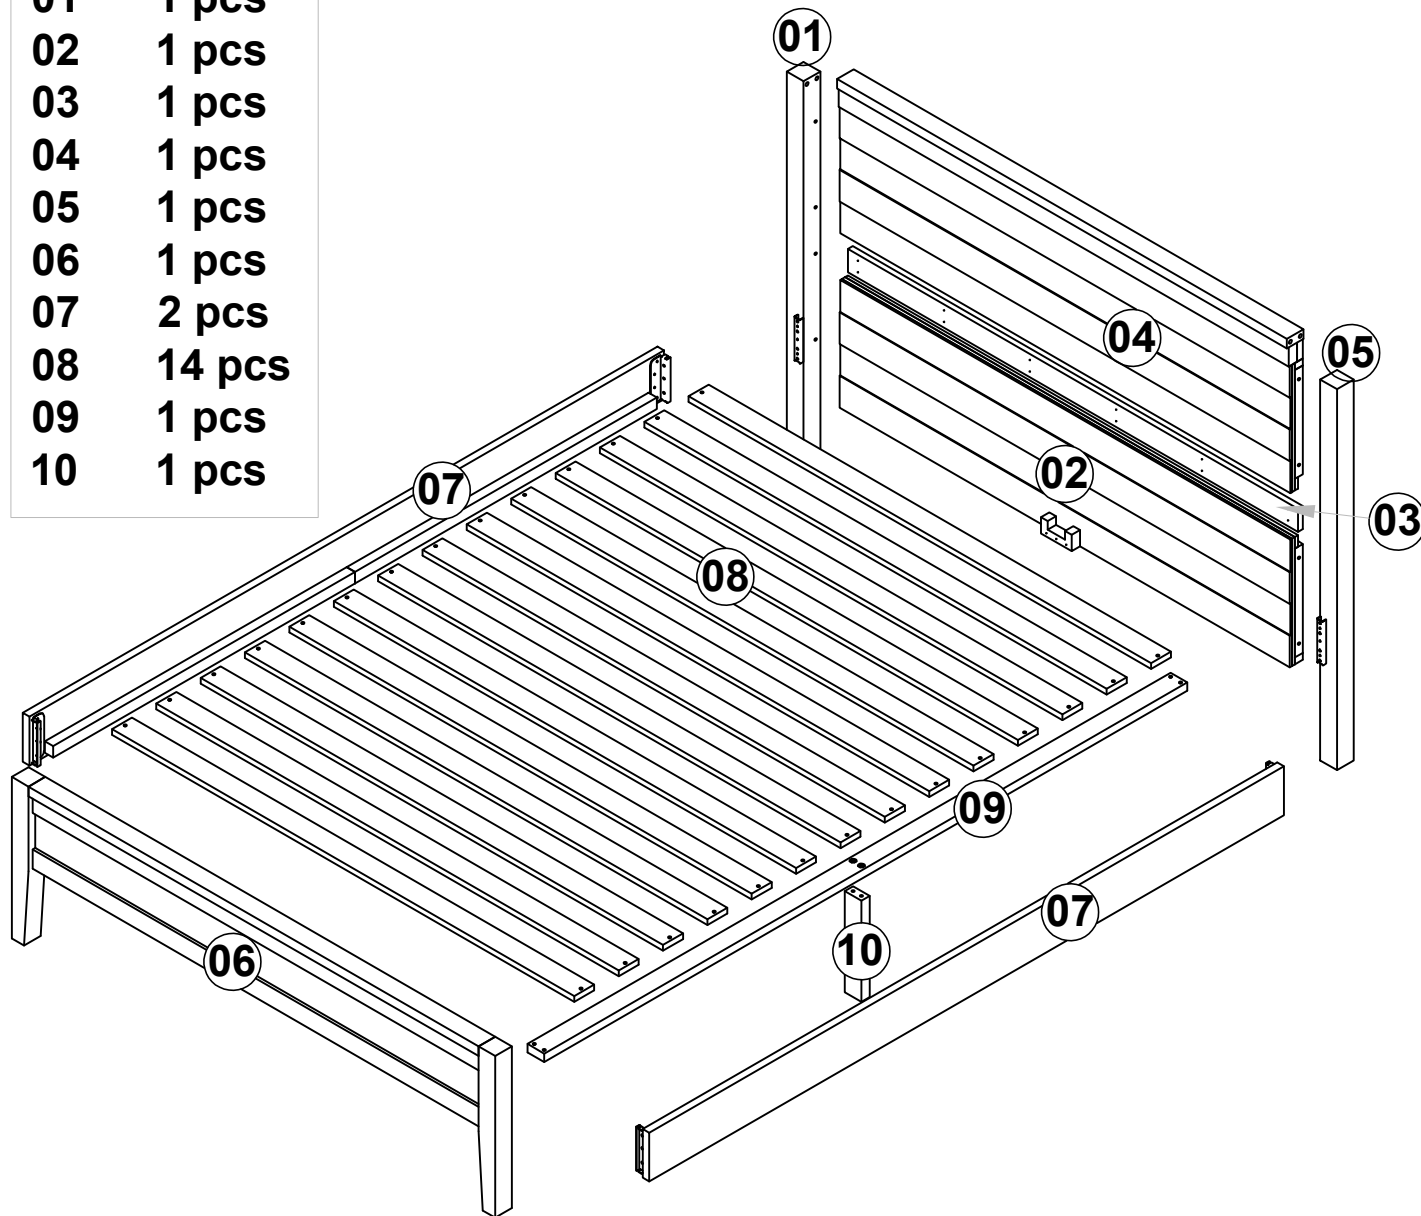

Identifying the hardware-Identify the hardware using the illustrations below

A



Ø10x35

04

B



M6x10mm Bolt

10

C



φ4 x 30mm Screw

44

D



M6x10mm Bolt


08

E



02



F



Spacer 73 mm

02


Step 01

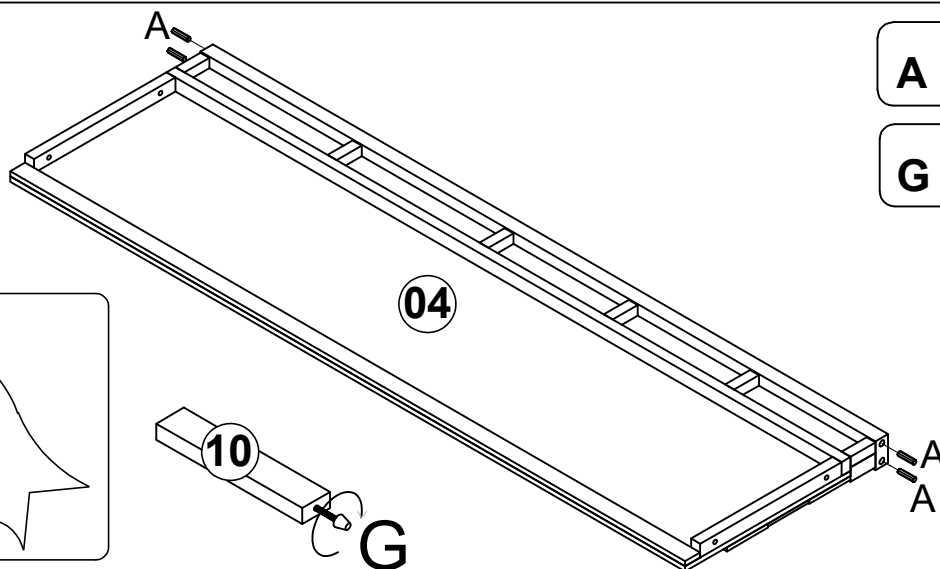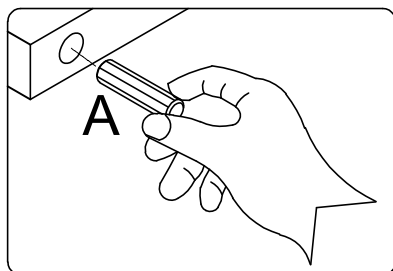



A  **Ø10x35 04**


G  **01**

Step 02

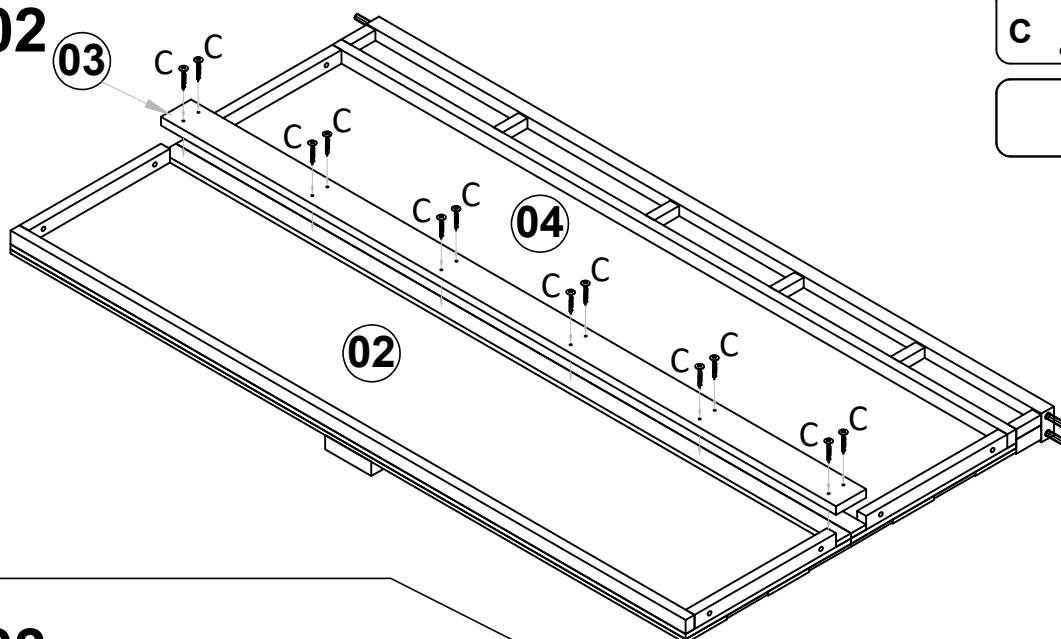


C  **φ4x30mm Screw 12**

 **01**
(Not included)

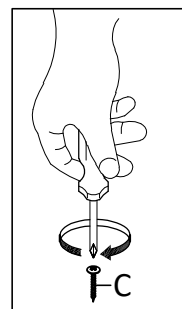

Step 03

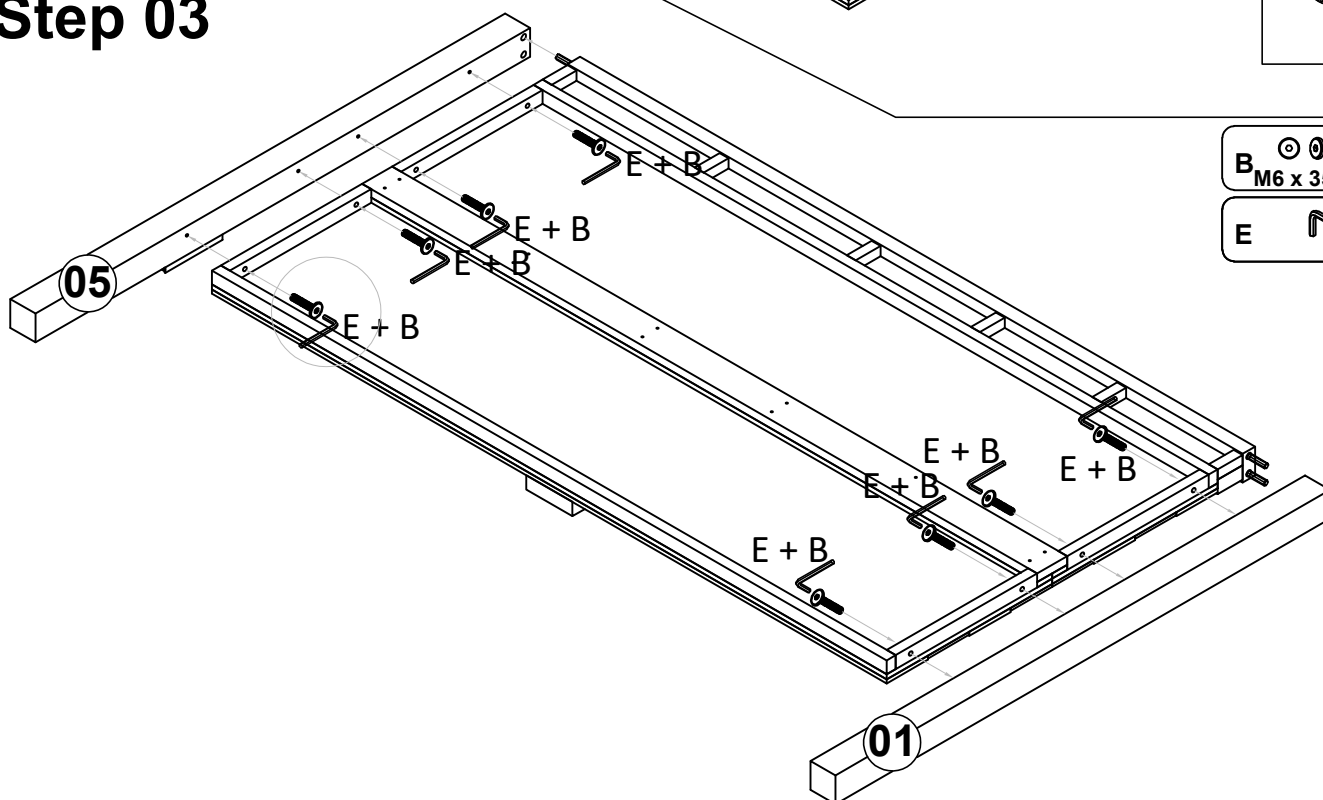


B  **M6 x 35mm Bolt 08**

E  **01**


Step 04

E  01


B  02

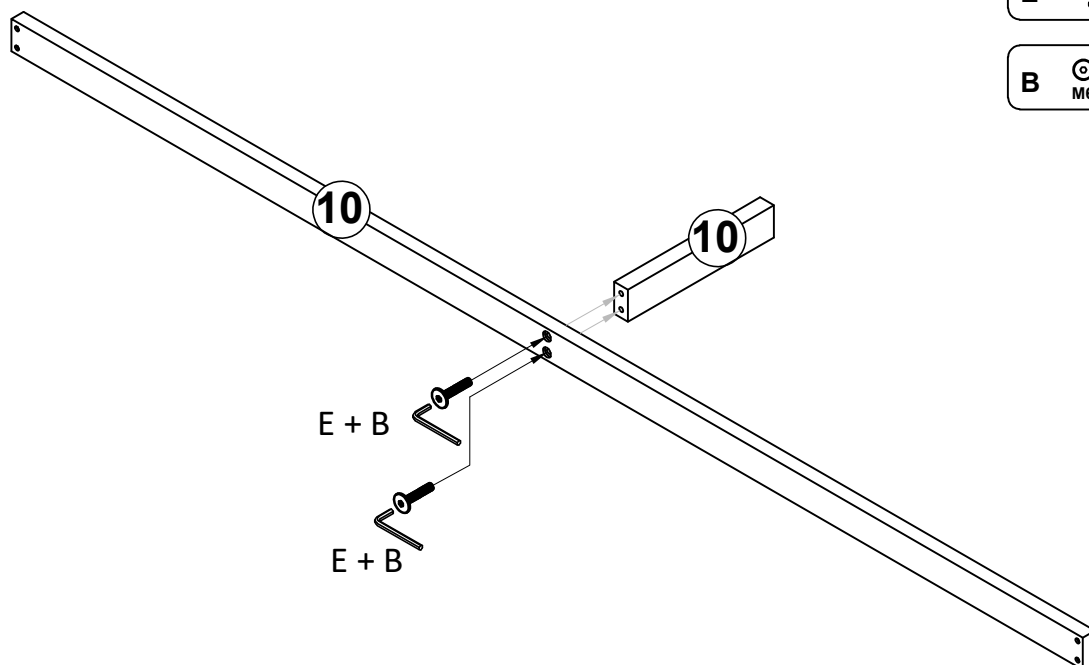


Step 05

D  08


E  01

C  04

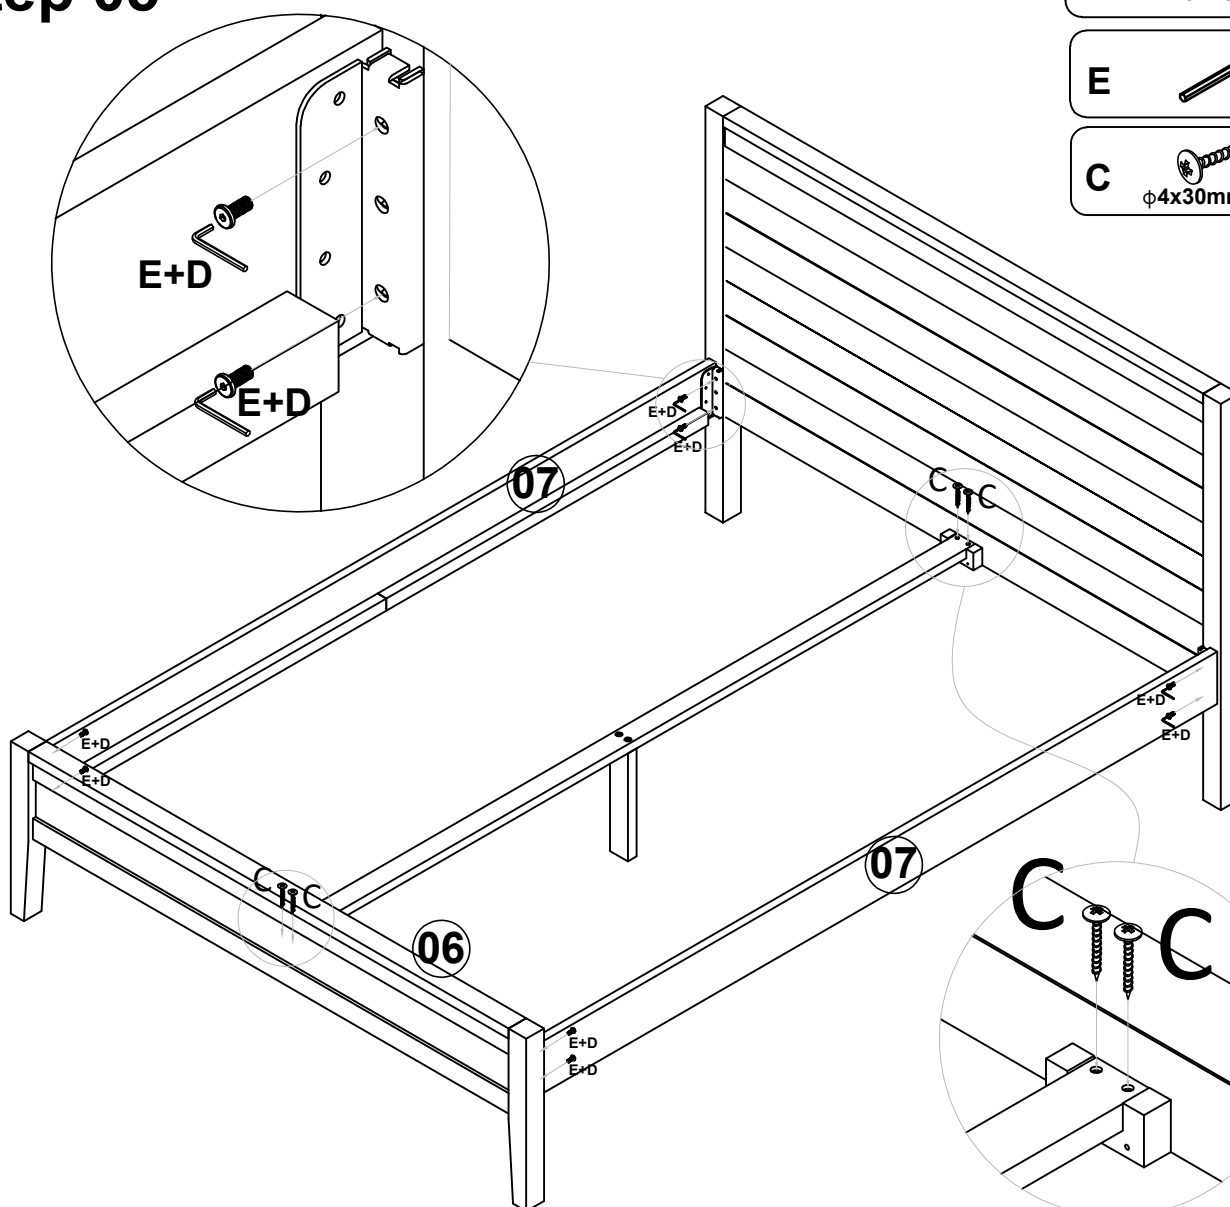


Step 06

C



φ4x30mm Screw

28

F


Spacer 73mm

02


(Not included)

01

