

INSTALLATION INSTRUCTION
Low Voltage LED MR16 Flexible Spot Lights
ME-204


WAC LIGHTING
Responsible Lighting®

SAFETY INSTRUCTION

- Always turn off power at fuse box prior to installation to prevent electrical shock.
- For installation by a qualified electrician.

TO HARD WIRE:

1. Loosen the three canopy screws twist and separate the canopy cover from the base plate.
2. Remove knock out from the base plate.
3. Guide the input wires through the knock out and into the base plate.
4. Attach the base plate to the surface using slotted holes.
5. Connect with like colored line volt wires from the input wires to transformer wires, with wire nuts (supplied).
6. Connect green grounding wire from input wires to green wire from fixture.
7. Mount the canopy to the base plate by twisting key holes over three screws in base plate.
8. Tighten screws to secure canopy.

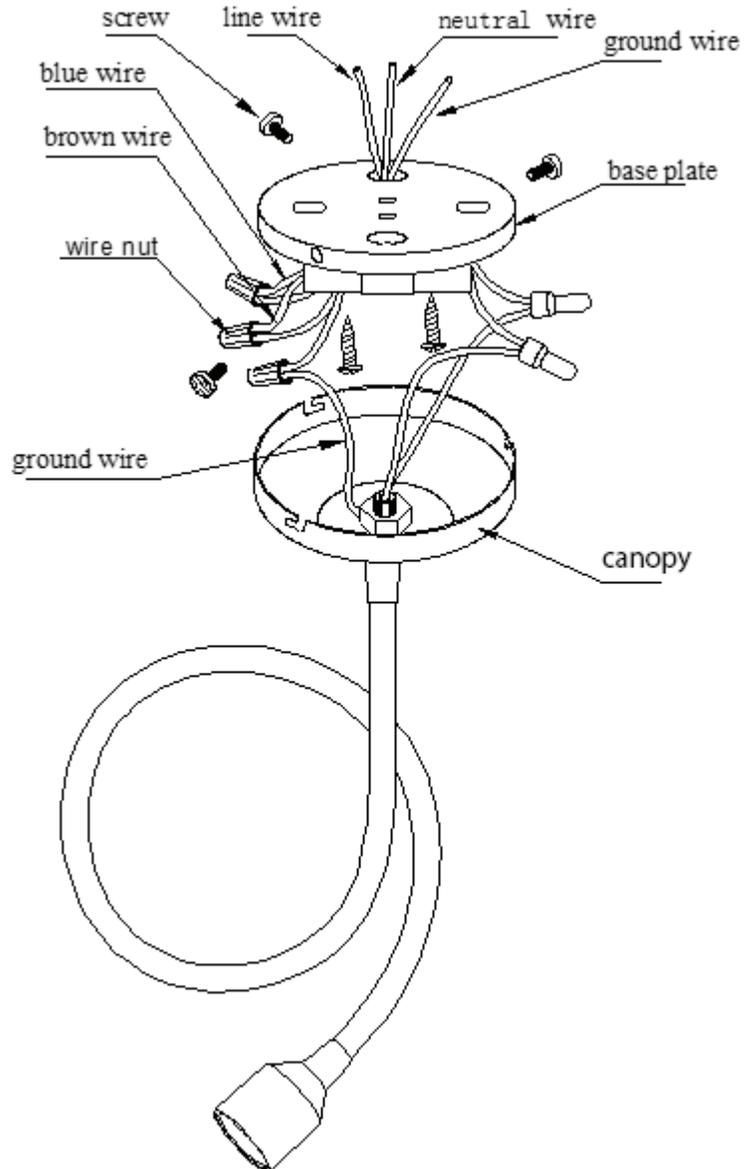

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585