




## Planked Wood Wall Art

### Hanging Instructions

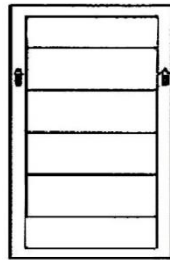

These mounting instructions are meant for dry wall/stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance. For safety and ease of mounting, installation is recommended using two people. Do not use or attach wire for hanging the picture. It is meant to hang from the affixed D-rings on the back.

#### **Tools needed:**

Level (preferably a laser level), Tape Measure, #2 Philips Screwdriver, Pencil

#### **Hardware needed:**

- (2) Metal Screws
- (2) Drywall Anchors (for drywall only – not for studs)

#### **Mounting Instructions:**

- A) Hold the panel against the wall and determine mounting location.
- B) While another person holds the panel at the desired location, draw a first line along the top edge. Set the panel down and measure the distance from the top of the panel to the D-rings. Make a lower mark on the wall from where the D-rings sit below the first line.
- C) Preferably using a laser level, mark 2 points for the D-rings that are level.
- D) Engage an anchor with a screwdriver and gently press the anchor tip into the wall at one of the two marks you made in Step C. Rotate the anchor clockwise as you continue to gently push the anchor into the wall. Continue rotating until the wide flange of the anchor meets flush with the wall surface. Repeat this step with the second mark.
- E) Use screwdriver to engage a screw into each installed anchor. Rotate the screw clockwise until the screw head is about  $\frac{1}{4}$  inch from the wall surface. Repeat this with the other screw and other installed anchor.

Note: If any of the marks made above align with a wall stud (you can use a stud finder to locate the studs), you can just use the screws without the anchors.

*Thank you for your purchase.*