


# HULALA

---

H O M E

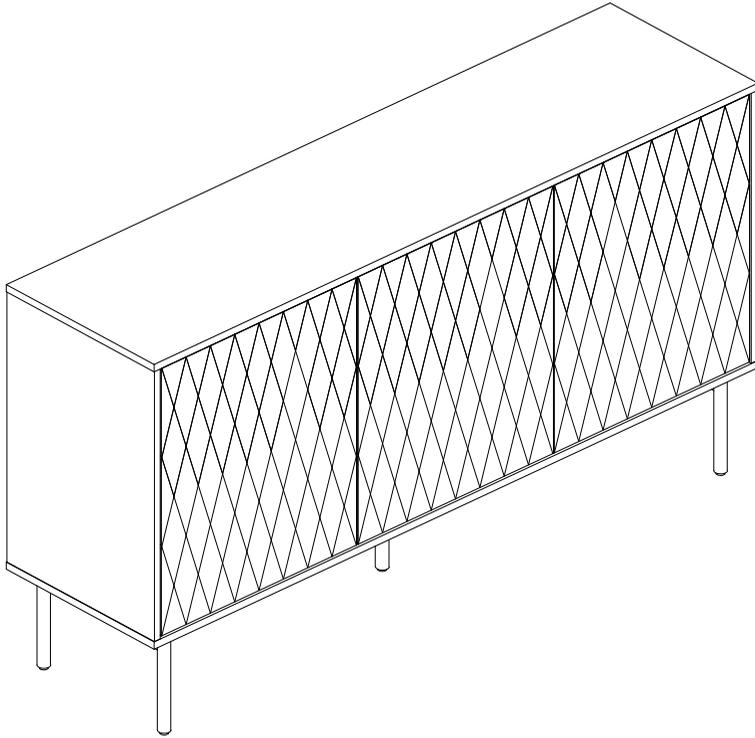

**ITEM NO.SBSD0912**

---

**NOTE:**


This brochure contains IMPORTANT safety info. Please read and keep for future reference.

---
















# MAINTAINANCE AND WARNING

- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.






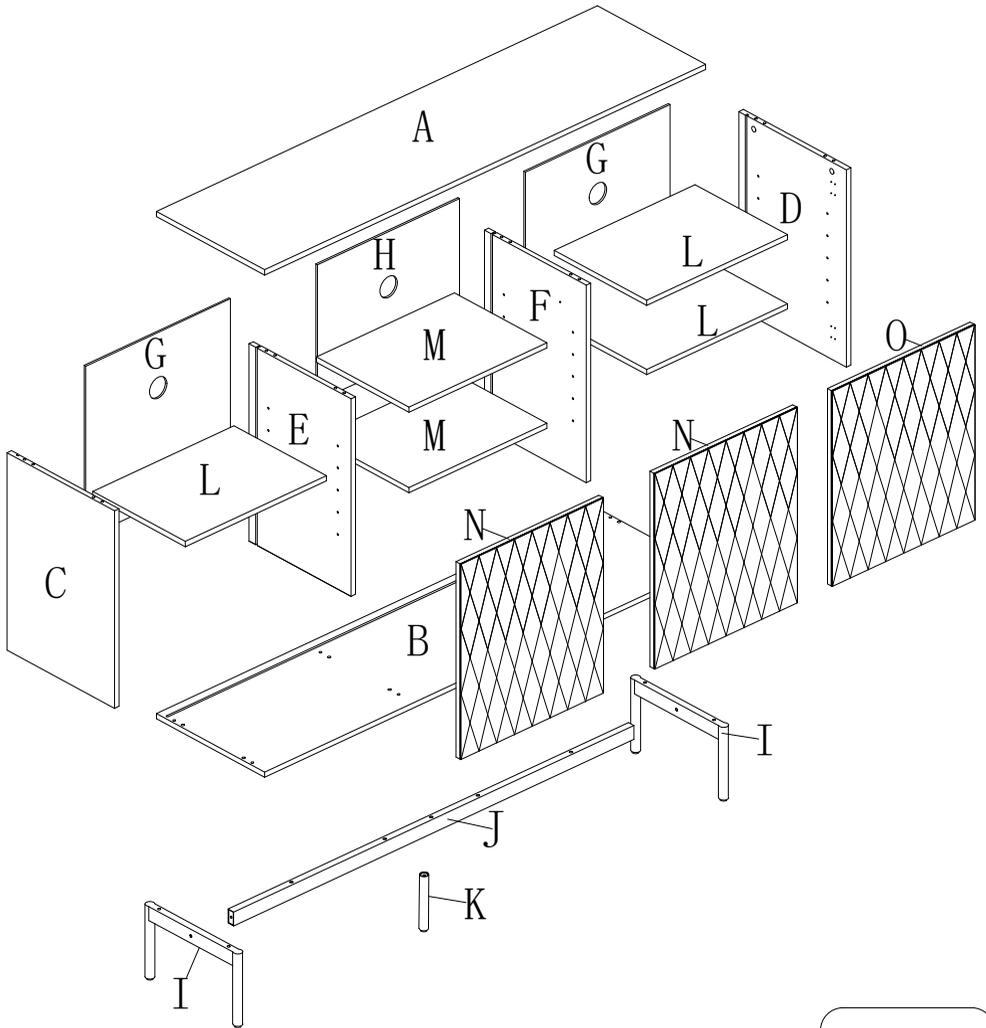

# PARTS LIST 1

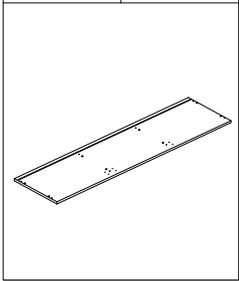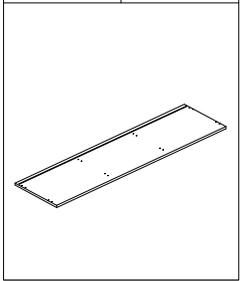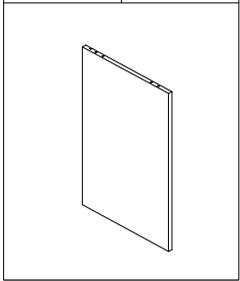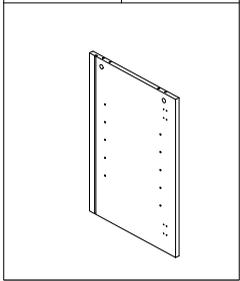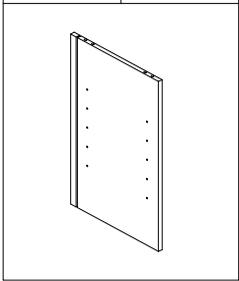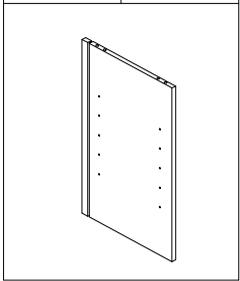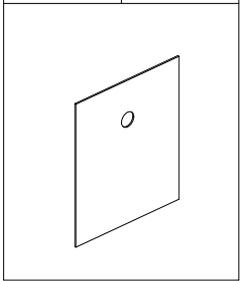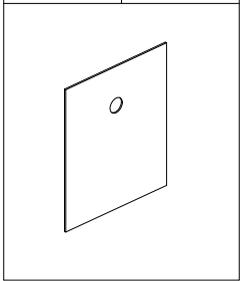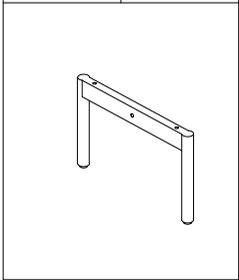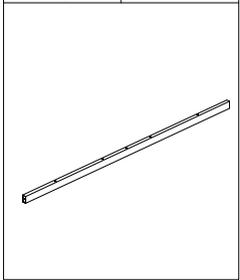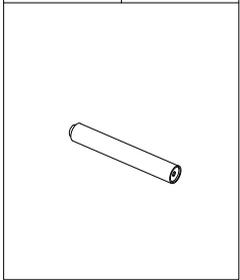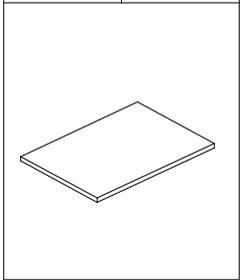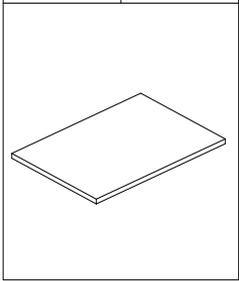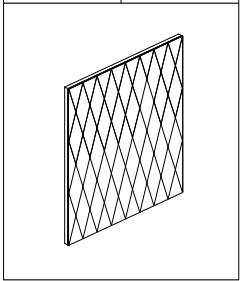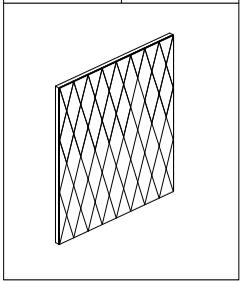A	x1	B	x1	C	x1	D	x1
							
E	x1	F	x1	G	x2	H	x1
							
I	x2	J	x1	K	x1	L	x3
							
M	x2	N	x2	O	x1		
							

# HARDWARE LIST

#1	x8	#2	x8	#3	x8	#4	x16	#5	x67	#6	x8
											
φ6*35mm		φ15*11mm		M7*50mm		φ8*30mm		M3.5*14mm		M6*50mm	
#7	x2	#8	x1	#9	x4	#10	x2	#11	x8	#12	x18
											
M6*40mm		M6*30mm						φ20			
#13	x20	#14	x3	#15	x3	#16	x4	#17	x4	#18	x2
											
								φ8*30mm			
#19	x4	#20	x1	#21	x1						
											
M4*35mm		M4									


# HARDWARE SPARE LIST

#1	x1	#3	x1	#5	x7	#6	x1	#7	x1	#8	x1
											
φ6*35mm		M7*50mm		M3.5*14mm		M6*50mm		M6*40mm		M6*30mm	
#19	x1										
											
M4*35mm											


# ASSEMBLY INSTRUCTIONS

## STEP-1

- 1.Prepare for part A. Align the holes in part A, insert wooden dowel #4 by hand, tighten with screwdriver #21 tighten #1.
- 2.Use bolt #5 to attach bouncer #14 to top panel (A) , tighten bolts with screwdriver #21.

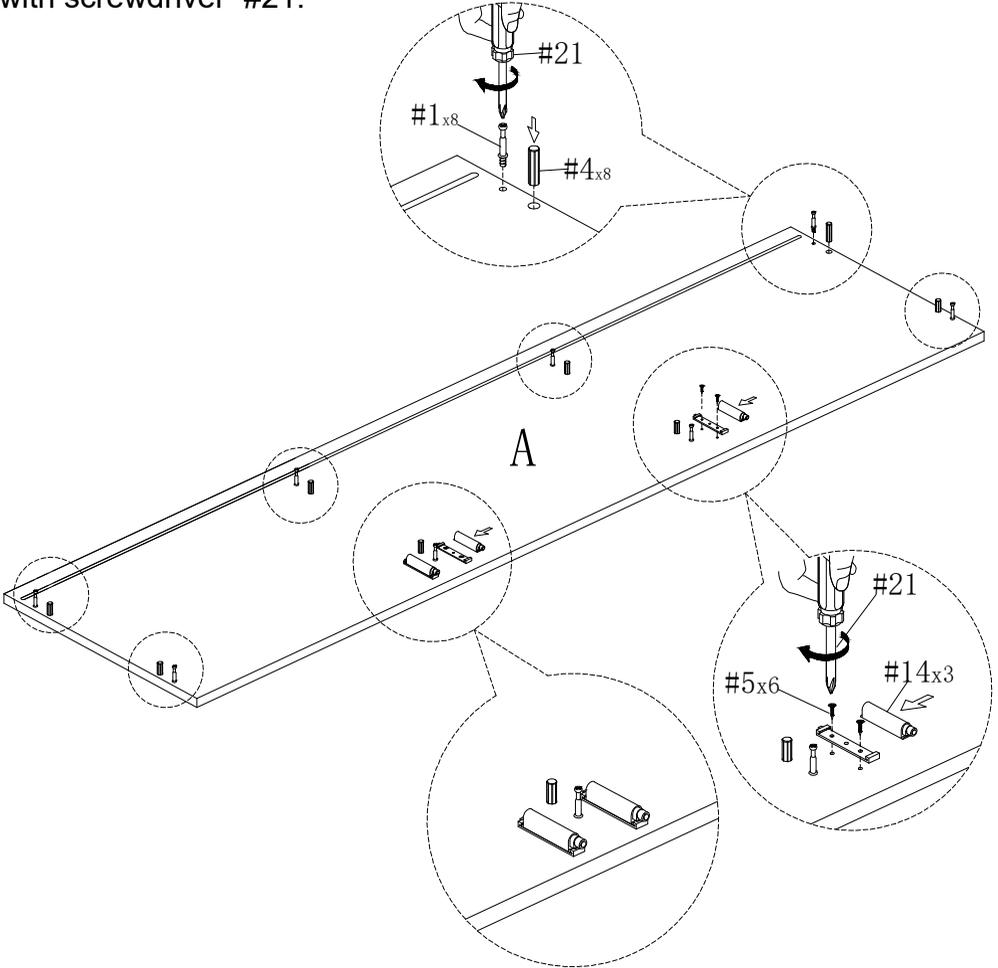


#5	x6
	
M3.5*14mm	

#14	x3
	

#1	x8
	
φ6*35mm	


#4	x8
	
φ8*30mm	


#21	x1
	

# ASSEMBLY INSTRUCTIONS

## STEP-2

1. Connect the part A with part C&D. align the hole in the part C&D, insert the bolt #1 and wooden dowel #4 in part A into part C&D. insert cam bolt #2 into the corresponding hole of side panel C&D, and tighten the nuts #2 with a screwdriver #21. After installation, cover the screw holes with #11. Make sure the groove is in same side as picture show.

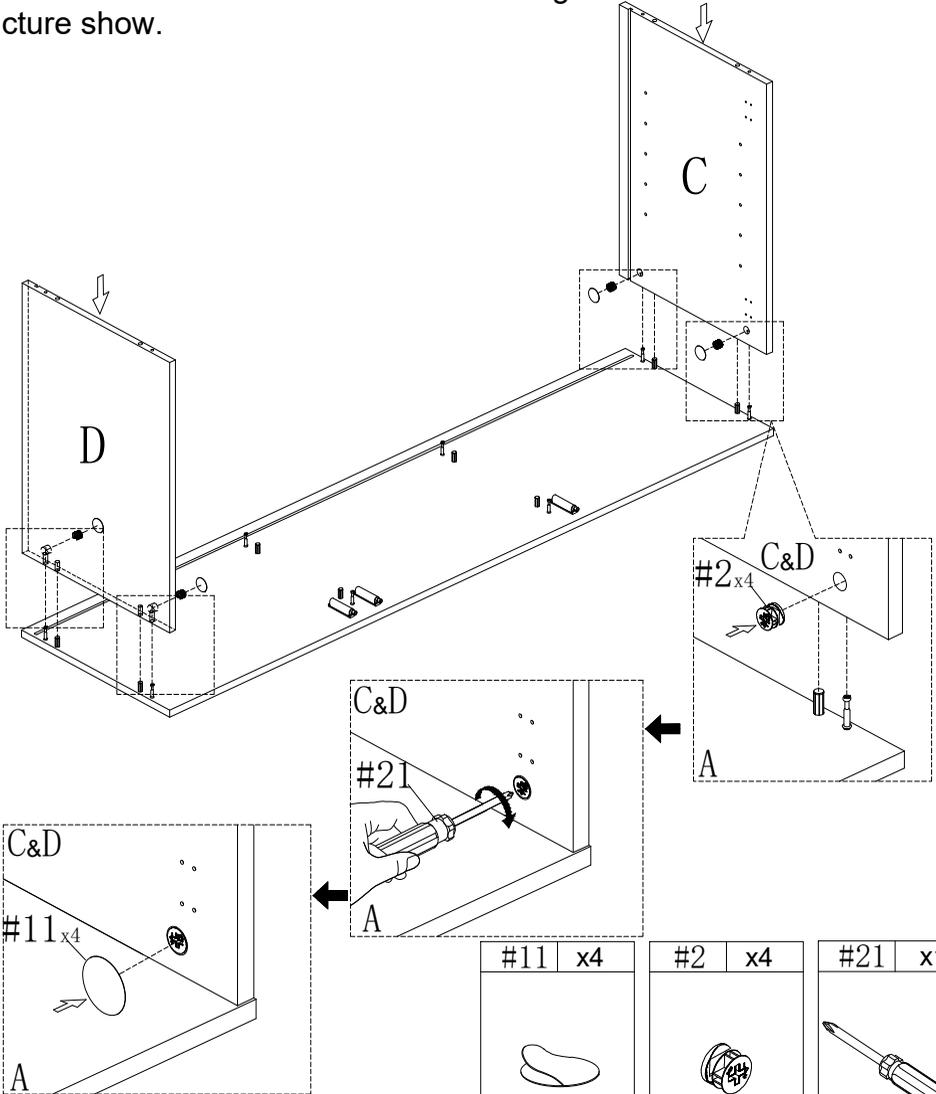


#11	x4	#2	x4	#21	x1
					
φ20		φ15*11mm			

# ASSEMBLY INSTRUCTIONS

## STEP-3



1. Connect the part A with part F&E. align the hole in the part F&E, insert the bolt #1 and wooden dowel #4 in part A into part F&E. insert cam bolt #2 into the corresponding hole of side panel F&E, and tighten the nuts #2 with a screwdriver #21. After installation, cover the screw holes with #11. Make sure the groove is in same side as picture show.

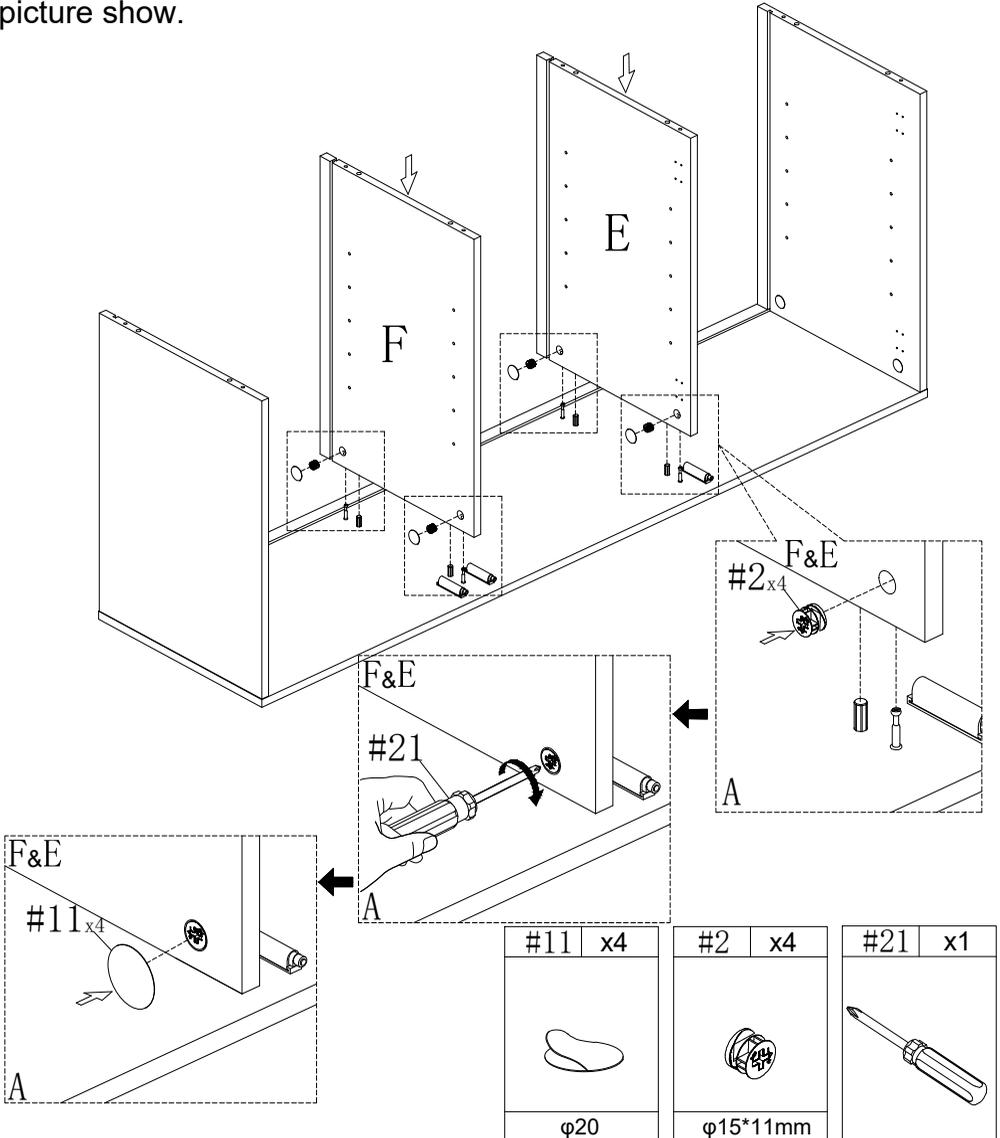

# ASSEMBLY INSTRUCTIONS

## STEP-4

1. slide in the part G,H into the groove in part D,F and E,F and C,E .  
make sure they are also in groove in part A.

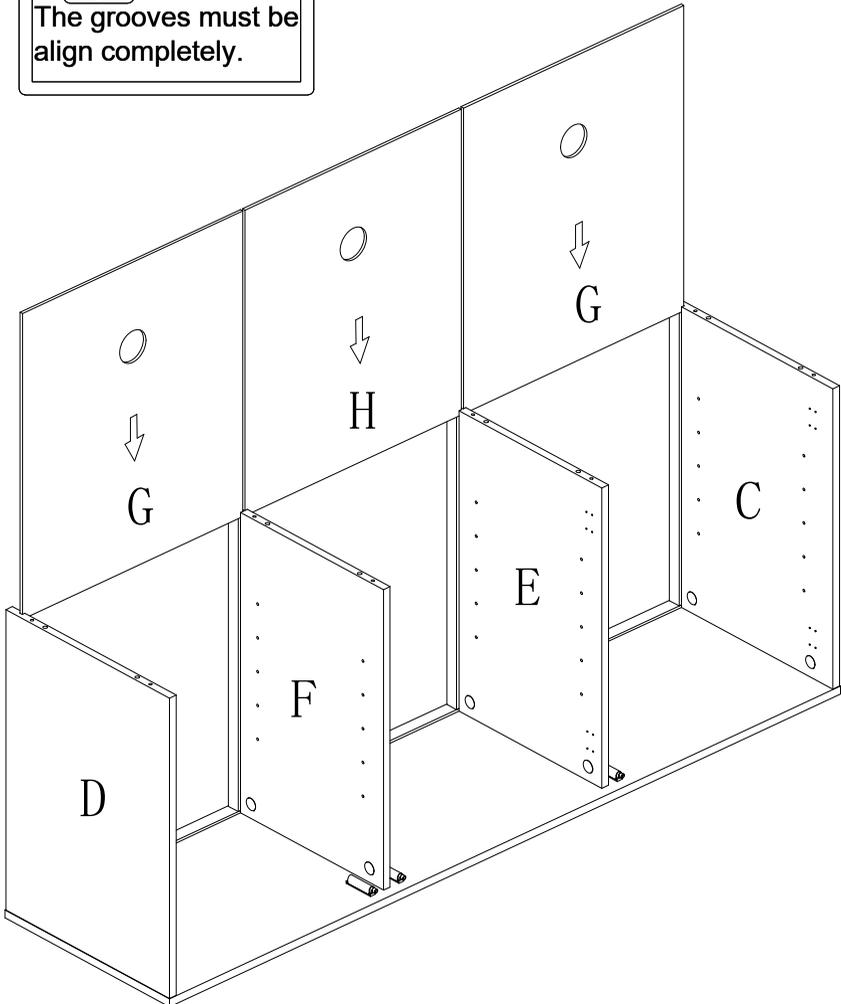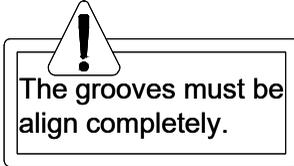


# ASSEMBLY INSTRUCTIONS

## STEP-5

1. Insert the wooden dowel #4 into the part C&D&E&F as the picture show.

2. Connect the part B the pre-assembled unit in step 4. Then align the holes in part B, Insert screw #3 and push it down so that it connects to parts C&D&E&F. Next, and tighten the screw #3 with an Allen key #20.

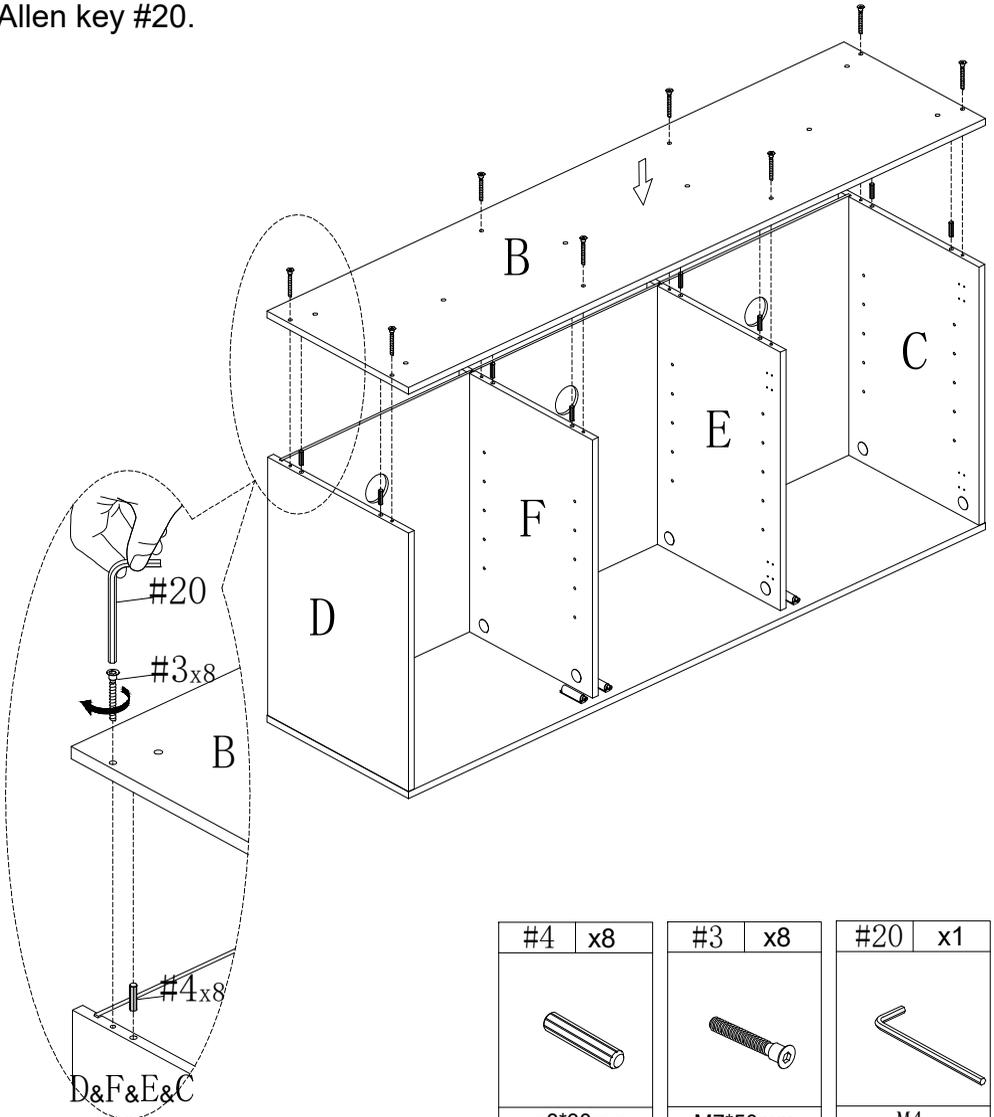

#4	x8
	
φ8*30mm	


#3	x8
	
M7*50mm	

#20	x1
	
M4	

# ASSEMBLY INSTRUCTIONS

## STEP-6


1.Align the holes of part K insert the bolt #8, Install the middle foot(K) to part J.Use bolt #7 to mount I and j together.and tighten the bolt #7 with an Allen key #20.

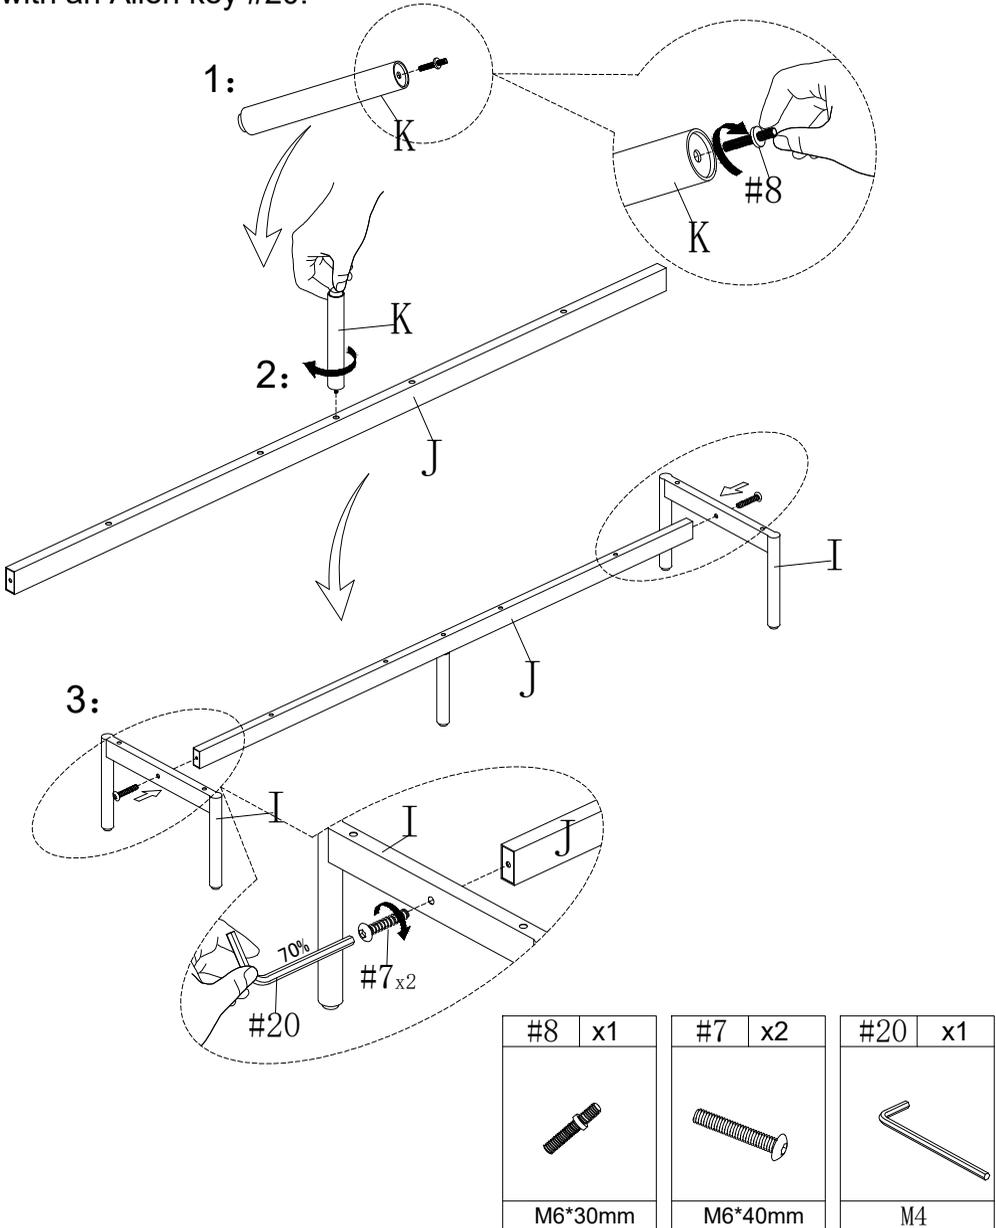


# ASSEMBLY INSTRUCTIONS

## STEP-7

1. connect the leg frame to the cabinet. Attach the leg frame to the pre-assembled unit in step 5 with a bolt #6 and tighten #6 with a allen key #20.

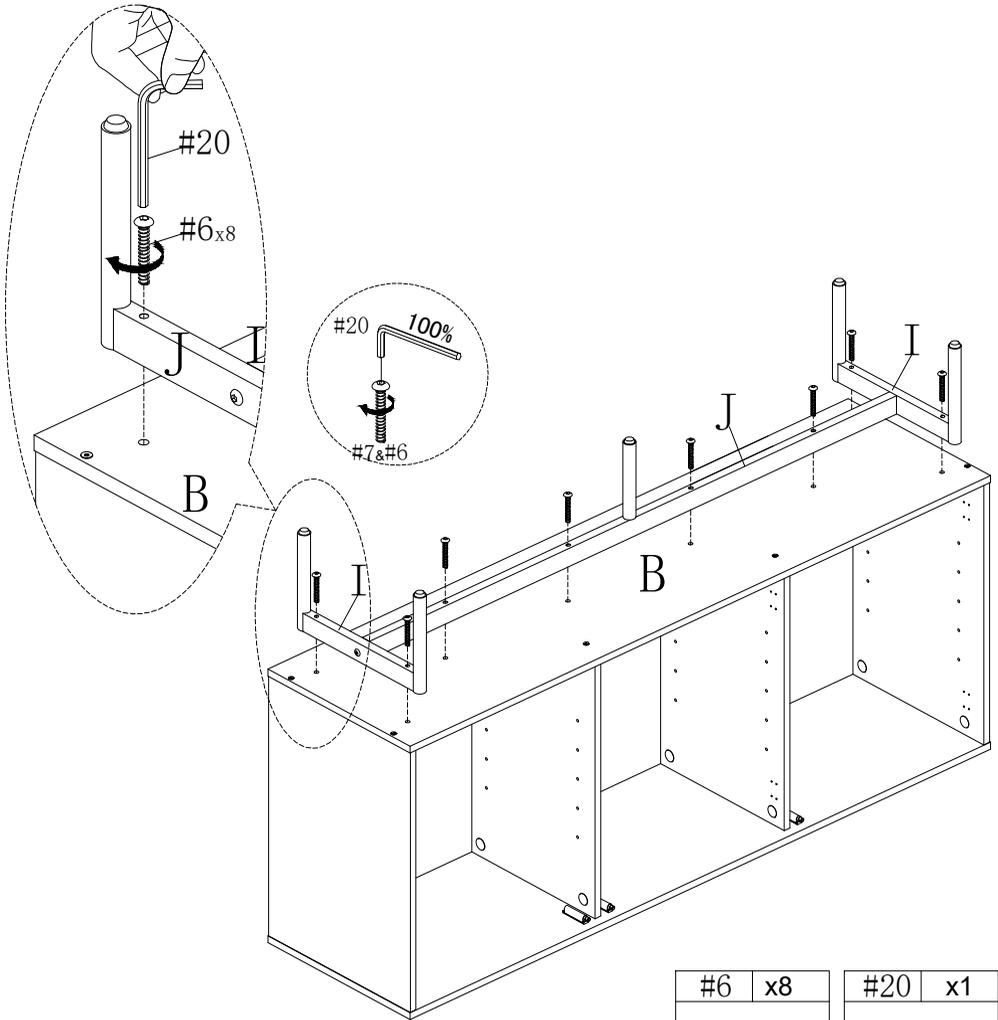

#6	x8
	
M6*50mm	





#20	x1
	
M4	

# ASSEMBLY INSTRUCTIONS

## STEP-8



**Attention:**  
Before the next step, adjust the feet of the locker to keep it level.

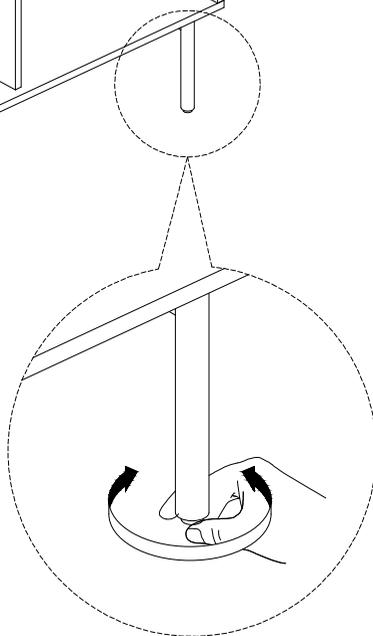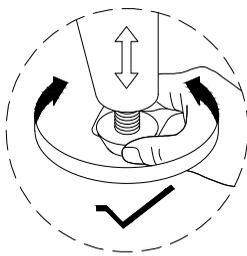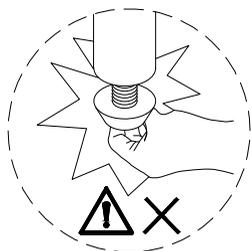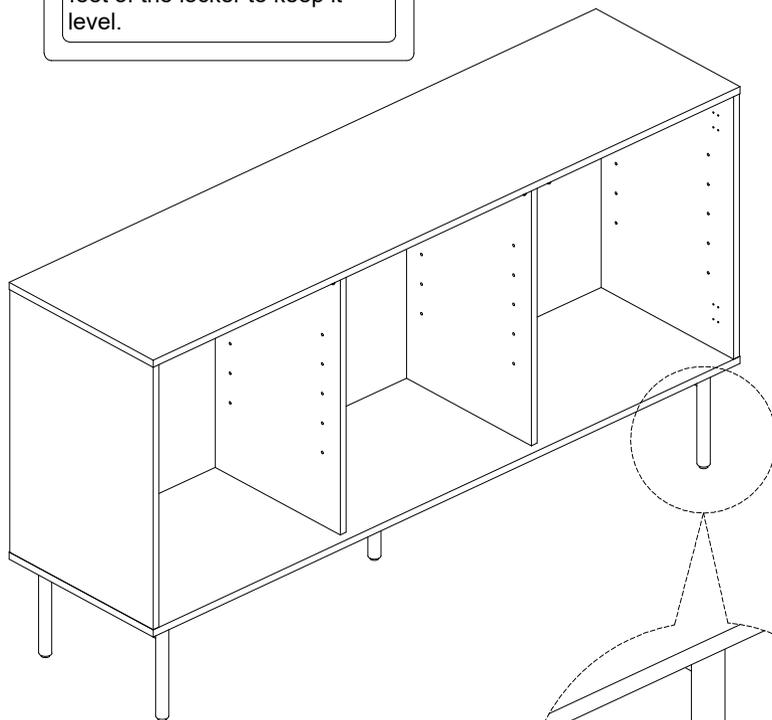


# ASSEMBLY INSTRUCTIONS

## STEP-9

1. Use screw #5 to attach the hinges #9 to door panel (N&O), tighten screws #5 with screwdriver #21.
2. Use screw #5 to attach the part #15 to door panel (N&O), tighten screws #5 with screwdriver #21.




When installing hinge, please pay attention to distinguish the category of hinge!!!!

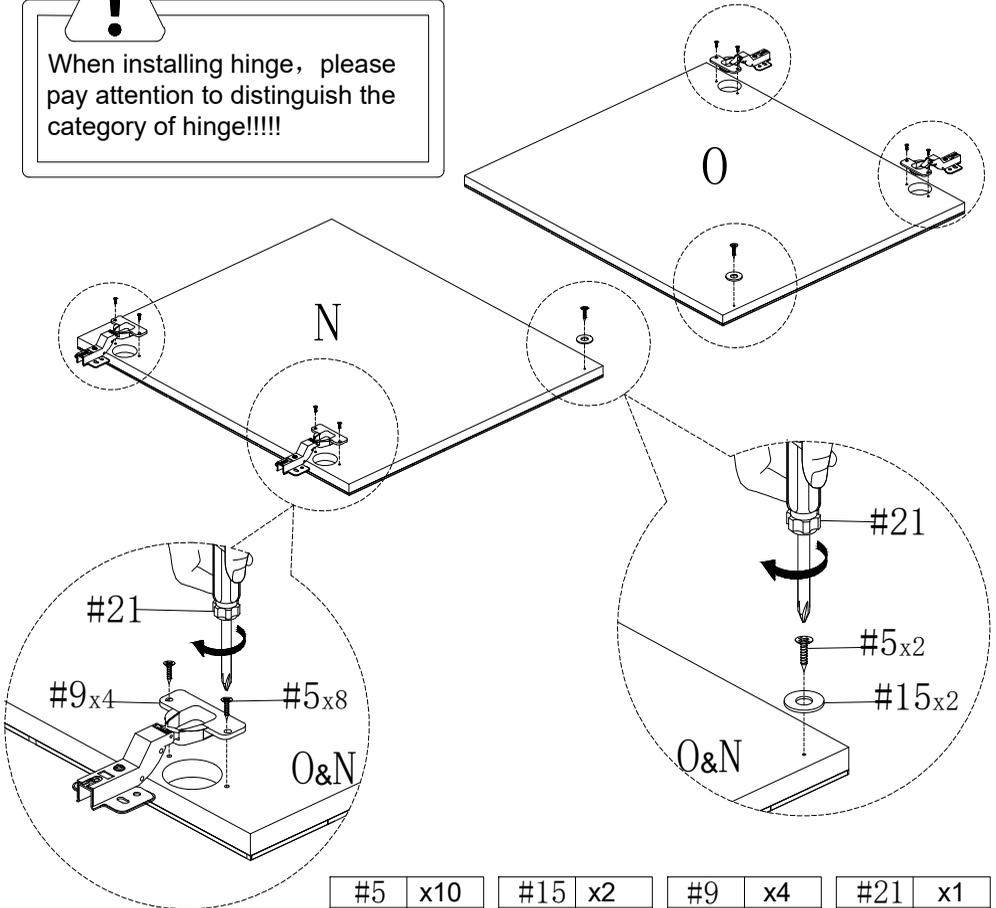

#5	x10
	
M3.5*14mm	

#15	x2
	


#9	x4
	

#21	x1
	

# ASSEMBLY INSTRUCTIONS

## STEP-10


1. Use screw #5 to attach left door (N) and right door (O) to pre-assemble unit at step 8 ,tighten screw #5 with screwdriver #21 .

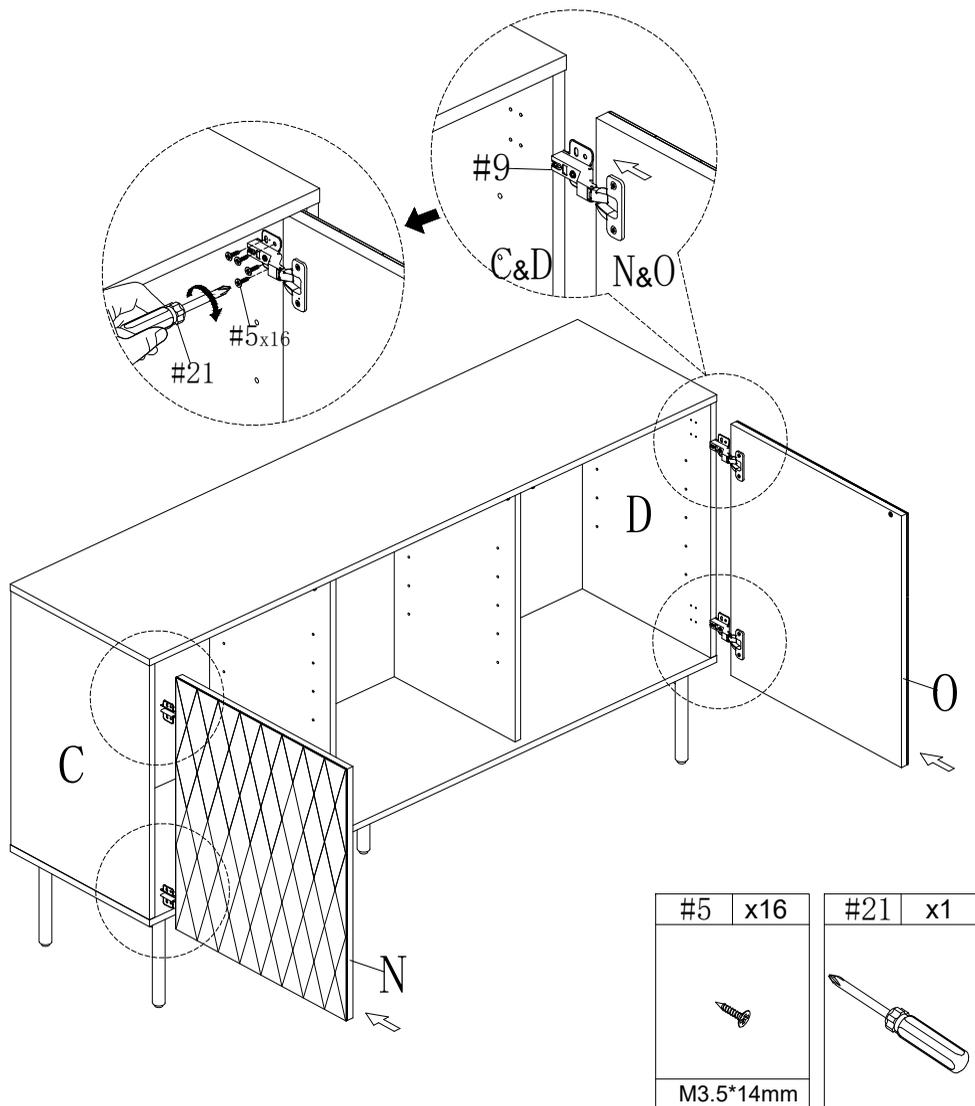

# ASSEMBLY INSTRUCTIONS


## STEP-11


1. Use screw #5 to attach the hinges #10 to door panel (N), tighten screws #5 with screwdriver #21.
2. Use screw #5 to attach the part #15 to door panel (N), tighten screws #5 with screwdriver #21.

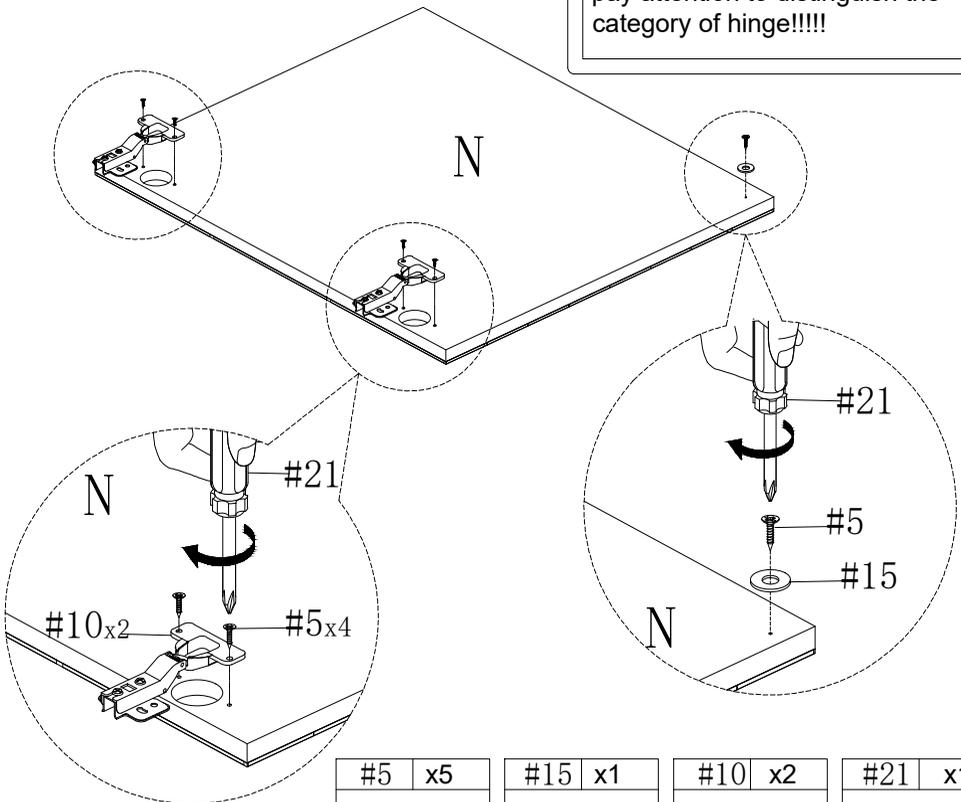

#5	x5
	
M3.5*14mm	

#15	x1
	


#10	x2
	


#21	x1
	

# ASSEMBLY INSTRUCTIONS

## STEP-12


1. Use screw #5 to attach middle door (N) to pre-assemble unit at step 10, tighten screw #5 with screwdriver #21.

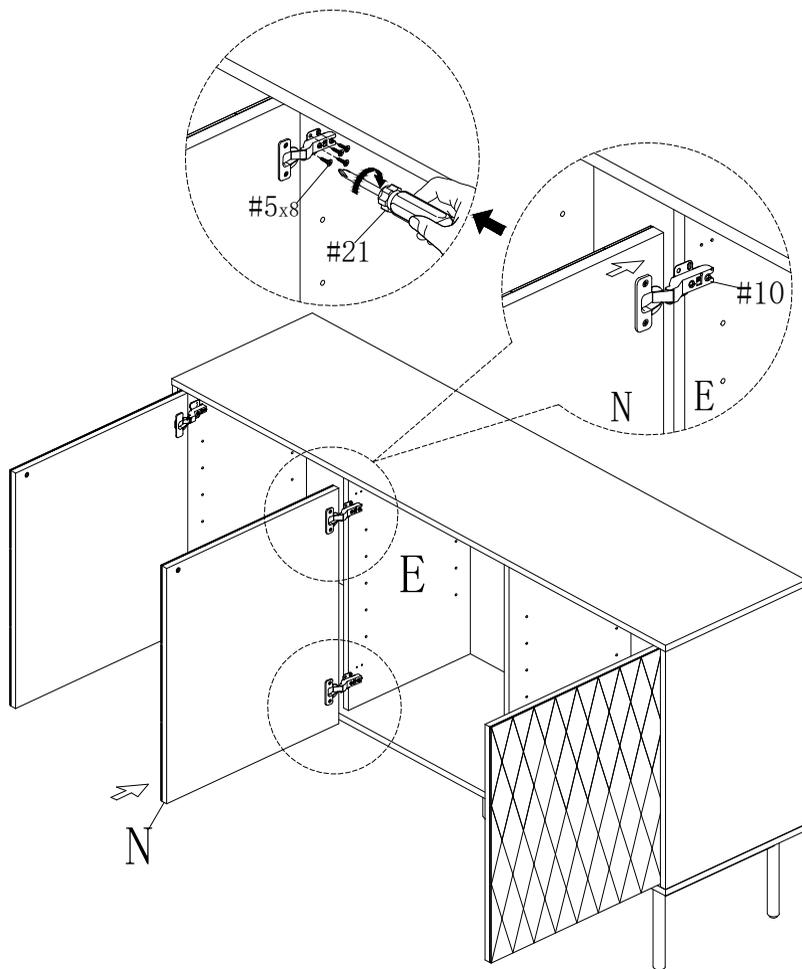


#5	x8	#21	x1
			
M3.5*14mm			

# ASSEMBLY INSTRUCTIONS


Concealed hinges are three-way adjustable:

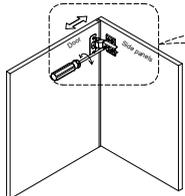


Horizontal  
by screw adjustment!

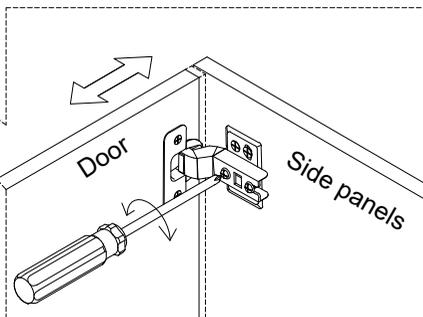


Concealed hinges are three-way adjustable:

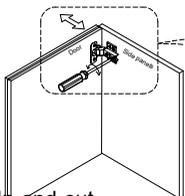


In-and-out  
by loosening the hinge arm  
mounting screw or via cam  
adjustment!

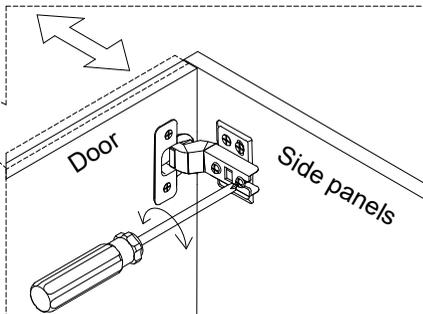

Concealed hinges are three-way adjustable:

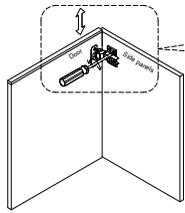

Vertical via slots in  
the mounting plate  
or via cam adjustment!

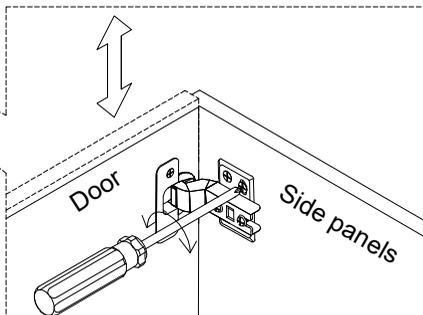

## Hinge adjustment method





Video for door adjustment

# ASSEMBLY INSTRUCTIONS

## STEP-13


1. Insert shelf pin #13 into pre-assemble unit at step 12. attach adjustable shelf L&M to pin #13.

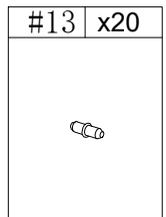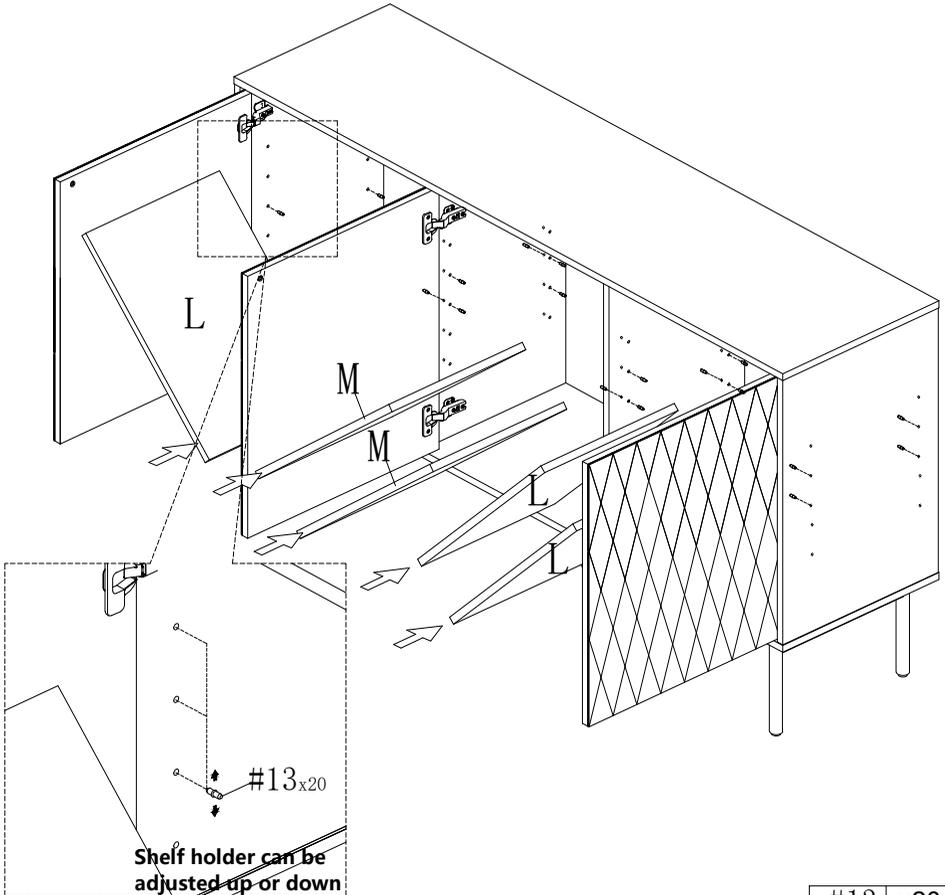


# ASSEMBLY INSTRUCTIONS

## STEP-14

1. Insert hardware #12 into part G&H as shown, screw in screw #5 using screwdriver #21 and tighten fully.

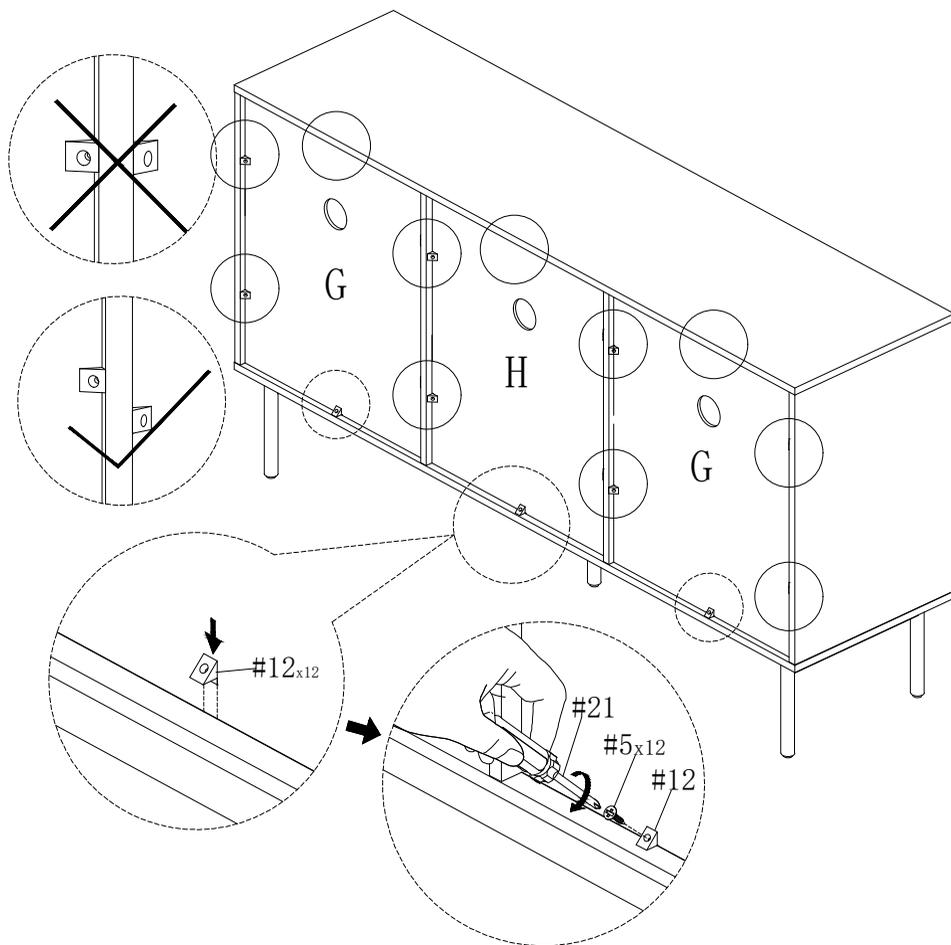


#5	x18	#12	x18	#21	x1
					
M3.5*14mm					


# ASSEMBLY INSTRUCTIONS


## STEP-15

1. Use screw #5 to attach part #16 to pre-assembly unit at step 14, tighten screws with screwdriver #21.

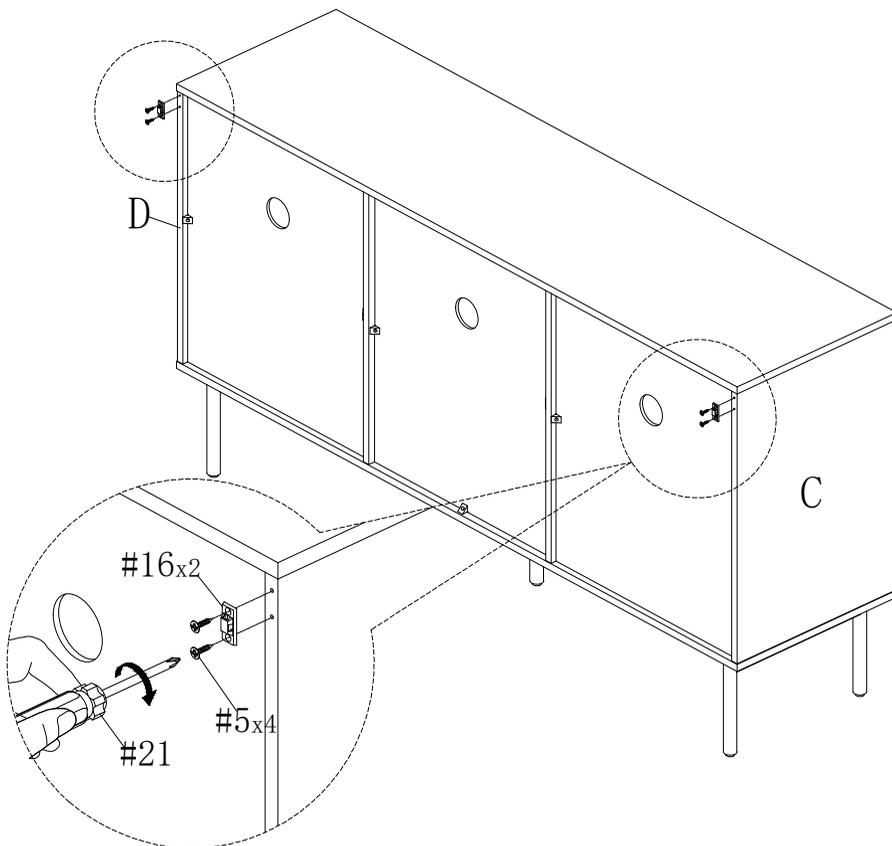


#5	x4
	
M3.5*14mm	

#16	x2
	


#21	x1
	

# ASSEMBLY INSTRUCTIONS

## STEP-16

#17 x4	#19 x4	#16 x2	#21 x1
			
φ8*30mm	M4*35mm		

1. Install the anti-collapse device.
2. Mark the position on the wall, that corresponds to the location of part #16 on the of panel (C&D); Drill and insert the expandable screw #17 by hammer.
3. Assemble the part #16 to the wall. Align the hole in the part #16 with the expandable screw #17, use screw #19 to attach it and tighten by screwdriver #21.

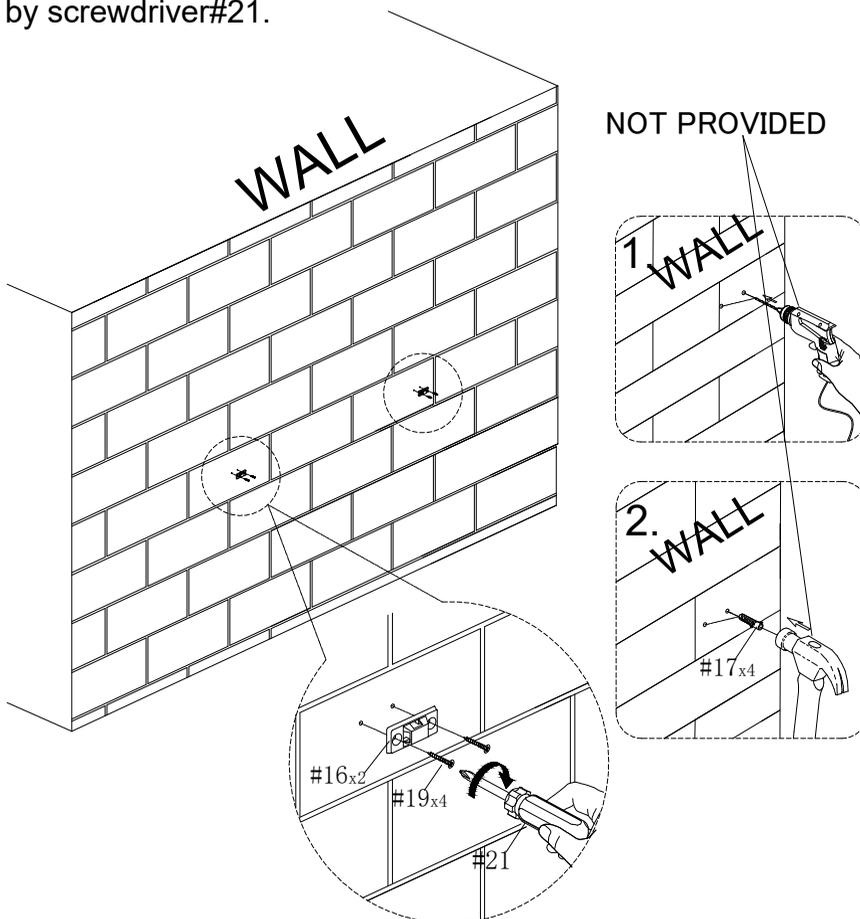


# ASSEMBLY INSTRUCTIONS

## STEP-17

#18 x2



1. Let the plastic belt #18 pass through the both part #16 and pull tightly.

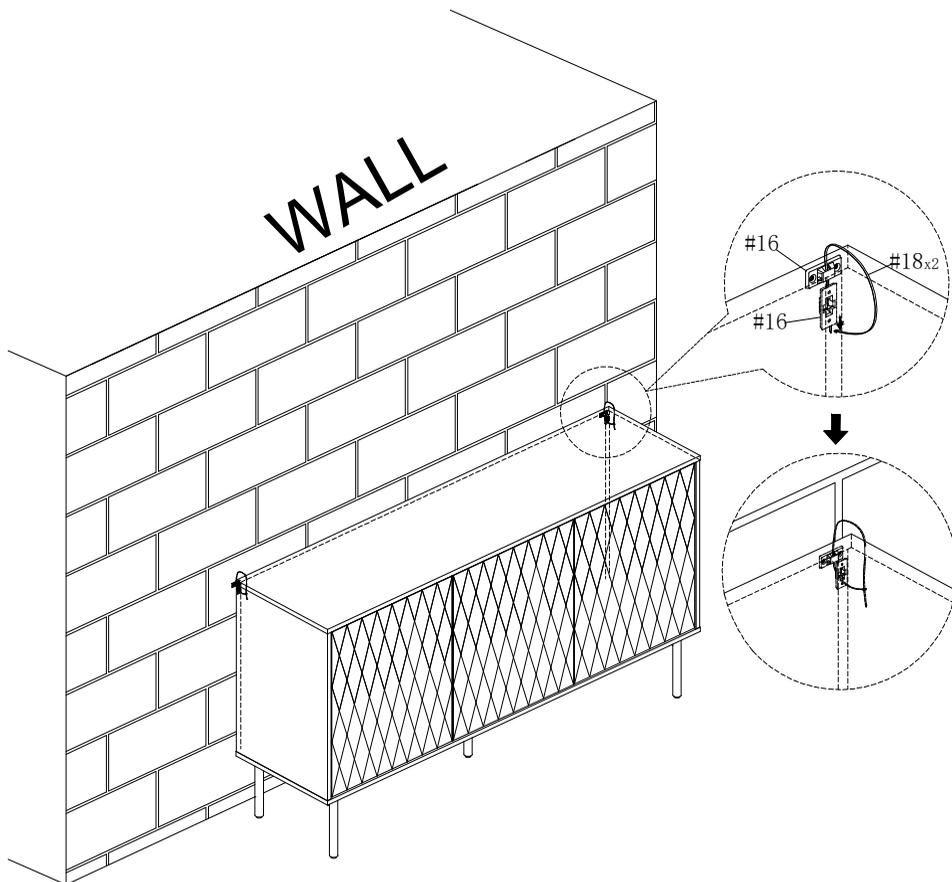

# WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty  
With assembly? Missing parts?  
Please send email with your order No to  
**[customerservice@hulalahome.com](mailto:customerservice@hulalahome.com)**  
For return, please check the return policy with  
the retailer or market place you bought from.

Appreciate your purchasing from us.  
Pop up your life by our furniture piece!