

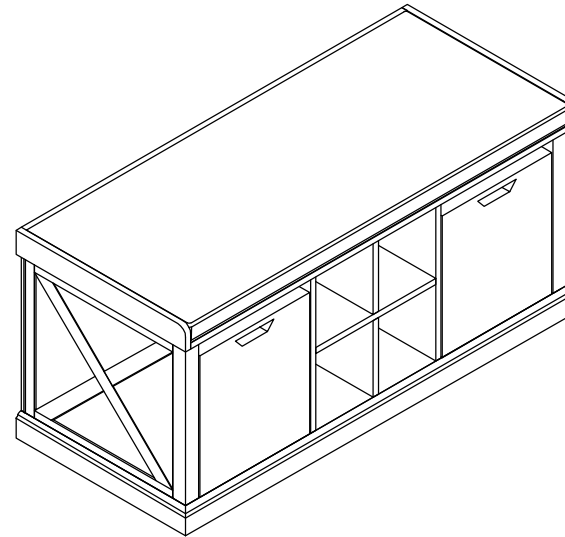



# ASSEMBLY INSTRUCTION

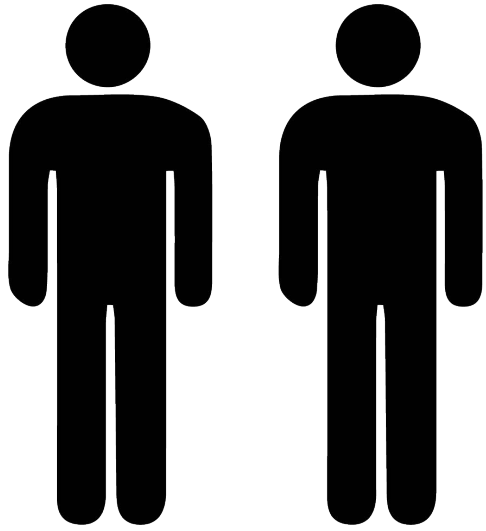


**M4**  
MADE4HOME

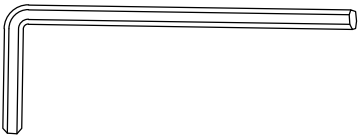


① x1

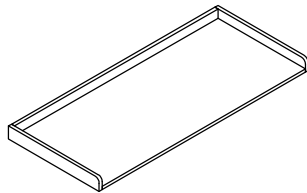


① A x1

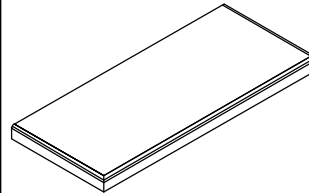


① B x1

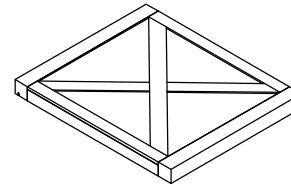


① C x1

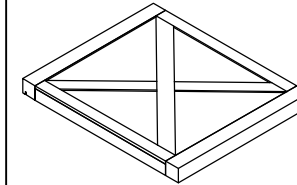


① D x1

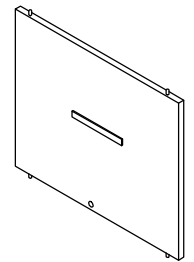


① E x2

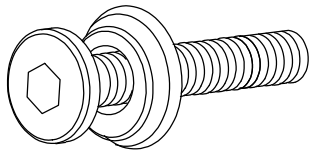


② x10  
(Bolt 1/4" x35mm)

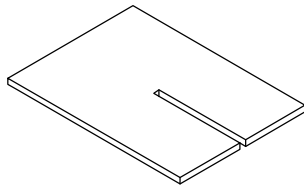


① F x1

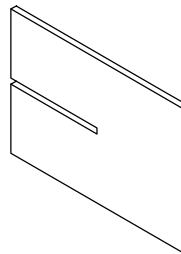


① G x1

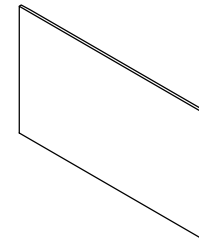

① H x1

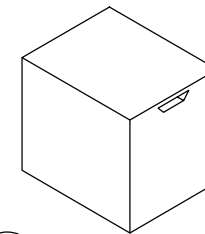


① I x2

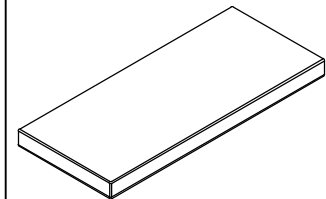


① J x1

# ASSEMBLY INSTRUCTION


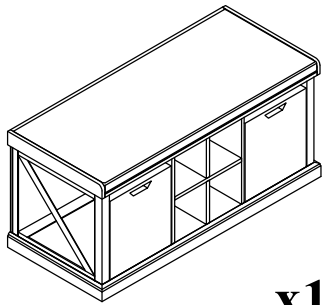


x1


## Step 1

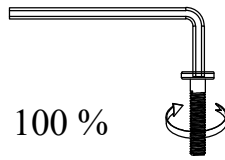

## Step 2

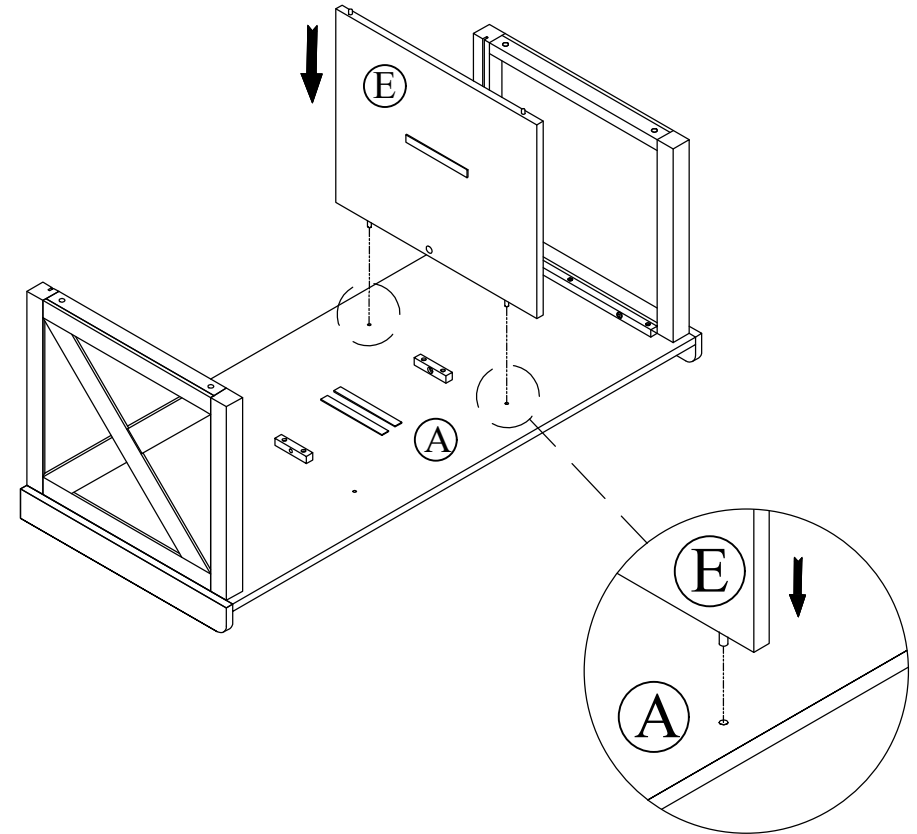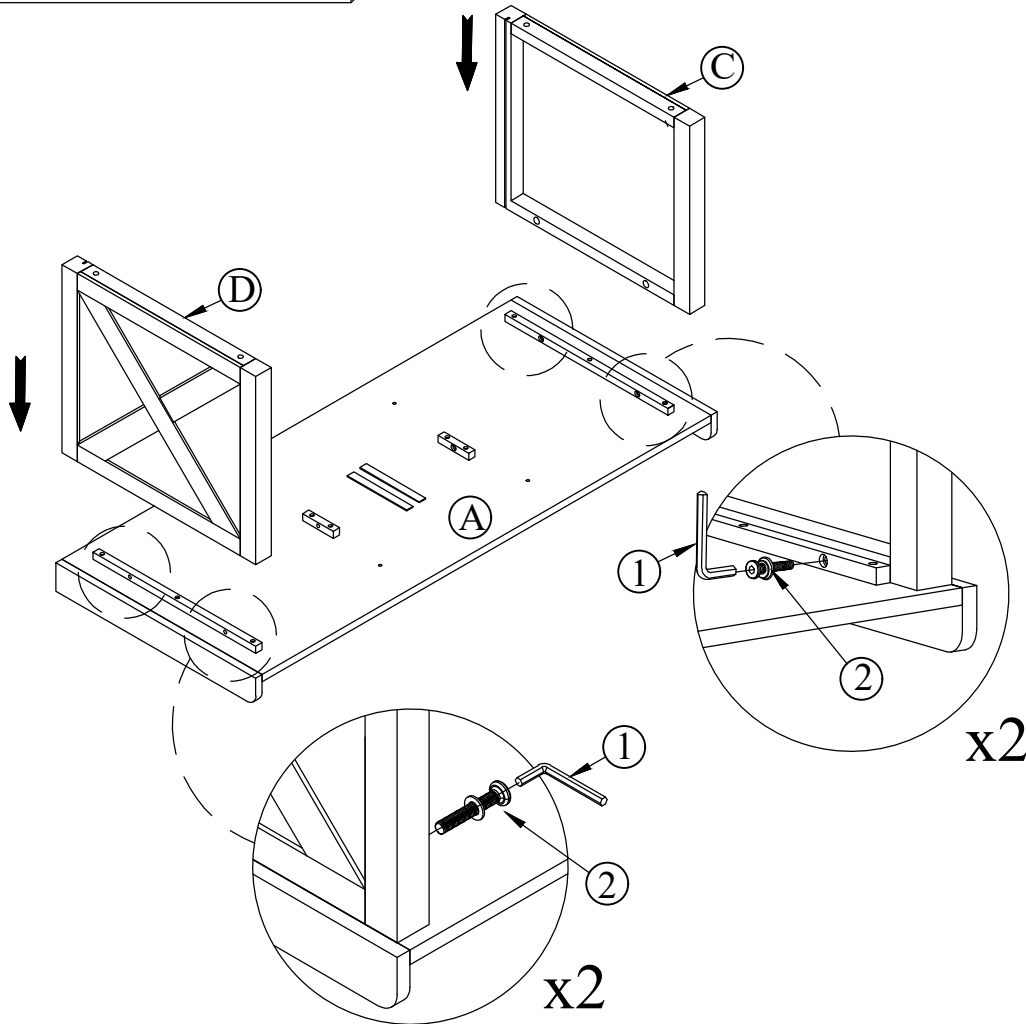


# ASSEMBLY INSTRUCTION

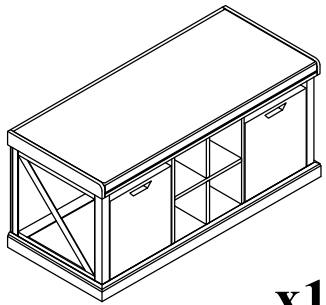


x1

## Step 3

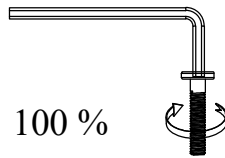


100 %


## Step 4

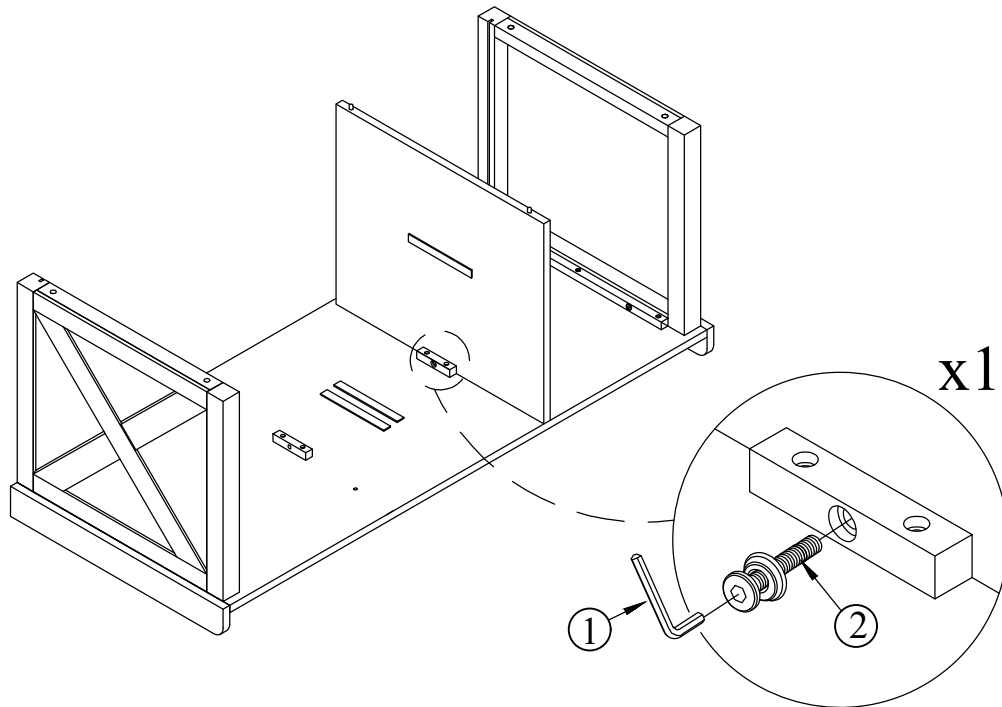

x1

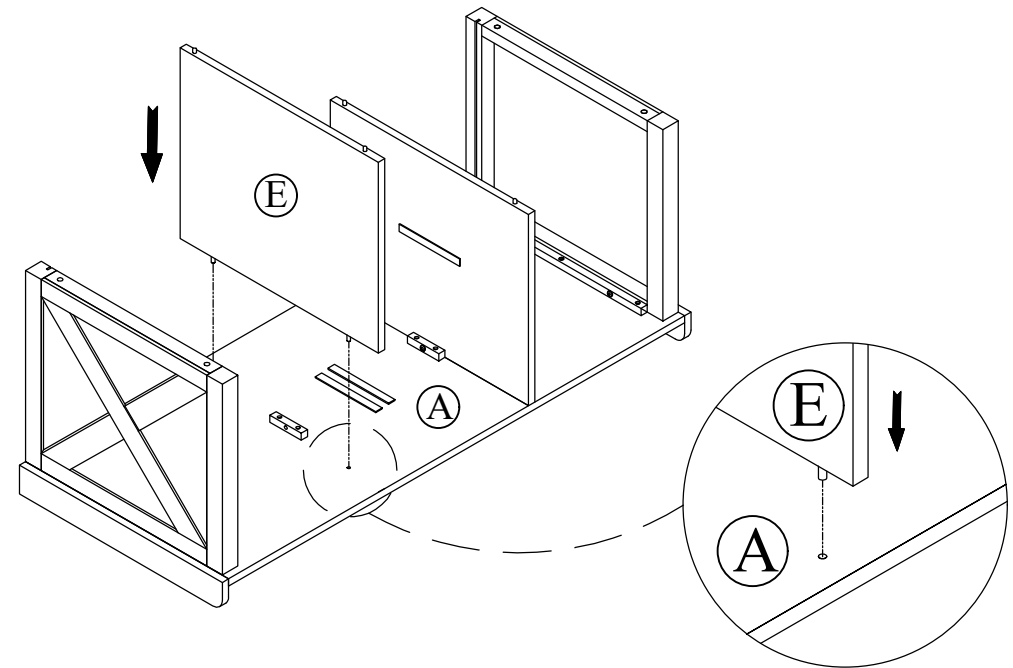


# ASSEMBLY INSTRUCTION

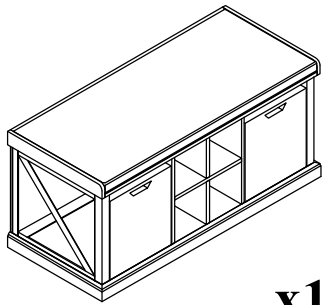



x1

## Step 5

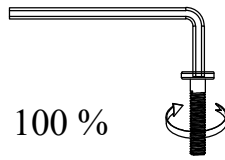


100 %

## Step 6

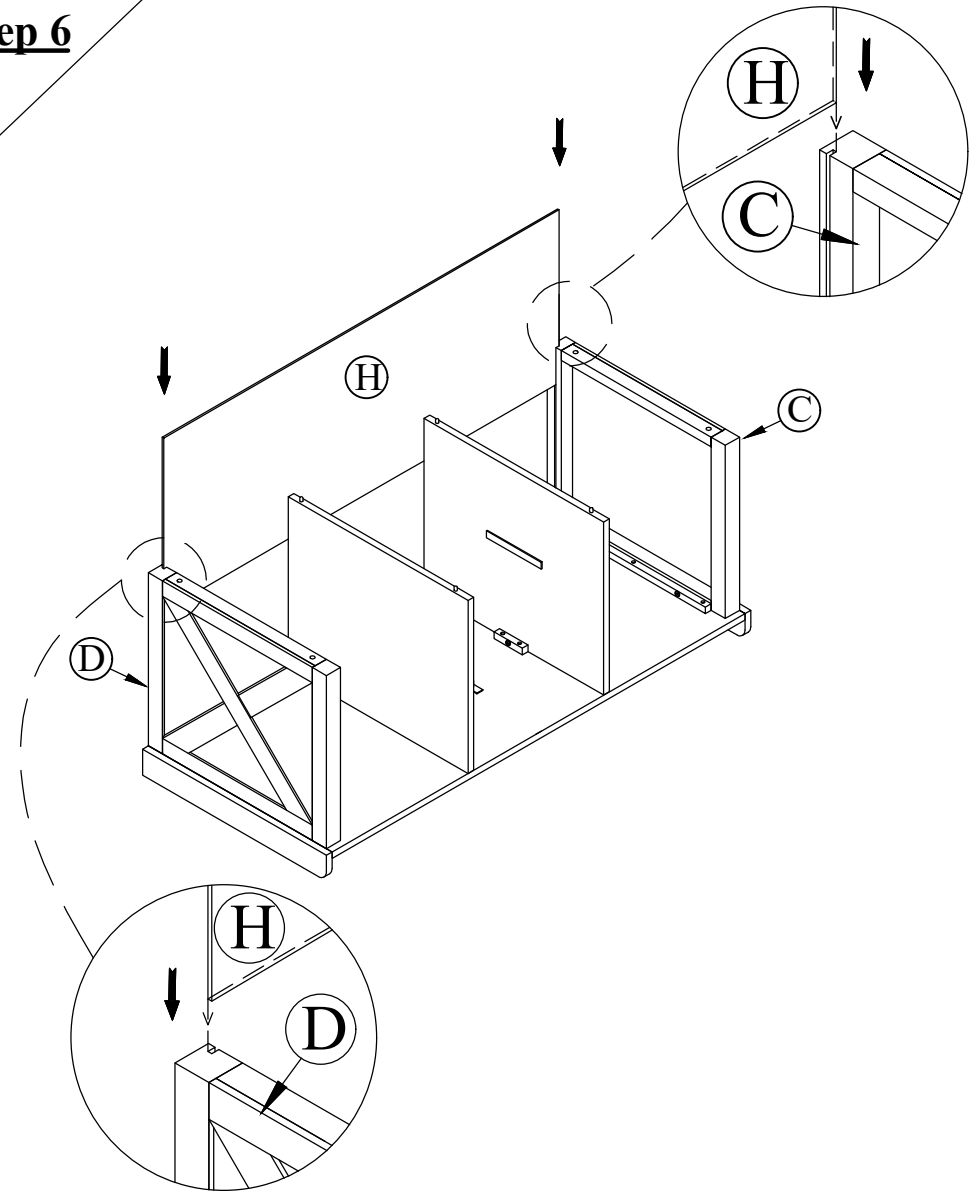
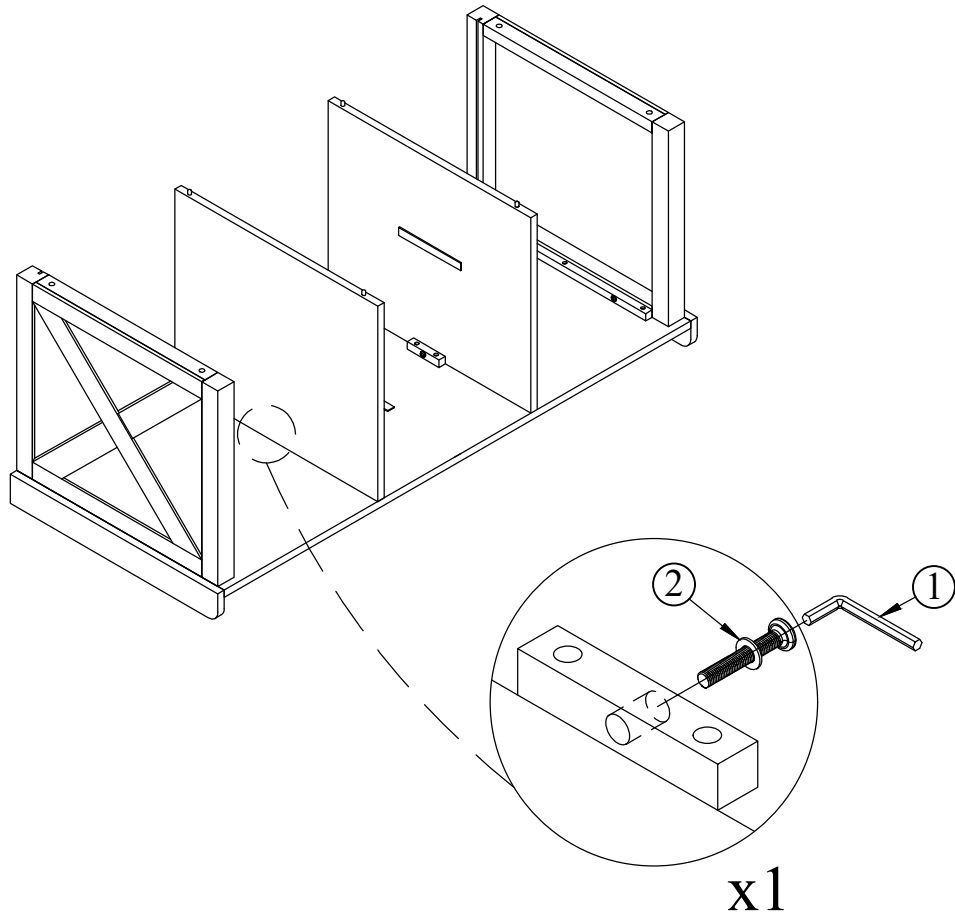


# ASSEMBLY INSTRUCTION

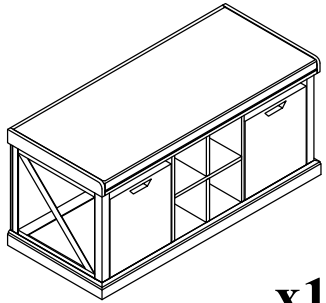


x1


## Step 7

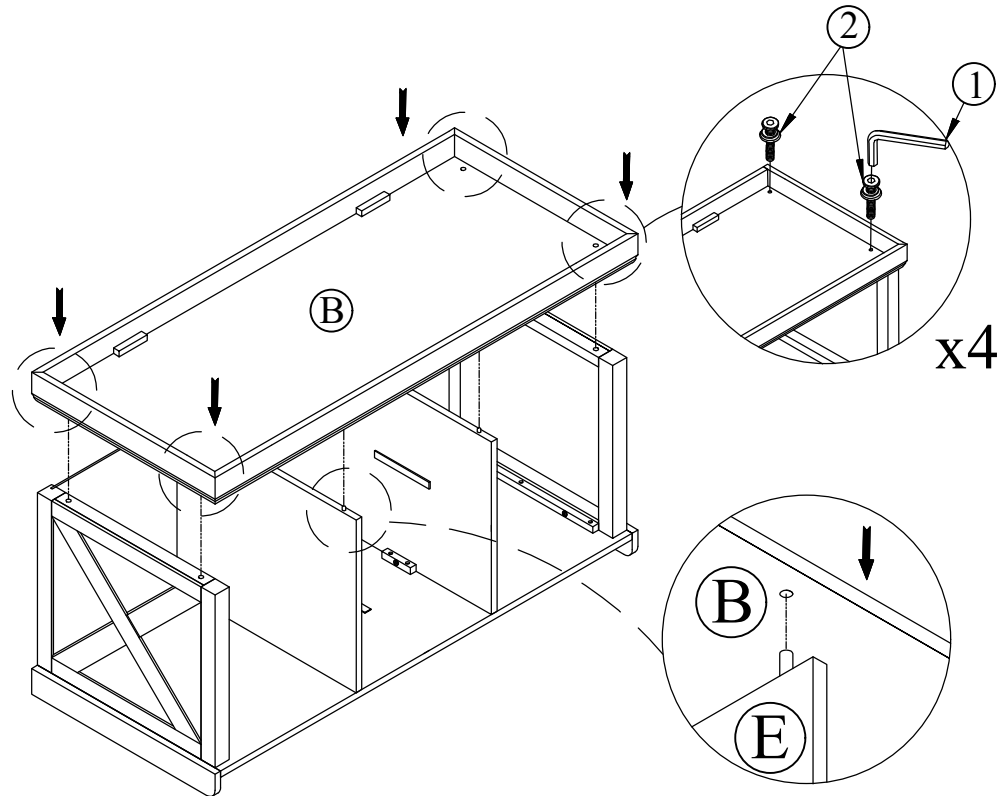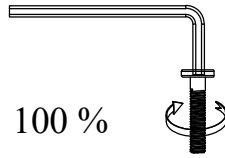

## Step 8

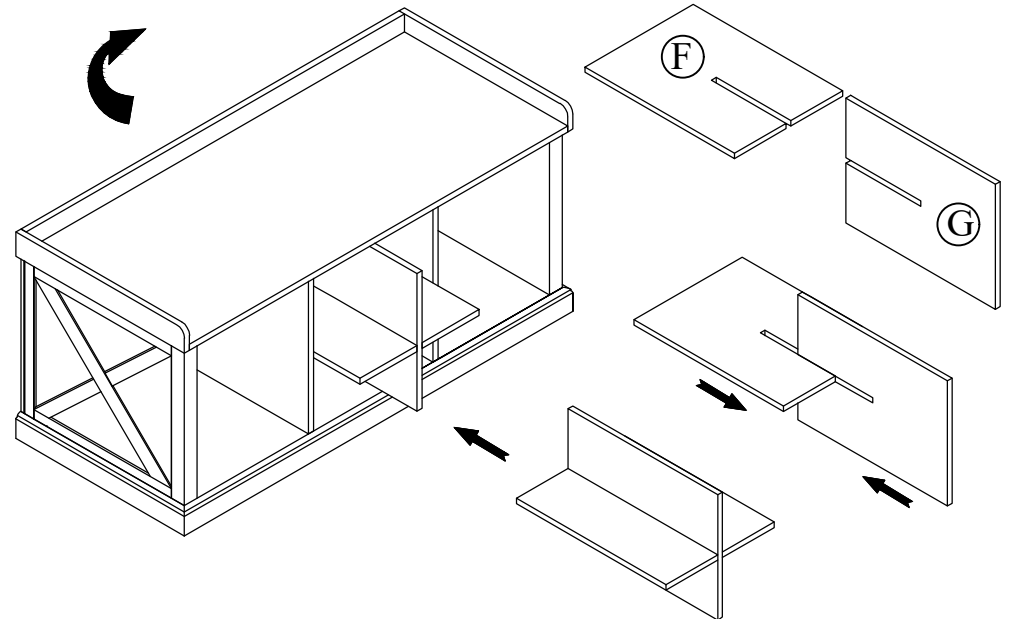


# ASSEMBLY INSTRUCTION

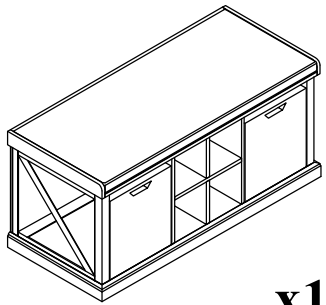

x1

Step 9

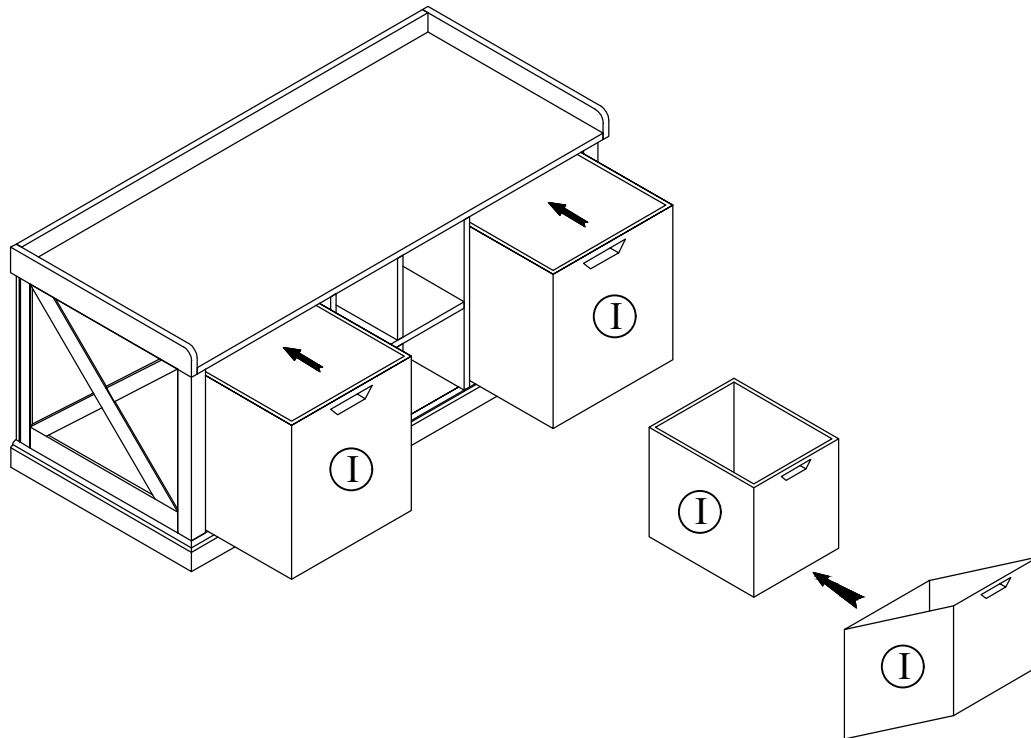

Step 10

