

# *Installation*

## Step 1



Ensure wall surface is clean and dry prior to installation. May require roughening of wall surface by sandpaper for better grip.

## Step 2




Pre-mark wall according to product dimension to ensure straight and level installation

## Step 3



Pre-apply spots of glue or bonding adhesive evenly for better strength.

## Step 4

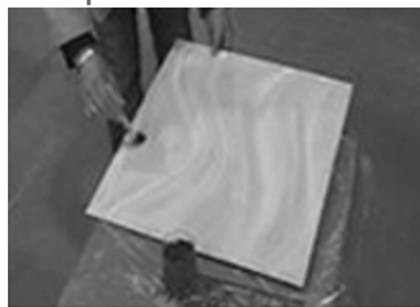


Apply max bond construction Adhesive evenly on back surface.

## Step 5



Align pieces according to pre-marked lines and ensure pieces are tightly butt next to each other.

## Step 6

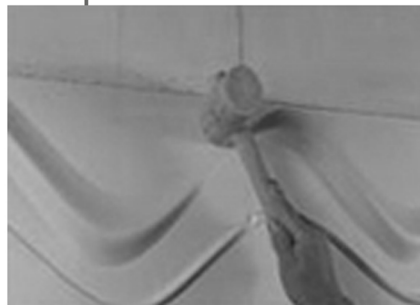

Secure the panels by applying pressure on flat surfaces of panel. Allow 24hrs interval before painting if required.

For Reference Only!