




Appy a bid of silicone and hang the cabinet (D) on the brackets.

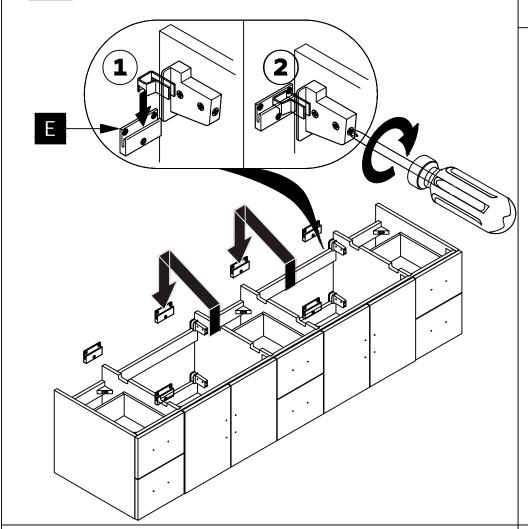


Put a bead of silicone on the top of the cabinte(G) then place sink (H) on the top of it.

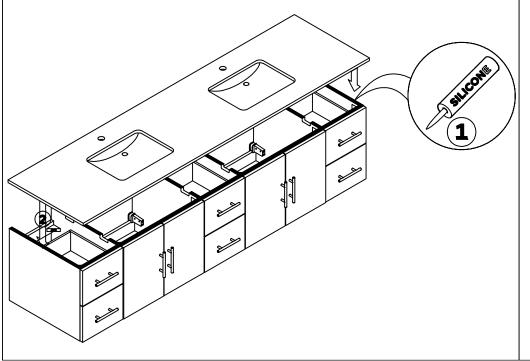



Attach the wall brackets (E) to the wall with the screws (F).

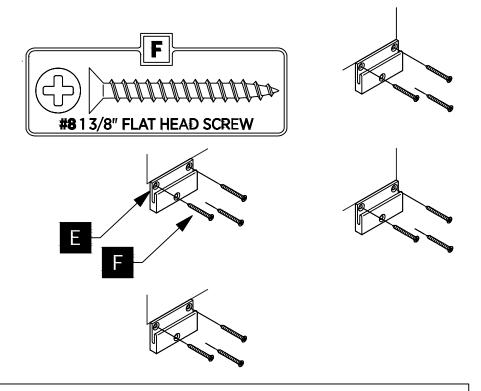


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

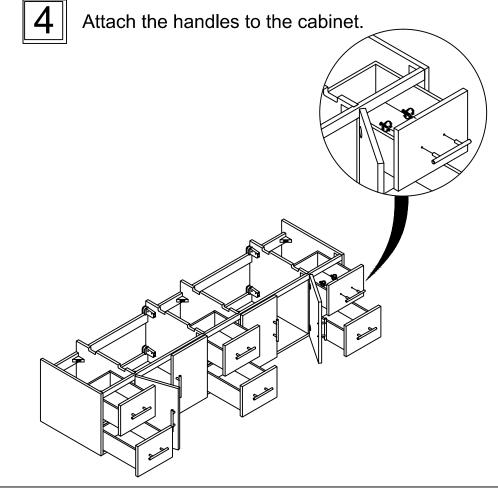


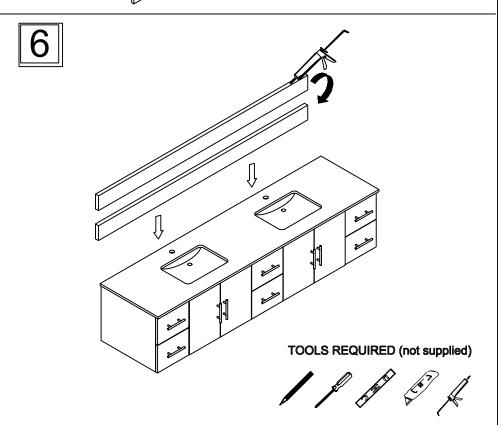

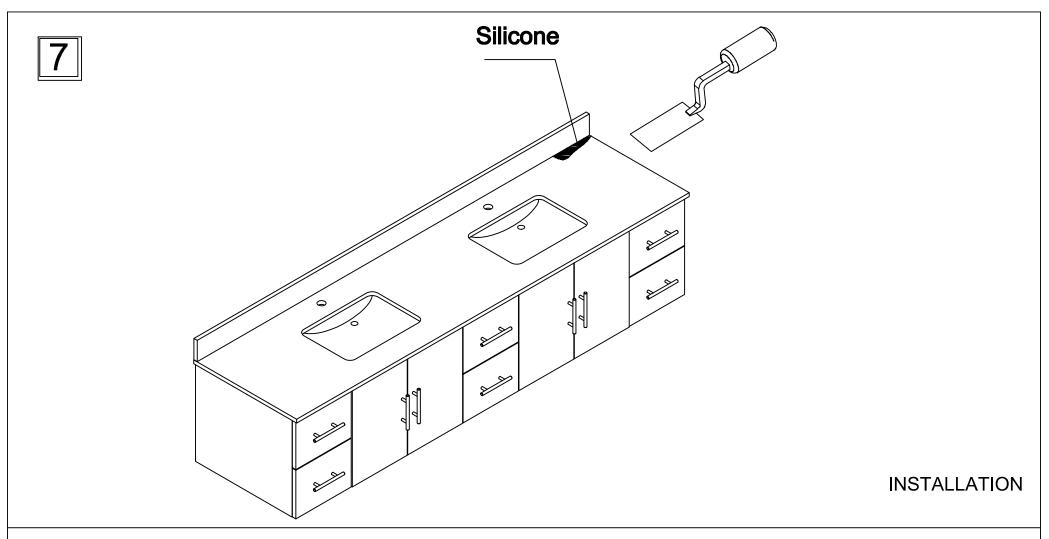

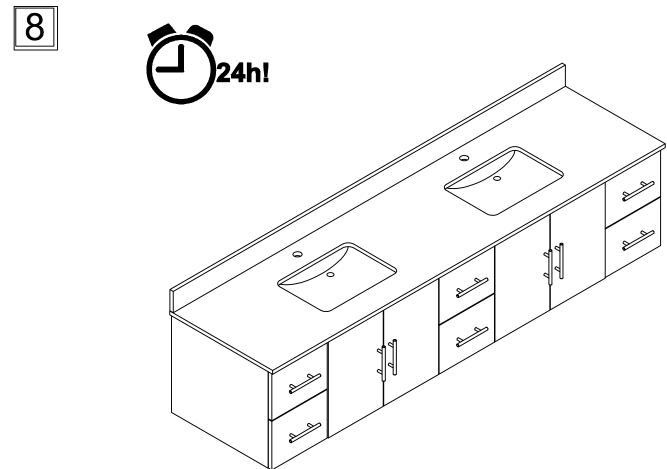



INSTALLATION

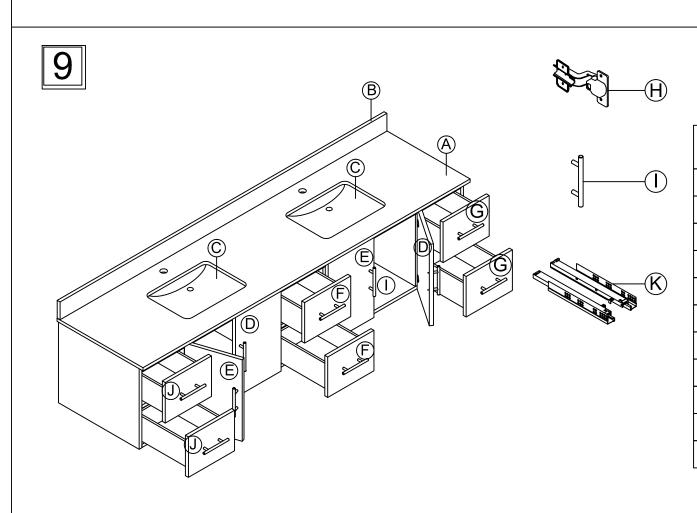



DESCRIOTION	QUANTITY
Countertop	1
Backsplash	1
Basin	2
Door (left)	2
Door (right)	2
Drawer (middle)	2
Drawer (right)	2
Drawer (left)	2
Hinge (door)	8
handle	10
Drawer glides	6
	Countertop  Backsplash  Basin  Door (left)  Door (right)  Drawer (middle)  Drawer (right)  Drawer (left)  Hinge (door)  handle


PART LIST

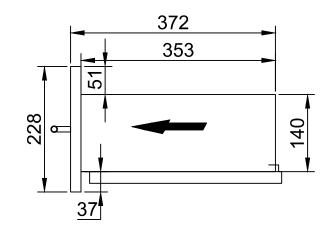


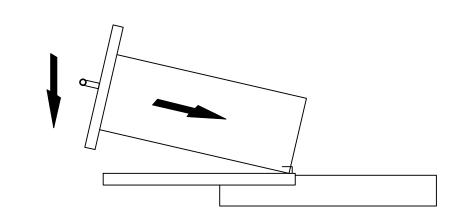


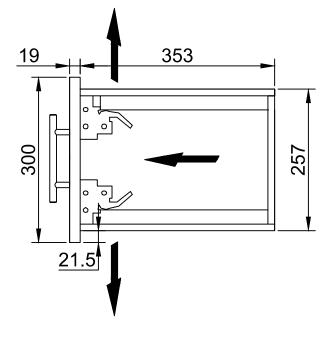

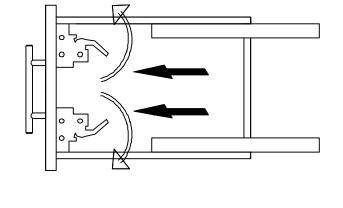

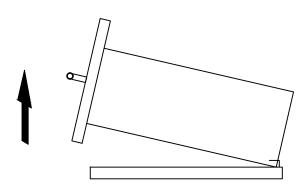

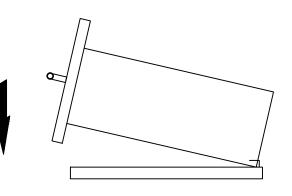

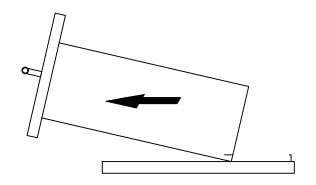

Δ

